PROFESSIONAL DIGITAL TWO-WAY RADIO **MOTOTRBOTM XPRTM 5550 / XPR 5580 COLOR DISPLAY MOBILE** USER GUIDE





Declaration of Conformity14
Important Safety Information16
Software Version17
Computer Software Copyrights18
Getting Started
Preparing Your Radio for Use21

Fowening Op		∠ I
Adjusting the	Volume	21

Identifying Radio Controls......22

Radio Controls	.22
Using the Volume/Channel Knob	22

Non-Connect Plus Operations.....23

Additional Radio Controls in Non-Connect Plus

Mode24
Push-To-Talk (PTT) Button24
Programmable Buttons24
Assignable Radio Functions25
Assignable Settings or Utility
Functions27
Accessing the Programmed
Functions28
Identifying Status Indicators28
Display Icons28
Call Icons31
Advanced Menu Icons32
Mini Notice Icons32

Sent Item Icons	32
Bluetooth Device Icons	33
Job Tickets Icons	33
LED Indicator	33
Audio Tones	35
Indicator Tones	35
Switching Between Conventional	
Analog and Digital Mode	35
IP Site Connect	36
Capacity Plus	37
Linked Capacity Plus	37

Making and Receiving Calls in Non-Connect Plus

Mode	39
Selecting a Zone	39
Selecting a Channel	39
Receiving and Responding to a	
Radio Call	40
Receiving and Responding	
to a Group Call	40
Receiving and Responding	
to a Private Call 🖲	41
Receiving an All Call	41

Receiving and Responding	
to a Selective Call 🖲	42
Receiving and Responding	
to a Phone Call 🖲	42
Making a Radio Call	44
Making a Group Call	45
Making a Private Call 🖲	45
Making an All Call	47
Making a Selective Call 🗐	47
Making a Phone Call	48
Making a Private Call with a	
One Touch Call Button	49
Making a Group, Private or	
All Call with the	
Programmable Number	
Key	
Stopping a Radio Call	
Talkaround	51

Advanced Features in Non-

Connect Plus Mode......53

Radio Check	53
Sending a Radio Check	53
Remote Monitor	55

Initiating Remote Monitor 55 Stopping Remote Monitor 56
Scan Lists
Viewing an Entry in the
Scan List57
Editing the Scan List 57
Scan
Starting and Stopping Scan 59 Responding to a
Transmission During a
Scan60
Deleting a Nuisance Channel60
Restoring a Nuisance
Channel
Vote Scan (9)
Contact Settings61 Making a Group Call from
Contacts
Making a Private Call from
Contacts
Assigning an Entry to a
Programmable Number
Key 🖲63
Removing the Association
between Entry and

Programmable Number	
Key 🖲	64
Adding a New Contact	
Setting a Default Contact @	66
Call Indicator Settings	
Activating and Deactivating	
Call Ringers for Call Alert	
<u>@</u>	66
Activating and Deactivating	
Call Ringers for Private	
Calls 🚇	67
Activating and Deactivating	
Call Ringers for Selective	
Call 🞯	68
Activating and Deactivating	
Call Ringers for Text	
Message	. 68
Activating and Deactivating	
Call Ringers for	
Telemetry Status with	
Text	
Assigning Ring Styles	. 69
Escalating Alarm Tone	70
Volume	
Call Log Features	
Viewing Recent Calls	. 70

English

Deleting a Call from a Call
List71
Viewing Details from a Call
List71
Call Alert Operation72
Receiving and Responding
to a Call Alert72
Making a Call Alert from the
Contact List72
Making a Call Alert with the
One Touch Access
Button73
Emergency Operation73
Receiving an Emergency
Alarm74
Responding to an
Emergency Alarm74
Sending an Emergency
Alarm75
Sending an Emergency
Alarm with Call76
Sending an Emergency
Alarm with Voice to
Follow 🖲77
Reinitiating an Emergency
Mode78

Exiting Emergency Mode	
After Sending the	
Emergency Alarm	79
Analog Status Update 6	
Sending Status Update to	
Predefined Contact	79
Text Message Features	80
Sending a Quick Text	
Message	80
Sending a Quick Text	
Message with the One	
Touch Access Button	81
Accessing the Drafts Folder	81
Managing Fail-to-Send Text	
Messages	82
Managing Sent Text	
Messages	83
Receiving a Text Message	87
Managing Received Text	
Messages	88
Job Tickets	91
Accessing the Job Ticket	
Folder	92
Logging In and Out of the	
Remote Server	93

4

Creating and Sending a Job
Ticket 93
Responding to the Job Ticket94
Deleting a Job Ticket95
Privacy 🖲96
Multi-Site Controls
Starting an Automatic Site
Search97
Stopping an Automatic Site
Search98
Starting a Manual Site
Search99
Security99
Radio Disable100
Radio Enable101
Lone Worker 103
Bluetooth Operation103
Turning Bluetooth On and
Off104
Finding and Connecting to a
Bluetooth Device104
Finding and Connecting
from a Bluetooth Device
(Discoverable Mode) 105
Disconnecting from a
Bluetooth Device

Switching Audio Route
between Internal Radio
Speaker and Bluetooth
Device
Viewing Device Details106
Deleting Device Name 107
Bluetooth Mic Gain107
Notification List108
Accessing the Notification
List 108
Auto-Range Transponder System
(ARTS) 🗐108
Over-the-Air-Programming (OTAP) 109
Third Party Peripherals Connection
Modes
Utilities
Setting the Squelch Level 110
Setting the Power Level 111
Turning the Option Board
Feature(s) On or Off111
Identifying Cable Type
Turning the Voice Operating
Transmission (VOX)
Feature On or Off112
Turning the Radio Tones/
Alerts On or Off113

English

Setting the Tone Alert
Volume Offset Level113
Turning the Talk Permit
Tone On or Off114
Turning the Power Up Alert
Tone On or Off
Setting the Text Message
Alert Tone 115
Changing the Display Mode116
Adjusting the Display
Brightness116
Language117
Turning Horns/Lights On or
Off118
Turning the LED Indicator
On or Off 118
Turning the Public Address
System On or Off 119
Turning the External Public
Address System On or
Off 119
Setting Dual Knob
Operation Preference119
Turning the Introduction
Screen On or Off120
Turning the Voice
Announcement On or Off 120

:	Setting the Text-to-Speech	
	Feature	120
(Call Forwarding 📵	121
I	Menu Timer	122
	Analog Mic AGC (Mic AGC-	
	A)	122
l	Digital Mic AGC (Mic AGC-	
	D)	123
l	Intelligent Audio	123
-	Turning the Acoustic	
	Feedback Suppressor	
	Feature On or Off 🖲	124
-	Turning Trill Enhancement	
	On or Off	
	Setting the Audio Ambience	
	Setting the Audio Profiles	126
-	Turning the Global	
	Positioning System	
	(GPS) On or Off	
	Flexible Receive List	128
	Accessing General Radio	
	Information	128

Keypad Microphone	
Features13	62

Using the Keypad132
Turning Keypad Tones On
or Off133
Additional Advanced Features134
Selecting a Zone by Alias
Search134
Initiating a Radio Check by
Manual Dial 🖲135
Initiating a Remote Monitor
by Manual Dial 🖲 136
Making a Private Call by
Manual Dial 🖲137
Making a Phone Call by
Manual Dial 🖲137
Making a Phone Call with
the One Touch Access
Button 🖲 139
Making a Group, Private or
All Call with the
Programmable Number
Key 🖲141
Making a Phone Call with
the Programmable
Phone Button 🖲 142
Making a Phone Call from
Contacts

Making a Group, Private,
Phone or All Call by Alias
Search 146
Viewing an Entry in the
Scan List by Alias Search. 148
Editing the Scan List 149
Storing an Alias or ID from a
Call List 152
Making a Call Alert by
Manual Dial 🖲152
RSSI Values153
Text Messaging 153
Writing and Sending a Text
Message 153
Replying to Text Messages
from the Inbox154
Editing a Quick Reply
Message 155
Accessing the Drafts Folder 156
Managing Fail-to-Send Text
Messages158
Dual Tone Multi Frequency (DTMF). 159
Security
Radio Disable via Manual
Dial

English

Radio Enable via Manual
Dial160
Password Lock Features
Accessing the Radio from
Password161
Unlocking the Radio from
Locked State162
Turning the Password Lock
On or Off 162
Changing the Password 163
Text Entry Configuration164
Word Correct164
Word Predict 165
Sentence Cap 165
Viewing Custom Words166
Editing Custom Word 167
Adding Custom Words 168
Deleting a Custom Word 168
Deleting All Custom Words 169
Front Panel Configuration (FPC) 170
Entering FPC Mode170
Editing FPC Mode
Parameters 170

Connect Plus Operations......171

Additional Radio Controls

in Connect Plus Mode..... 172

Push-To-Talk (PTT) Button172
Programmable Buttons 172
Assignable Radio Functions173
Assignable Settings or Utility
Functions 174
Identifying Status Indicators in
Connect Plus Mode 174
Display Icons174
Call Icons 176
Advanced Menu Icons177
Sent Item Icons 177
Bluetooth Device Icons 177
LED Indicator 178
Indicator Tones 179
Audio Tones179
Switching Between Connect Plus
and Non-Connect Plus Modes179

Roam Request 180
Site Lock On/Off180
Site Restriction180
Selecting a Zone181
Using Multiple Networks 181
Selecting a Call Type182
Receiving and Responding to a
Radio Call 182
Receiving and Responding
to a Group Call182
Receiving and Responding
to a Private Call183
Receiving a Site All Call183
Receiving an Inbound
Private Phone Call 184
Receiving an Inbound
Phone Talkgroup Call 185
Inbound Phone Multi-Group
Call185
Making a Radio Call185
Making a Call with the
Channel Selector Knob 186
Making a Private Call with a
One Touch Call Button188
Making a Call with the
Programmable Manual
Dial Button 188

Making an Outbound Private	
Phone Call with the	
Programmable Manual	
Dial Button	189
Making an Outbound Private	
Phone Call via the Phone	
Menu	190
Making an Outbound Private	
Phone Call from Contacts.	191
Waiting for the Channel	
Grant in an Outbound	
Private Phone Call	192
Making a Buffered Over-Dial	
in a Connected	
Outbound Private Phone	
Call	192
Making a Live Over-Dial in a	
Connected Outbound	
Private Phone Call	193

Advanced Features in

Connect Plus Mode...... 194

Auto Fallback	194
Indications of Auto Fallback	
Mode	194

English

Making/Receiving Calls in	
Fallback Mode	.194
Returning to Normal	
Operation	. 195
Radio Check	. 195
Sending a Radio Check	. 195
Remote Monitor	. 196
Initiating Remote Monitor	. 197
Scan	.198
Starting and Stopping Scan	. 198
Responding to a	
Transmission During a	
Scan	. 198
User Configurable Scan	.199
Turning Scan On or Off	.199
Editing the Scan List	. 200
Add or Delete a Group via the Add	
Members Menu	
Understanding Scan Operation	
Scan Talkback	
Contacts Settings	.204
Making a Private Call from	
Contacts	
Making a Call Alias Search	
Adding a New Contact	
Call Indicator Settings	.206

06
07
80
80
08
09
09
10
10
10
10
11
12
_
13

10

C
0
<u> </u>
ติ
ស

Saving the Emergency
Details to the Alarm List 214
Deleting the Emergency
Details214
Responding to an
Emergency Call214
Responding to an
Emergency Alert 215
Initiating an Emergency Call 215
Initiating an Emergency Call
with Voice to Follow
Initiating an Emergency Alert. 216
Exiting Emergency Mode 217
Text Message Features
Sending a Quick Text
Message 218
Sending a Quick Text
Message with the One
Touch Access Button 218
Accessing the Drafts Folder219
Managing Fail-to-Send Text
Messages221
Managing Sent Text
Messages221
Receiving a Text Message225
Reading a Text Message 225

Managing Received Text Messages	225
Privacy	
Making a Privacy-Enabled	. 220
(Scrambled) Call	220
. ,	
Security	
Radio Disable	
Radio Enable	
Bluetooth Operation	.233
Turning Bluetooth On and	
Off	. 234
Finding and Connecting to a	
Bluetooth Device	.234
Finding and Connecting	
from a Bluetooth Device	
(Discoverable Mode)	.235
Disconnecting from a	
Bluetooth Device	.236
Switching Audio Route	
between Internal Radio	
Speaker and Bluetooth	
Device	236
Viewing Device Details	
Deleting Device Details	
Bluetooth Mic Gain	
Notification List	.238

English

Accessing the Notification
List
Utilities
Turning the Radio Tones/
Alerts On or Off238
Setting the Tone Alert
Volume Offset Level239
Turning the Talk Permit
Tone On or Off240
Turning the Power Up Alert
Tone On or Off240
Setting the Power Level
Changing the Display Mode241
Adjusting the Display
Brightness242
Turning the Introduction
Screen On or Off242
Language243
Turning the LED Indicator
On or Off 243
Identifying Cable Type
Voice Announcement244
Menu Timer245
Turning Horns/Lights On or
Off245
Setting Dual Knob
Operation Preference246

Digital Mic AGC (Mic AGC-	
D)	246
Intelligent Audio	247
Turning the Acoustic	
Feedback Suppressor	
Feature On or Off	248
Turning the Global	
Positioning System	
(GPS) On or Off	249
Accessing General Radio	
Information	249

Accessories......260

Authorized Accessories

I

List	. 261
Antennas	261
Audio	263
Cables	264
Desktop Accessories	264
Mounting Kits	264
Speakers	265
Miscellaneous Accessories	

12

Maritime Radio Use in the VHF

Frequency Range	266
Special Channel Assignments	.266
Emergency Channel	266
Non-Commercial Call Channel	266
Operating Frequency Requirements	.266
Declaration of Compliance for the Use of	
Distress and Safety Frequencies	.269
Technical Parameters for Interfacing	
External Data Sources	.269
Limited Warranty	270
MOTOROLA COMMUNICATION	
PRODUCTS	270
I. WHAT THIS WARRANTY COVERS	
AND FOR HOW LONG:	270
II. GENERAL PROVISIONS:	. 271
III. STATE LAW RIGHTS:	.271
IV. HOW TO GET WARRANTY SERVICE:	.271
V. WHAT THIS WARRANTY DOES NOT	
COVER:	.272
VI. PATENT AND SOFTWARE	
PROVISIONS:	. 272
VII. GOVERNING LAW:	.274

Declaration of Conformity

This declaration is applicable to your radio only if your radio is labeled with the FCC logo shown below.

Declaration of Conformity

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party

Name: Motorola Solutions, Inc.

Address: 1303 East Algonquin Road, Schaumburg, IL 60196-1078, U.S.A.

Phone Number: 1-800-927-2744

Hereby declares that the product:

Model Name: XPR 5550/XPR 5580

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Information

RF Energy Exposure and Product Safety Guide for Mobile Two-Way Radios

ATTENTION!

This radio is restricted to Occupational use only.

Before using the radio, read the RF Energy Exposure and Product Safety Guide for Mobile Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola-approved antennas and other accessories, visit the following website:

http://www.motorolasolutions.com

Any modification to this device, not expressly authorized by Motorola, may void the user's authority to operate this device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with Motorola-approved antenna with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Software Version

All the features described in the following sections are supported by the radio's software version **R02.40.00** or later.

See *Checking the Firmware Version and Codeplug Version* on page 129 to determine your radio's software version.

Check with your dealer or system administrator for more details of all the features supported.

Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries. preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive license to use that arises by operation of law in the sale of a product.

The AMBE+2[™] voice coding Technology embodied in this product is protected by intellectual property rights

including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Pat. Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

18

Getting Started

How to Use This Guide

This User Guide covers the basic operation of the MOTOTRBO Mobiles.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

Throughout this publication, the icons described next are used to indicate features supported in either the conventional Analog mode or conventional Digital mode:



Indicates a conventional **Analog Mode-Only** feature.



Indicates a conventional **Digital Mode-Only** feature.

For features that are available in **both** conventional Analog and Digital modes, **no** icon is shown.

Conventional Analog Mode-Only features are not available in Connect Plus mode of operation. See *Connect Plus Operations* on page 171 for more information.

For features that are available in a conventional multisite mode, see *IP Site Connect* on page 36 for more information.

Selected features are **also** available on the single-site trunking mode, **Capacity Plus**. See *Capacity Plus* on page 37 for more information.

Selected features are **also** available in the multi-site trunking mode, **Linked Capacity Plus**. See *Linked Capacity Plus* on page 37 for more information.

What Your Dealer/System Administrator Can Tell You

You can consult your dealer or system administrator about the following:

- Is your radio programmed with any preset conventional channels?
- Which buttons have been programmed to access other features?
- · What optional accessories may suit your needs?

- What are the best radio usage practices for effective communication?
- What maintenance procedures will help promote longer radio life?

 
20

Preparing Your Radio for Use

Powering Up the Radio

Press the **On/Off Button** (^(A)) briefly. You see MOTOTRBO (TM) on the radio's display momentarily, followed by a welcome message or welcome image.

The green LED and the Home screen lights up.



A brief tone sounds, indicating that the power up test is successful.

Note: There is no power up tone if the radio tones/ alerts function is disabled (see *Turning the Radio Tones/Alerts On or Off* on page 113).

If your radio does not power up, contact your dealer.

To turn off the radio, press and hold the **On/Off Button** until you see Powering Down on the radio's display.

 
Note: Your radio may take up to 7 seconds to completely turn off.

Adjusting the Volume

To increase the volume, turn the Volume/Channel Knob ($^{\textcircled{O}}$) clockwise.


To decrease the volume, turn this knob counterclockwise.

Note: Your radio can be programmed to have a minimum volume offset where the volume level cannot be lowered past the programmed minimum volume. Check with your dealer or system administrator for more information.



Identifying Radio Controls

Radio Controls

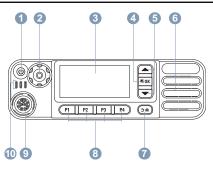

- 1 On/Off/Information Button
- 2 Volume/Channel Knob
- 3 Display
- 4 Menu/OK Button
- 5 Scroll Up/Down Buttons
- 6 Speaker
- 7 Return/Home Button

- 8 Front Programmable Buttons^[1]
- 9 Accessory Connector
- 10 LED Indicators

Using the Volume/Channel Knob

The **Volume/Channel Knob** can be programmed as dual purpose for both volume and channel or as a volume-only control.

To adjust the volume, see *Adjusting the Volume* on page 21.

To change channels, push and hold the knob until channel selection screen is displayed, then turn the knob to the required channel.

To exit the channel selection state, do one of the following:

- Push the Volume/Channel Knob again.
- Press 💷 ok
- Press 🔊 .
- Wait for the menu timer to expire.

Non-Connect Plus Operations

Additional Radio Controls in Non-Connect Plus Mode

Push-To-Talk (PTT) Button

The **PTT** button on the side of the radio (A) serves two basic purposes:



• While a call is in progress, the **PTT** button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.

The microphone is activated when the **PTT** button is pressed.

 While a call is not in progress, the PTT button is used to make a new call (see *Making a Radio Call* on page 44).

If the Talk Permit Tone or the **PTT** Sidetone (1) is enabled, wait until the short alert tone ends before talking.

During a call, if the Channel Free Indication feature is enabled on your radio (programmed by your dealer), you will hear a short alert tone the moment the target radio (the radio that is receiving your call) releases the **PTT** button, indicating the channel is free for you to respond.

You will also hear a continuous talk prohibit tone, if your call is interrupted, indicating that you should release the **PTT** button, for example when the radio receives an Emergency Call.

Programmable Buttons

Your dealer can program the programmable buttons as shortcuts to radio functions depending on the duration of a button press:

• Short press – Pressing and releasing rapidly.

•	Long press – Pressing and holding for the
	programmed duration.

• Hold down – Keeping the button pressed.

Note: The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See *Emergency Operation* on page 73 for more information on the programmed duration of the **Emergency** button.

Assignable Radio Functions

Bluetooth [®] Audio	Toggles audio routing	Intelligent Audio	Toggles intelligent audio on or off.
Switch	between internal radio speaker and external Bluetooth-enabled accessory.	Manual Dial	Depending on the programming, initiates a Private or Phone Call by
Call Alert	Provides direct access to the contacts list for you to select a		keying in any subscriber ID or phone number.
	contact to whom a Call Alert can be sent.	Manual Site Roam ^[2] 📵	Starts the manual site search.
Call Forwarding	Toggles Call Forwarding on or off.	Mic AGC On/Off	Toggles the internal microphone automatic gain
Call Log	Selects the call log list.		control (AGC) on or off.
Contacts	Provides direct access to the Contacts list.	Monitor	Monitors a selected channel for activity.

Emergency

Ext PA On/Off

Depending on the programming, initiates or

cancels an emergency.

Toggles the audio routing

address (PA) loudspeaker

internal public address (PA)

amplifier and the radio's

system.

between the connected public

Notifications	Provides direct access to the Notifications list.	Phone	Provides direct access to the Phone Contacts list
Nuisance Channel	Temporarily removes an unwanted channel, except for the Selected Channel, from the scan list. The Selected Channel refers to the user's selected zone/channel combination from which scan is initiated.	Privacy 🖲	Toggles privacy on or off.
Delete ^[2]		Radio Alias and ID	Provides radio alias and ID.
		Radio Check	Determines if a radio is active in a system.
		Radio Enable	Allows a target radio to be remotely enabled.
	Directly initiates a predefined Private, Phone or Group Call, a Call Alert or a Quick Text message.	Radio Disable	Allows a target radio to be remotely disabled.
		Remote Monitor	Turns on the microphone of a target radio without it giving any indicators.
Option Board Feature	Toggles option board feature(s) on or off for option board-enabled channels.	Repeater/ Talkaround ^[2]	Toggles between using a repeater and communicating
PA On/Off	Toggles the radio's internal public address (PA) system on or off. Monitors a selected channel for all radio traffic until function is disabled.	- [0]	directly with another radio.
		Scan ^[2]	Toggles scan on or off.
Permanent Monitor		Site Info	Displays current Linked Capacity Plus site name and ID. Plays site announcement voice messages for the

26

	current site (this function is unavailable when Voice Announcement is disabled).	Voice	unavailable when Voice Announcement is disabled. Toggles voice announcement
Site Lock On/Off ^[2]	When toggled on, the radio searches the current site only.	Announcement On/Off	on or off.
	When toggled off, the radio searches other sites in addition to the current site.	Voice Operating Transmission (VOX)	Toggles VOX on or off.
Telemetry Control	Controls the Output Pin on a local or remote radio.	Zone	Allows selection from a list of zones.
Text Message	Selects the text message menu.		
Transmit Interrupt	Stops the transmission of a remote monitored radio	Assignable Settings or Utility Functions	
Remote Dekey 🖲	without giving any indicators, or an ongoing interruptible call		Toggles all tones and alerts on or off.
Voice	to free the channel. Plays zone and channel	•	Toggles display backlight on or off.
Announcement for Channel	announcement voice messages for the current channel. This function is	Channel Up/ Down	Depending on the programming, changes channel to previous or next channel.

² Not applicable in Capacity Plus and Linked Capacity Plus

English

- Display ModeToggles the day/night display
mode on or off.Power LevelToggles transmit power level
between high and low.DescriptionToggles accurate level
between high and low.
- Squelch (e) Toggles squelch level between tight and normal.

Accessing the Programmed Functions

You can access various radio functions through one of the following ways:

- A short or long press of the relevant programmable buttons.
- Use the Menu Navigation Buttons as follows:
- Press EX to access the menu. Press the

appropriate Menu Scroll button (or) to access the menu functions.

2 To select a function or enter a sub-menu, press the [■] ok button. 3 To go back one menu level, or to return to the previous screen, press the ⊃ ⇒ button. Long

press the S button to return to the Home screen.

Note: The Menu Navigation Buttons are also available on a keypad microphone (see *Keypad Microphone Features* on page 132).

Note: Your radio automatically exits the menu after a period of inactivity and returns to your Home screen.

Identifying Status Indicators

Display Icons

The liquid crystal display (LCD) of your radio shows radio status, text entries, and menu entries.

The following are icons that appear on the radio's display. Icons are displayed on the status bar, arranged left-most in order of appearance/usage and are channel specific.

Lal

Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.

Monitor

Selected channel is being monitored.

Bluetooth

The Bluetooth feature is enabled but there is no remote Bluetooth device connected.




Bluetooth Connected

The Bluetooth feature is enabled. The icon stays lit when a remote Bluetooth device is connected.

Sign In

Radio is signed in to the remote server.

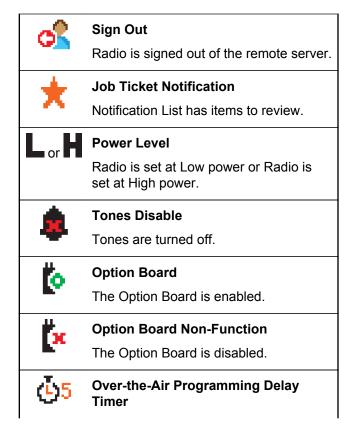

ממוס כסוונוסוא ווו ואסוו-כסוווופכו דוגא ואוסט

Indicates time left before automatic restart of radio.

GPS Available 🖲

The GPS feature is enabled. The icon stays lit when a position fix is available.



GPS Not Available/Out of Range 🖲

The GPS feature is enabled but is not receiving data from the satellite.



Scan^{[3][4]}

Scan feature is enabled.




Scan- Priority 1^{[3][4]}

Radio detects activity on channel/group designated as Priority 1.

Scan- Priority 2^{[3][4]}

Radio detects activity on channel/group designated as Priority 2.

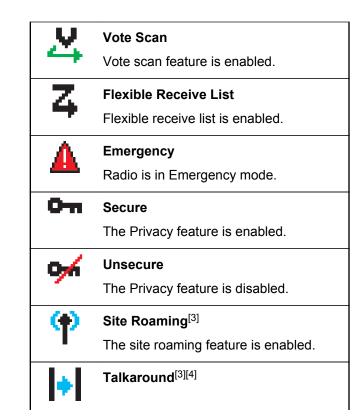

In the absence of a repeater, radio is currently configured for direct radio to radio communication.

Call Icons

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate ID type.

Private Call
 Indicates a Private Call in progress. In the Contacts list, it indicates a subscriber alias (name) or ID (number).
 Group Call/All Call

Indicates a Group Call or All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).



Phone Call as Private Call

Indicates a Phone Call as Private Call in progress. In the Contacts list, it indicates a phone alias (name) or ID (number).



Phone Call as Group/All Call

Indicates a Phone Call as Group/All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).



Bluetooth PC Call

Indicates a Bluetooth PC Call in progress. In the Contacts list, it

³ Not applicable in Capacity Plus

⁴ Not applicable in Linked Capacity Plus

indicates a Bluetooth PC Call alias (name) or ID (number).

Advanced Menu Icons

The following icons appear beside menu items that offer a choice between two options or as an indication that there is a sub-menu offering two options.

Checkbox (Empty)

Indicates the option is not selected.



Checkbox (Checked)

Indicates the option is selected.

Solid Black Box

Indicates the option selected for the menu item with a sub-menu.

Mini Notice Icons

The following icons appear momentarily on the radio's display after an action to perform task is taken.



Successful Transmission (Positive)

Successful action taken.

Failed Transmission (Negative)

Failed action taken.



Transmission in Progress (Transitional)

Transmitting. This is seen before indication for Successful Transmission or Failed Transmission.

Sent Item Icons 🖲

The following icons appear at the top right corner of the radio's display in the Sent Items folder.



Sent Successfully

The text message is sent successfully.

32



Send Failed

The text message has not been sent.

In-Progress

The text message to a group alias or ID is pending transmission.



The text message to a subscriber alias or ID is pending transmission, followed by waiting for acknowledgement.

Bluetooth Device Icons

The following icons also appear next to items in the list of Bluetooth-enabled devices available to indicate the device type.



Bluetooth Data Device

Bluetooth-enabled data device, such as a scanner.



Bluetooth Audio Device

Bluetooth-enabled audio device. such as a headset.



Bluetooth PTT Device

Bluetooth-enabled PTT device, such as a PTT-Only Device (POD).

Job Tickets Icons




Indicates all jobs listed.

Indicates new jobs.

LED Indicator

The LED indicator (A) shows the operational status of vour radio.

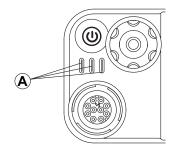

Blinking red	Radio is transmitting at low battery condition, receiving an emergency transmission, has failed the self-test upon powering up, or has moved out of range if radio is configured with Auto-Range Transponder System.
Solid yellow	Radio is monitoring a conventional channel or in Bluetooth Discoverable Mode.
Blinking yellow	Radio is scanning for activity or receiving a Call

	Alert, flexible receive list is enabled or all local Linked Capacity Plus channels are busy.
Double blinking yellow	Radio is no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus; all Capacity Plus or Linked Capacity Plus channels are currently busy.
Solid green	Radio is powering up or transmitting.
Blinking green	Radio is powering up, receiving a non-privacy- enabled call or data, or detecting activity, or retrieving Over-the-Air Programming transmissions over the air.
Double blinking green	Radio is receiving a privacy-enabled call or data.

English


Note: While in conventional mode, when the LED blinks green, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

For Capacity Plus and Linked Capacity Plus, there is no LED indication when the radio is detecting activity over the air.

Audio Tones

Audio tones provide you with audible indications of the status, or response to data received on the radio.

Continuous Tone	A monotone sound. Sounds continuously until termination.
Periodic Tone	Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.
Repetitive Tone	A single tone that repeats itself until it is terminated by the user.

 

Indicator Tones


High pitched tone	Low pitched tone
	Positive Indicator Tone
	Negative Indicator Tone

Switching Between Conventional Analog and Digital Mode

Each channel in your radio can be configured as a conventional analog or conventional digital channel.

To switch between an analog or a digital channel, use the

- Scroll Up/Down (^B) buttons.
- Volume/Channel Knob (A).
- Programmed **Channel Up** or **Channel Down** buttons.

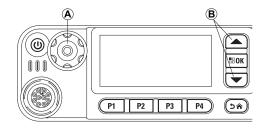

When switching from digital to analog mode, certain features are unavailable. Icons for the digital features (such as Messages) reflect this change by appearing 'grayed out'. Disabled features are hidden in the menu.

Your radio also has features available in both analog and digital mode. However, the minor differences in the way each feature works does **not** affect the performance of your radio.

Note: Your radio also switches between digital and analog modes during a dual mode scan (see *Scan* on page 59).

To use the Scroll Up/Down buttons, while in the

Home Screen of the required Zone, press () or

to select the required channel.

To use the programmed **Channel Up** or **Channel Down** buttons, while in the Home Screen of the required Zone, press **Channel Up** or **Channel Down** to select the required channel.

IP Site Connect

This feature allows your radio to extend conventional communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but

which may not have the strongest signal) and locks on to it.

Note: Each channel can only have either Scan or Roam enabled, not both at the same time.

Channels with this feature enabled can be added to a particular roam list. The radio searches the channel(s) in the roam list during the automatic roam operation to locate the best site.

A roam list supports a maximum of 16 channels (including the Selected Channel).

Note: You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Capacity Plus 🖲

Capacity Plus is a single-site trunking configuration of the MOTOTRBO radio system, which uses a pool of channels to support hundreds of users and up to 254 Groups. This feature allows your radio to efficiently utilize the available number of programmed channels while in Repeater Mode. You hear a negative indicator tone if you try to access a feature not applicable to Capacity Plus via a programmable button press.

Your radio also has features that are available in conventional digital mode, IP Site Connect, Capacity Plus and Linked Capacity Plus. However, the minor differences in the way each feature works does **not** affect the performance of your radio.

Check with your dealer or system administrator for more information on this configuration.

Linked Capacity Plus 🖲

Linked Capacity Plus is a multi-site multi-channel trunking configuration of the MOTOTRBO radio system, combining the best of both Capacity Plus and IP Site Connect configurations.

Linked Capacity Plus allows your radio to extend trunking communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network. It also provides an increase in capacity by efficiently utilizing the combined available number of programmed channels supported by each of the available sites.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

Any channel with Linked Capacity Plus enabled can be added to a particular roam list. The radio searches these channels during the automatic roam operation to locate the best site.

Note: You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Similar to Capacity Plus, icons of features not applicable to Linked Capacity Plus are not available

in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Linked Capacity Plus via a programmable button press.

Check with your dealer or system administrator for more information on this configuration.

Making and Receiving Calls in Non-Connect Plus Mode

Selecting a Zone

A zone is a group of channels. Your radio supports up to 99 channels and 2 zones, with a maximum of 99 channels per zone.

1 Access the Zone feature.

Radio Controls	Steps
Programmed Zone button	Press the programmed Zone button.
Radio menu	 Image: Two select. Image: Two select. Image: Two select.

The current zone is displayed and indicated by a ✓.

2 Select the required zone.



Press Int to select. The display shows <Zone > Selected momentarily and returns to the selected zone screen.

Selecting a Channel

Transmissions are sent and received on a channel. Depending on your radio's configuration, each channel may have been programmed differently to support different groups of users or supplied with different features.

Select a channel by using:

- Scroll Up or Scroll Down buttons.
- Volume/Channel Knob.
- The programmed Channel Up or Channel Down buttons.

Receiving and Responding to a Radio Call

Once the channel, subscriber ID, or group ID is displayed, you can proceed to receive and respond to calls.

The LED lights up solid green while the radio is transmitting and blinks green when the radio is receiving.

Note: The LED lights up solid green while the radio is transmitting and double blinks green when the radio is receiving a privacy-enabled call.

To unscramble a privacy-enabled call, your radio must have the same Privacy Key, OR the same Key Value and Key ID (programmed by your dealer), as the transmitting radio (the radio you are receiving the call from).

See *Privacy* on page 96 for more information.

Receiving and Responding to a Group Call

To receive a call from a group of users, your radio must be configured as part of that group.

When you receive a Group Call (while on the Home screen), the LED blinks green. The Group Call icon appears in the top right corner. The first text line

shows the caller alias. The second text line displays the group call alias. Your radio unmutes and the incoming call sounds through the radio's speaker.

- 1 Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
 - If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.
 - If the Voice Interrupt feature is enabled, press the PTT button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

The LED lights up solid green.

- 2 Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
 - The Talk Permit Tone.
 - The PTT Sidetone.
- 3 Release the PTT button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

See *Making a Group Call* on page 45 for details on making a Group Call.

Receiving and Responding to a Private Call <a>!

A Private Call is a call from an individual radio to another individual radio.

Your radio unmutes and the incoming call sounds through the radio's speaker.

- 1 Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
 - If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.
 - If the Voice Interrupt feature is enabled, press the PTT button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

The LED lights up solid green.

- 2 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 3 Release the PTT button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

See *Making a Private Call* on page 45 for details on making a Private Call.

Receiving an All Call

An All Call is a call from an individual radio to every radio on the channel. It is used to make important announcements requiring the user's full attention.

When you receive an All Call, a tone sounds and the LED blinks green.

The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays R11 Call. Your radio unmutes and the incoming call sounds through the radio speaker.

Once the All Call ends, the radio returns to the previous screen before receiving the call. An All Call does not wait for a predetermined time before ending.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is now available for use.

You cannot respond to an All Call.

Note: See *Making an All Call* on page 47 for details on making an All Call.

Note: The radio stops receiving the All Call if you switch to a different channel while receiving the call. During an All Call, you will **not** be able to use any programmed button functions until the call ends.

Receiving and Responding to a Selective Call 🞯

A Selective Call is a call from an individual radio to another individual radio. It is a Private Call on an analog system.

When you receive a Selective Call, the LED blinks green. The Private Call icon appears in the top right corner. The first text line shows the caller alias or Selective Call or Alert with Call. The first text line shows the Private Call icon. The radio displays Selective Call or Alert with Call. Your radio unmutes and the incoming call sounds through the radio's speaker.

- **1** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 2 Press the **PTT** button to respond to the call. The LED lights up solid green.
- **3** Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 4 Release the PTT button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

See *Making a Private Call* on page 45 for details on making a Private Call.

Receiving and Responding to a Phone Call 🖲

Note: If Phone Call capability is enabled, you are able to respond to a Phone Call. Check with your dealer or system administrator for more information.

Phone Call as Private Call

When you receive a Phone Call as a Private Call, the Phone Call icon appears in the top right corner; the display shows the caller alias or Phone Call.

If Phone Call capability is not enabled in your radio, the first line of the display shows Unavailable and your radio mutes the call. Your radio returns to the previous screen when the call ends.

- 1 Press the **PTT** button to talk and release it to listen.
- **2** Press () الله to end the call.

The display shows Ending Phone Call.

If successful, a tone sounds and the display shows Call Ended.

If successful, a tone sounds and the display shows Call Ended.

If unsuccessful, your radio returns to the Phone Call screen. Repeat this step or wait for the telephone user to end the call.

Phone Call as Group Call

When you receive a Phone Call as a Group Call, the Phone Group Call icon appears in the top right corner; the display shows the group alias and Phone Call.

If Phone Call capability is not enabled in your radio, the display shows Unavailable and your radio mutes the call. Your radio returns to the previous screen when the call ends.

- 1 Press the **PTT** button to talk and release it to listen.
- Press (عنه) to end the call.

The display shows Ending Phone Call.

If successful, a tone sounds and the display shows Call Ended.

If unsuccessful, your radio returns to the Phone Call screen. Repeat this step to end the call.

When you receive a Phone Call as an All Call, the Phone Call icon appears in the top right corner; the display shows All Call and Phone Call.

If Phone Call capability is not enabled in your radio, the display shows Unavailable and your radio mutes the call. Your radio returns to the previous screen when the call ends.

Note: When you receive a Phone Call as an All Call, you can respond to the call or end the call, only if an All Call type is assigned to the channel.

- 1 Press the **PTT** button to talk and release it to listen.
- Press () to end the call. The display shows Ending Phone Call.

If successful, a tone sounds and the display shows All Call and Call Ended.

If unsuccessful, your radio returns to the Phone Call screen. Repeat this step to end the call.

Making a Radio Call

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- A programmed One Touch Access button The One Touch Access feature allows you to make a Group or Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can ONLY have one ID assigned to a One Touch Access button. Your radio can have multiple One Touch Access buttons programmed.
- The programmed number keys This method is for Group, Private and All Calls only and is used with the keypad (see *Making a Group, Private or All Call with the Programmable Number Key* on page 50).
- The Contacts list (see Contact Settings on page 61).
- Manual Dial This method is for Private and Phone Calls only and is dialed using the keypad (see Making a Private Call by Manual Dial on page 137, and Making a Phone Call by Manual Dial on page 137).

English

Note: Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio will be able to unscramble the transmission.

Note: See *Privacy* on page 96 for more information.

Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

- 1 Do one of the following.
 - Select the channel with the active group alias or ID. See *Selecting a Channel* on page 39.
 - Press the programmed **One Touch Access** button.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- **3** Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows the group call alias.

4 Release the PTT button to listen.

When the target radio responds, the LED blinks green. You see the Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

Note: You can also make a Group Call via Contacts (see *Making a Group Call from Contacts* on page 62).

Making a Private Call 🖲

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call. There are two types of Private Calls. The first type, where a radio presence check is performed prior to setting up the call, while the other sets up the call immediately.

Only **one** of these call types can be programmed to your radio by your dealer.

You will hear a negative indicator tone, when you make a Private Call via the Menu, **One Touch Access** button, the programmed number keys, or the Volume/Channel Selector Knob, if this feature is not enabled.

Use the Text Message or Call Alert features to contact an individual radio. See *Text Message Features* on page 80 or *Call Alert Operation* on page 72 for more information.

- **1** Do one of the following.
 - Select the channel with the active subscriber alias or ID. See Selecting a Channel on page 39.
 - Press the programmed **One Touch Access** button.

- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the PTT button to make the call. The LED lights up solid green. The Private Call icon appears on the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- **4** Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 5 Release the PTT button to listen.When the target radio responds, the LED blinks green.
- 6 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows Call Ended.

You can also make a Private Call via Contacts (see *Making a Private Call from Contacts* on page 63).

Making an All Call

This feature allows you to transmit to all users on the channel. Your radio must be programmed to allow you to use this feature.

Users on the channel cannot respond to an All Call.

- 1 Select the channel with the active All Call group alias or ID. See *Selecting a Channel* on page 39.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows All Call.
- 4 Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
 - The Talk Permit Tone.
 - The PTT Sidetone. 1

Making a Selective Call 🗐

Just like a Private Call, while you can receive and/or respond to a Selective Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Selective Call.

- 1 Select the channel with the active subscriber alias or ID. See *Selecting a Channel* on page 39.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- 4 Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
 - The Talk Permit Tone.
 - The PTT Sidetone. 1
- 5 Release the PTT button to listen.

When the target radio responds, the LED blinks green.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows Call Ended.

Making a Phone Call

1 Press the programmed **One Touch Access** button to make a Phone Call to the predefined alias or ID.

If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds. If the access code was not preconfigured in the Contacts list, the display shows **Access** Code:.

Enter the access code and press $\begin{bmatrix} III & OK \end{bmatrix}$ to proceed.

The LED lights up solid green. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status. If the call-setup is successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.

If the call-setup is unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- **3** Press the **PTT** button to talk and release it to listen.

To enter extra digits, if requested by the Phone Call, enter the extra digits using the keypad and

press **IN OK** to proceed.

The DTMF tone sounds with each keypad press, and the radio returns to the previous screen.

Press (ع) to end the call.

English

If de-access code was not preconfigured in the Contacts list, the display shows De-Access Code: . Do one of the following.

- Enter the de-access code and press for to proceed. The radio returns to the previous screen.
- Press the One Touch Access button. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.

The DTMF tone sounds with each keypad press, and the display shows Ending Phone Call.

If the end-call-setup is successful, a tone sounds and the display shows Call Ended.

If the end-call-setup is unsuccessful, your radio returns to the Phone Call screen. Repeat Step 4 or wait for the telephone user to end the call.

Note: When the telephone user ends the call, a tone sounds and the display shows Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call. During channel access, press (5) to dismiss the call attempt. A tone sounds to indicate success.

During the call, if you press the **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

The access or deaccess code cannot be more than 10 characters.

Making a Private Call with a One Touch Call Button

Note: Programmable buttons press must be initiated from the Home screen.

The One Touch Call feature allows you to easily make a Private Call to a pre-defined Private Call alias or ID. This feature can be assigned to a short or long programmable button press.

You can ONLY have one alias or ID assigned to a One Touch Call button. Your radio can have multiple One Touch Call buttons programmed.

- 1 Press the programmed **One Touch Call** button to make a Private Call to the pre-defined Private Call alias or ID.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call.

The LED lights up solid green.

The display shows the Private Call alias or ID.

- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- **5** Release the **PTT** button to listen.

When the target radio responds, the LED blinks green.

6 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

Making a Group, Private or All Call with the Programmable Number Key

The Programmable Number Key feature allows you to make a Group, Private or All Call to a predefined alias or ID easily. This feature can be assigned to all the available number keys on a keypad.

You can **ONLY** have one alias or ID assigned to a number key, but you can have more than one number key associated to an alias or ID.

 Long press the programmed number key, when you are on the Home screen, to make a Group, Private or All Call to the predefined alias or ID.

If the number key is not associated to an entry, a negative indicator tone sounds.

- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green.
- 4 Release the PTT button to listen.When the target radio responds, the LED blinks green.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

For a Private Call, you hear a short tone when the call ends.

See Assigning an Entry to a Programmable Number Key on page 63 for details on assigning an entry to a number key on the keypad.

Stopping a Radio Call 🖲

This feature allows you to stop an ongoing Group or Private Call to free the channel for transmission. For example, when a radio experiences a "stuck microphone" condition where the **PTT** button is inadvertently pressed by the user.

Your radio must be programmed to allow you to use this feature.

1 Press the programmed **Transmit Interrupt Remote Dekey** button, while on the relevant channel.

The display shows Remote Dekey.

2 Wait for acknowledgement.

If successful, the radio sounds a positive indicator tone and the display shows Remote Dekey Success, indicating that the channel is now free.

If unsuccessful, the radio sounds a negative indicator tone and the display shows Remote Dekey Failed.

Talkaround

You can continue to communicate when your repeater is not operating, or when your radio is out of the repeater's range but within talking range of other radios.

This is called "talkaround".

Note: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

The Talkaround setting is retained even after powering down.

You can toggle between talkaround and repeater modes by pressing the programmed **Repeater**/**Talkaround** button or using the radio menu as described next.

- 1 to access the menu.
- 2 or to Utilities and press work to select.
- **a** or **to** Radio Settings and press

вок to select.

- or to Talkaround and press BOK to select.
 - Press **IN OK** to enable/disable the Talkaround.
 - The display shows ✓ beside Enabled.
 - The ✓ disappears from beside Enabled.

Advanced Features in Non-Connect Plus Mode


Radio Check

If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

This feature is only applicable for subscriber aliases or IDs.

Sending a Radio Check

1 Access the Radio Check feature.

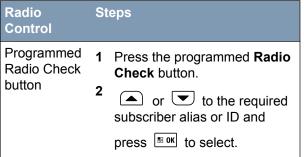

Radio Control	Steps
Menu	 Image: to access the menu. or image: to Contacts and press image: to select. Use one of the steps described next to select the required subscriber alias or ID:
	 Select the subscriber alias or ID directly. or or to the required subscriber alias or ID and press Is or to select. Use the Manual Dial menu.

Radio Steps Control

•	or 💌 to Manual Dial and press
	[⊪] or select.
•	🔺 or 💌 to Radio
•	Number and press To K to select. If there was previously dialed ID, the ID appears along with a blinking cursor. Else, the first line of the display shows Radio Number:; the second
	line of the display shows a blinking cursor. Use the keypad to edit/ enter the ID, and press
	[■] oK to select.

Radio **Steps** Control 4 \frown or \frown to the required subscriber alias or ID and press **B** ok to select. 5 🔺 or 💌 to Radio Check and press **BOK** to select.

The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

2 Wait for acknowledgement.

If the (**bn**) button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

If Radio Check is successful, a positive indicator tone sounds and the display shows positive mini notice.

English

If Radio Check is unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

Remote Monitor

Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber alias or IDs only). The green LED will blink once on the target subscriber. You can use this feature to monitor, remotely, any audible activity surrounding the target radio.

Your radio must be programmed to allow you to use this feature.

Initiating Remote Monitor

1 Access the Remote Monitor feature.

Radio Control	Steps
Programm ed Remote Monitor Button	1 Press the programmed Remote Monitor button.

Radio Control	Steps	
	2	 ▲ or ▼ to the required subscriber alias or ID and press [★] to select.
Menu	1 2	■ of ▼ to Contacts and
	3	press 🐨 or 💌 to select or 💌 to the required subscriber alias or ID and press
	4	 to select. or to Remote Mon. and press solution

The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

2 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor. Once the timer expires, the radio sounds an alert tone and the LED turns off.

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

Stopping Remote Monitor

Remote Monitor automatically stops after a programmed duration or when there is any user operation on the target radio. Follow the steps below to manually stop Remote Monitor.

1 Press the programmed **Transmit Interrupt Remote Dekey** button.

The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

2 Wait for acknowledgement.

If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Scan Lists

Scan lists are created and assigned to individual channels/groups. Your radio scans for voice activity by cycling through the channel/group sequence specified in the scan list for the current channel/ group.

Your radio can support up to 250 scan lists, with a maximum of 16 members in a list. Each scan list supports a mixture of both analog and digital entries.

You can add, delete, or prioritize channels by editing a scan list.

You can attach a new scan list to your radio via Front Panel Programming.

Note: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Viewing an Entry in the Scan List

- 1 [™] oK to access the menu.
- 2 or 💌 to Scan and press 🔤 🕷 to select.
- 3 or to Scan List and press select.
- 4 Use or to view each member on the list.

The Priority icon appears left of the member's alias, if set, to indicate whether the member is on a Priority 1 or Priority 2 channel list. You **cannot** have multiple Priority 1 or Priority 2 channels in a scan list.

There is no Priority icon if priority is set to None.

Editing the Scan List

1



в ок access the menu.

2 🔺 or 💌 to Scan and press 🔤 to select. 3 ▲ or 💌 to Scan List and press ≞∝ to select. 4 select. 5 or to the required alias or ID. 6 Press Box to select. 7 \frown or \frown to the required priority level and press **I** ok to select. The display shows positive mini notice, followed immediately by Add Another?. 8 Do one of the following: and repeat Steps 5 to 7.

• or \checkmark to No and press \blacksquare to save the current list.

Deleting an Entry from the Scan List

- 1 to access the menu.
- ² ▲ or ▼ to Scan and press ^{■ ok} to select.
- ³ ▲ or ▼ to Scan List and press ™ to select.
- \bullet or \frown to the required alias or ID.
- **5** Press **B** ok to select.
- 6 or to Delete and press to select.
- 7 Do one of the following:

At Delete Entry?, 🔺 or 💌 to Yes and

press **to** delete entry. The display shows positive mini notice.

- or \checkmark to No and press \blacksquare to return to the previous screen.
- 8 Repeat Steps 4 to 6 to delete other entries. After deleting all required aliases or IDs, long

press (5) to return to the Home screen.

Setting and Editing Priority for an Entry in the Scan List

^{■ oK} to access the menu.

1

- 2 or 💌 to Scan and press 📧 of to select.
- ³ ▲ or ▼ to Scan List and press [■] or to select.

 \bullet or \frown to the required alias or ID.

⁵ Press [■] ok to select.

- or to Edit Priority and press
- \frown or ullet to the required priority level and

press 🔤 🕷 to select.

The display shows positive mini notice before returning to the previous screen.

Note: The Priority icon appears left of the member's name.

There is no Priority icon if priority is set to **None**.

Scan

6

7

When you start a scan, your radio cycles through the programmed scan list for the current channel looking for voice activity.

The LED blinks yellow and the scan icon appears on the status bar.

During a dual mode scan, if you are on a digital channel, and your radio locks onto an analog

 
channel, it automatically switches from digital mode to analog mode for the duration of the call. This is also true for the reverse.

There are two ways of initiating scan:

- Main Channel Scan (Manual): Your radio scans all the channels/groups in your scan list. On entering scan, your radio may – depending on the settings – automatically start on the last scanned "active" channel/group or on the channel where scan was initiated.
- Auto Scan (Automatic): Your radio automatically starts scanning when you select a channel/group that has Auto Scan enabled.

Note: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Starting and Stopping Scan



▲ or ▼ to Scan and press ® or to select.

- ³ or to Scan State and press work to select.
- 4 ▲ or ▼ to required scan state and press ■ or ▼ to select.
 - The display shows Scan On when Scan is enabled. The LED blinks yellow and the scan icon appears.
 - The display shows Scan Off if Scan is disabled. The LED turns off and the scan icon disappears.

Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. The radio stays on that channel for a programmed time period known as "hang time".

1 Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.

- 2 Press the **PTT** button during hang time. The LED lights up solid green.
- 3 Release the **PTT** button to listen.

If you do not respond within the hang time, the radio returns to scanning other channels/groups.

Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a "nuisance" channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to the channel designated as the Selected Channel.

Deleting a "nuisance" channel is **only** possible through the programmed **Nuisance Channel Delete** button. This feature is **not** accessible through the menu.

1 When your radio "locks on to" an unwanted or nuisance channel, press the programmed

English

Nuisance Channel Delete button until you hear a tone.

2 Release the **Nuisance Channel Delete** button. The nuisance channel is deleted.

Restoring a Nuisance Channel

To restore the deleted nuisance channel, do one of the following:

- Turn the radio off and then power it on again.
- Stop and restart a scan via the programmed **Scan** button or menu.
- Change the channel via the **Channel Up/Down** buttons.

Vote Scan 📵

Vote Scan provides you with wide area coverage in areas where there are multiple base stations transmitting identical information on different analog channels.

Your radio scans analog channels of multiple base stations and performs a voting process to select the strongest received signal. Once that is established, your radio unmutes to transmissions from that base station.

The LED blinks yellow and the vote scan icon appears on the status bar.

To respond to a transmission during a Vote Scan, follow the same procedures as *Responding to a Transmission During a Scan* on page 60.

Contact Settings

Contacts provides "address-book" capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each entry, depending on context, associates with **one** of five types of calls: Group Call, Private Call, All Call, PC Call or Dispatch Call.

PC Call and Dispatch Call are data-related. They are only available with the applications. Refer to the data applications documentation for more information.

Note: If the Privacy feature is enabled on a channel, you can make privacy-enabled Group Call, Private Call, and All Call on that channel. Only target radios with the same Privacy Key OR the same Key Value

62

and Key ID as your radio will be able to unscramble the transmission.

See *Privacy* on page 96 for more information.

Additionally, Contacts menu allows you to assign each entry to a programmable number key or more on a keypad microphone. If an entry is assigned to a number key, your radio can perform a quick dial on the entry.

Your radio supports two Contacts lists, one for Analog contacts and one for Digital contacts, with a maximum of 500 members for Analog and 1000 for Digital on each Contacts list respectively.

Each entry within Contacts displays the following information:

- Call Type.
- Call Alias.
- Call ID.

Note: You can add or edit subscriber IDs for the Digital Contacts list. Deleting subscriber IDs can only be performed by your dealer.

For the Analog Contacts list, you can only view the subscriber IDs, edit the subscriber IDs, and initiate a

Call Alert. Adding and deleting capabilities can only be performed by your dealer.

Making a Group Call from Contacts

1

- [⊞] oK to access the menu.
- 2 or to Contacts and press Tok to select.

The entries are alphabetically sorted.

- 3 \frown or \bigcirc to the required group alias or ID.
- **4** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 5 Press the **PTT** button to make the call. The LED lights up solid green.
- 6 Release the **PTT** button to listen. When any user in the group responds, the LED blinks green. You see the Group Call icon, the group ID, and the user's ID on your display.
- 7 <a>If the Channel Free Indication feature is enabled, you hear a short alert tone the moment

the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

Making a Private Call from Contacts

1 to access the menu. 🗄 OK

2 ▲ or ▼ to Contacts and press ® ok to select.

The entries are alphabetically sorted.

3 ▲ or ▼ to the required subscriber alias or

ID and press **IN** to select.

- 4 Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- Press the **PTT** button to make the call. 5 The LED lights up solid green. The display shows the destination alias.

- 6 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- Release the **PTT** button to listen. When the target radio responds, the LED blinks green and the display shows the transmitting user's ID.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows Call Ended.

Assigning an Entry to a Programmable Number Key 🖲

Note: See Making a Group, Private or All Call with the Programmable Number Key on page 50 for details on making a Group, Private or All Call with the programmed number key(s).



1

to access the menu

2 or to Contacts and press Box to select.

The entries are alphabetically sorted.

- ³ ▲ or ▼ to the required alias or ID and press ■ or ▼ to select.
- 4 ▲ or ▼ to Program Key and press ^{■ oK} to select.
- ⁵ ▲ or ▼ to the desired number key and press ^{■ oK} to select.

If the number key is currently assigned to another entry, the display shows The Key is Already Assigned and then, the first line of the display shows Overwrite?. Do one of the following.

- or to Yes and press to overwrite the number key assignment.
- or \checkmark to \aleph_0 and press \circledast to return to the previous step.

Each entry can be associated to different number keys. You see a \checkmark before each number key that is assigned to an entry. If the \checkmark is before Empty, that number key is not assigned.

If a number key is assigned to an entry in a particular mode, this feature is not supported when you long press the number key in another mode.


The radio sounds a positive indicator tone and the display shows positive mini notice.

The screen automatically returns to the previous menu.

Removing the Association between Entry and Programmable Number Key <a>!

1 Access the required alias or ID via:

Radio Control	Steps
Programmed number key	Long press the programmed number key to the required alias
	or ID; press 🖽 to select.
Menu	1

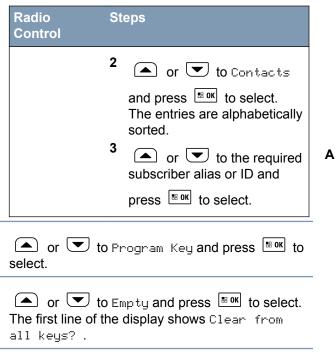

4 ▲ or ▼ to Yes and press ^{■ ok} to select.

2

3

Note: When an entry is deleted, the association between the entry and its programmed number key(s) is removed.

The radio sounds a positive indicator tone and the display shows positive mini notice.

The screen automatically returns to the previous menu.

Adding a New Contact

- 1 to access the menu.
- 2 or to Contacts and press of to select.
- ³ ▲ or ▼ to New Contact and press ^{■ oK} to select.
- 4 or to the required contact type, either Radio Contact or Phone Contact, and press

вок to select.

- 5 Use the keypad to enter the contact number and press store to confirm.
- 6 Use the keypad to enter the contact name and press ^{■ ok} to confirm.

required ringer type and press to select. The radio sounds a positive indicator tone and the display shows positive mini notice.

Setting a Default Contact 🗐

- to access the menu.
- 2 or to Contacts and press more to select.
- or to the required alias or ID and press
 to select.

- 4 or 💌 to Set as Default and press
 - вок to select.

 
The radio sounds a positive indicator tone and the display shows positive mini notice.

A ✓ appears beside the selected default alias or ID.

Call Indicator Settings

Activating and Deactivating Call Ringers for Call Alert

You can select, or turn on or off ringing tones for a received Call Alert.



- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ or To Radio Settings and press

to select.

Mode

Plus

Non-Connect

.⊆

Features

English

- 4 or ▼ to Tones/Alert and press oK to select.
- 5 or to Call Ringers and press solutions to select.
- 6 or to Call Alert and press work to select.

The current tone is indicated by a \checkmark .

- or to the required tone and press with to select.
 - ✓ appears beside selected tone.

Activating and Deactivating Call Ringers for Private Calls (9)

You can turn on or off the ringing tones for a received Private Call.

BOK to access the menu.

1

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Settings and press ^{■ oK} to select.
- 4 or ▼ to Tones/Alerts and press ™™ to select.
- 5 or to Call Ringers and press SOK to select.
- 6 or to Private Call and press solutions to select.
- Press to enable/disable the Private Call ringing tones.

The display shows ✓ beside Enabled, if Private Call ringing tones are enabled.

The ✓ disappears from beside Enabled, if Private Call ringing tones are disabled.

Activating and Deactivating Call Ringers for Selective Call $\textcircled{\ensuremath{\Theta}}$

You can select, or turn on or off ringing tones for a received Selective Call.

- 1 to access the menu.
- 2 or to Utilities and press To select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Tones/Alert and press ok to select.
- 5 or to Call Ringers and press solutions to select.
- 6 ▲ or ▼ to Selective Call and press

The current tone is indicated by a \checkmark .

- 7 or to the required tone and press ok to select.
 - ✓ appears beside selected tone.

Activating and Deactivating Call Ringers for Text Message

You can turn on or off the ringing tones for a received Text Message.

- 1 to access the menu.
- 2 ▲ or ▼ to Utilities and press oK to select.
- a or to Radio Settings and press
 to select.
- 4 or to Tones/Alerts and press solutions to select.

- 5 or to Call Ringers and press sok to select.
- 6 or to Text Message and press with to select.

The current tone is indicated by a \checkmark .

or to the required tone and press or
 to select.

✓ appears beside selected tone.

Activating and Deactivating Call Ringers for Telemetry Status with Text

You can turn on or off the ringing tones for a received Telemetry Status with Text.

- 1 to access the menu.
- ² or to Utilities and press with to select.
- 3 🔺 or 💌 to Radio Settings and press [≝] oK to select. 4 ▲ or ▼ to Tones/Alerts and press 🔤 🕷 to select. 5 ▲ or ▼ to Call Ringers and press ® 🕷 to select. 6 ▲ or ▼ to Telemetry and press ≞∝ to select. The current tone is indicated by a \checkmark . **Assigning Ring Styles** You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert or a Text Message from a particular contact.

The radio sounds out each ring style as you navigate through the list.

<sup>
Β</sup> oκ access the menu.

2 or to Contacts and press to select.

The entries are alphabetically sorted.

- ³ ▲ or ▼ to the required alias or ID and press ■ oK to select.
- 4 ▲ or ▼ to Edit and press ^{■ ok} to select.
- 5 or to Edit Ringtone and press solutions to select.
- 6 or to the required tone and press ok to select. ✓ appears beside selected tone.

Escalating Alarm Tone Volume

You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

Call Log Features

Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:

- Store alias or ID to Contacts
- Delete
- View Details

Viewing Recent Calls

The lists are Missed, Answered, and Outgoing.

- 1 to access the menu.
- 2 or to Call Log and press of to select.
- ³ ▲ or ▼ to preferred list and press ^{BOK} to select.

The display shows the most recent entry at the top of the list.



Press the **PTT** button to start a Private Call with the current selected alias or ID.

Deleting a Call from a Call List

- 1 to access the menu.
- ² or to Call Log and press solution to select.
- ³ or to the required list and press **B** ok to select.

When you select a call list and it contains no entries, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

4 ▲ or ▼ to the required alias or ID and press ■ or ▼ to select.

	5	▲ or ▼ to Delete Entry? and press В ок to select.		
6 Do one of the following:				
		 Press to select Yes to delete the entry. The display shows Entry Deleted. or to No, and press the to button to return to the previous screen. 		
iew	to return to the previous screen. wing Details from a Call List			
	1	^{⊞ ox} to access the menu.		
	2	▲ or ▼ to Call Log and press ■ to select.		
	3	▲ or ▼ to the required list and press ^{■ ok} to select.		
	4	 ▲ or ▼ to the required alias or ID and press ^{■ ok} to select. 		

5

• or • to View Details and press • or to select. Display shows details.

Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.

This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via Contacts or manual dial.

Receiving and Responding to a Call Alert

When you receive a Call Alert page, you the notification list listing a Call Alert with the alias or ID of the calling radio on the display, .

When you hear a repetitive tone and the LED blinks yellow, do one of the following:

• Press the **PTT** button while the display still shows the Call Alert in the Notification List to respond with a Private Call.

Press (5) to exit the Notification List. The alert is moved to the Missed Call Log.

See Notification List on page 108 for details about the Notification List.

See Call Log Features on page 70 for details about the Missed Call List.

Making a Call Alert from the Contact List

E ok to access the menu.

1

- 2 or to Contacts and press of to select.
- ³ ▲ or ▼ to the required subscriber alias or ID and press ^{■ oK} to select.
- 4 or ▼ to Call Alert and press ok to select.

The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

Mode

Plus

Non-Connect

.⊆

Features

English

If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

Making a Call Alert with the One Touch Access Button

Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias or ID.

The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

Emergency Operation

An Emergency Alarm is used to indicate a critical situation. You are able to initiate an Emergency at

any time on any screen display even when there is activity on the current channel.

Your dealer can set the duration of a button press for the programmed **Emergency** button, except for long press, which is similar with all other buttons:

- Short press Between 0.05 seconds and 0.75 seconds.
- Long press Between 1.00 second and 3.75 seconds.

The **Emergency** button is assigned with the Emergency On/Off feature. Check with your dealer for the assigned operation of the **Emergency** button.

Note: If the short press for the **Emergency** button is assigned to turn on the Emergency mode, then the long press for the **Emergency** button is assigned to exit the Emergency mode.

If the long press for the **Emergency** button is assigned to turn on the Emergency mode, then the short press for the **Emergency** button is assigned to exit the Emergency mode.

Your radio supports three Emergency Alarms:

• Emergency Alarm.

- Emergency Alarm with Call.
- Emergency Alarm with Voice to Follow.

Note: Only **ONE** of the Emergency Alarms above can be assigned to the programmed **Emergency** button.

In addition, each alarm has the following types:

- **Regular** Radio transmits an alarm signal and shows audio and/or visual indicators.
- Silent Radio transmits an alarm signal without any audio or visual indicators. Radio receives calls without any sound through the radio's speaker, until you press the PTT button to initiate the call.
- Silent with Voice Radio transmits an alarm signal without any audio or visual indicators, but allow incoming calls to sound through the radio's speaker.

Receiving an Emergency Alarm

On receiving an emergency alarm the emergency icon appears, a tone sounds, the LED blinks red and the radio displays the emergency caller alias. If more than one alarm has occurred all emergency caller aliases are displayed in an Alarm List.

1 When receiving an emergency alarm, do one of the following:

- If a single emergency call alias is displayed, press to view more details. press again to view your action details.
- · If the multiple emergency caller aliases are

displayed in the Alarm List, or to the required alias and press solve to view more details. Press solve again to view your action items.

Press and select Yes to exit the Alarm List.

To revisit the Alarm List, press **More** to access the menu and select Alarm List.

Responding to an Emergency Alarm

- 1 In the Alarm List, or to the required alias.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the

transmitting radio releases the **PTT** button, indicating the channel is now available for use.

3 Press **PTT** button to transmit non-emergency voice to the same group that the Emergency Alarm was targeted to.

Emergency voice can only be transmitted by the emergency initiating radio. All other radios (including the emergency receiving radio) transmit non-emergency voice.

The LED lights up solid green. Your radio remains in the Emergency mode.

- 4 Do one of the following:
 - Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
 - Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

5 Release the PTT button to listen. When the emergency initiating radio responds, the LED blinks green. You see the Group Call icon, the group ID, and transmitting radio ID on your display. 6 Your radio displays the Alarm List.

Sending an Emergency Alarm

This feature allows you to send an Emergency Alarm, a non-voice signal, which triggers an alert indication on a group of radios.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode.

Press the programmed Emergency On button.

The display shows one of the following:

- Tx Alarm and the destination alias.
- Tx Telegram and the destination alias.

The LED lights up solid green and the Emergency icon appears on the Home screen display.

When an Emergency Alarm acknowledgement is received, the Emergency tone sounds and the LED blinks green. The display shows Alarm Sent.

If your radio does not receive an Emergency Alarm acknowledgement, and after all retries have been exhausted, a tone sounds and the display shows Alarm Failed.

Radio exits the Emergency Alarm mode and returns to the Home screen.

Sending an Emergency Alarm with Call

This feature allows you to send an Emergency Alarm to a group of radios. Upon acknowledgement by a radio within the group, the group of radios can communicate over a programmed Emergency channel.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until you press the **PTT** button to initiate the call.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode, but allow incoming calls to sound through the radio's speaker. The indicators only appear once you press the **PTT** button to initiate, or respond to, the call.

1 Press the programmed **Emergency On** button or the **Emergency** footswitch.

The display shows

- Tx Alarm and the destination alias.
- Tx Telegram and the destination alias.

The LED lights up solid green and the Emergency icon appears on the Home screen display.

When an Emergency Alarm acknowledgement is received, the Emergency tone sounds and the LED blinks green. The display shows Alarm Sent.Your radio enters the emergency call mode when the display shows Emergency and the destination group alias.

- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- **3** Press **PTT** button to make the call. The LED lights up solid green and the Group icon appears on the display.
- 4 Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
 - The Talk Permit Tone.
 - The PTT Sidetone.
- 5 Release the PTT button to listen.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.

- 6 Press the **PTT** button to respond.
- Once your call ends, press Emergency Off button to exit the Emergency mode. The radio returns to the Home screen.

Sending an Emergency Alarm with Voice to Follow 🖲

This feature allows you to send an Emergency Alarm to a group of radios. Your radio's microphone is automatically activated, allowing you to communicate with the group of radios without pressing the **PTT** button.

This activated microphone state is also known as "hot mic".

Note: Your radio cannot detect a non-IMPRES microphone that is attached to the rear accessory connector.

When no microphone is detected at the specified programmed connector, your radio checks the alternative connector. Here, your radio gives priority to the detected microphone. See the table for examples.

Type of mic connected t		Programm ed	Radio uses
Front Connector	Rear Connector	Connector *	
Non- IMPRES	Any microphone	Rear	Rear microphone
Any microphone	Non- IMPRES	Front	Front microphone
IMPRES	Non- IMPRES	Rear	Front microphone
Non- IMPRES	IMPRES	Front	Rear microphone
*Check with your dealer or system administrator for more information.			

If your radio has Emergency Cycle Mode enabled, repetitions of hot mic and receiving period are made for a programmed duration.

If you press the **PTT** button during the programmed receiving period, you hear a prohibit tone, indicating

English

that you should release the **PTT** button. The radio ignores the **PTT** press and remains in Emergency mode.

Note: If you press the **PTT** button during hot mic, and continue to press it after the hot mic duration expires, the radio continues to transmit until you release the **PTT** button.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until the programmed hot mic transmission period is over, and you press the **PTT** button.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode when you are making the call with hot mic, but allow sound through the radio's speaker when the target radio responds after the programmed hot mic transmission period is over. The indicators only appear when you press the **PTT** button.

Note: If the Emergency Alarm request fails, the radio does not retry to send the request, and enters the hot mic state directly.

1 Press the programmed **Emergency On** button or the **Emergency On** footswitch.

- Tx Alarm and the destination alias.
- Tx Telegram and the destination alias.

The LED lights up solid green and the Emergency icon is displayed.

2 Once the display shows Alarm Sent, speak clearly into the microphone.

When hot mic has been enabled, the radio automatically transmits without a **PTT** button press until the hot mic duration expires. While transmitting, the LED lights up solid green and the Emergency icon appears on the display.

- **3** The radio automatically stops transmitting when the cycling duration between hot mic and receiving calls expires, if Emergency Cycle Mode is enabled.
- 4 Once the hot mic duration expires, the radio automatically stops transmitting. To transmit again, press the **PTT** button.

Reinitiating an Emergency Mode

Note: This feature is only applicable to the radio sending the Emergency Alarm.

There are two instances where this can happen:

- You change the channel while the radio is in Emergency mode. This exits the Emergency mode. If Emergency Alarm is enabled on this new channel, the radio reinitiates Emergency.
- You press the programmed Emergency On button during an Emergency initiation/transmission state. This causes the radio to exit this state, and to reinitiate Emergency.

Exiting Emergency Mode After Sending the Emergency Alarm

Your radio exits Emergency mode when one of the following occurs:

- Emergency Alarm acknowledgement is received (for **Emergency Alarm** only).
- · All retries to send the alarm have been exhausted.
- The Emergency Off button is pressed.

Note: If your radio is powered off, it exits the Emergency mode. The radio will not reinitiate the Emergency mode automatically when it is turned on again.

If you change channels when your radio is in Emergency mode to a channel that has no

emergency system configured, No Emergency is shown on your display.

Analog Status Update 📵

Your radio is able to send preprogrammed messages from the Status List indicating your current activity to a radio contact (for 5-Tone systems) or to the dispatcher (for MDC systems).

The last acknowledged message is kept at the top of the Status List. The other messages are arranged in alphanumeric order.

Sending Status Update to Predefined Contact

a or to Status and press of to select.
a or to the required status and press of to select.
a or to Set as Default and press of to select.

80

The display shows transitional mini notice, confirming your status update is being sent.

If the status update is acknowledged, a tone sounds and the display shows positive mini notice. A ✓ appears beside the acknowledged status.

If the status update is not acknowledged, a low tone sounds and the display shows negative mini notice. A \checkmark remains beside the previous status.

For 5-Tone systems, see *Setting a Default Contact* on page 66 for details on setting the default contact.

For 5-Tone systems, a **PTT** button press while in the status list sends the selected status update and returns to the Home screen to initiate a voice call.

Text Message Features 🖲


Your radio is able to receive data, for example a text message, from another radio or an e-mail application.

Sending a Quick Text Message

Your radio supports a maximum of 50 Quick Text messages as programmed by your dealer.

While Quick Text messages are predefined, you can edit each message before sending it.

1 Access the Text Message feature.

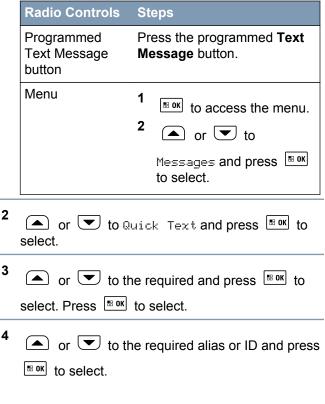

The display shows the transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows the positive mini notice.

If the message is not sent, a low tone sounds and the display shows the negative mini notice.

Sending a Quick Text Message with the One Touch Access Button

Press the programmed **One Touch Access** button to send a predefined Quick Text message to a predefined alias or ID.

The display shows the transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows the positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows the negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see *Managing Fail-to-Send Text Messages* on page 82).

Accessing the Drafts Folder

The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder.

Note: You can edit saved text message before sending it. Only available with a keypad microphone (see *Editing and Sending a Saved Text Message* on

page 157. Long press (\mathfrak{S}^{\ast}) at any time to return to the Home screen.

Viewing a Saved Text Message

1 Access the **Text Message** feature.

Radio Controls	Steps	
Programmed Text Message button	Press the prograr lessage button.	nmed Text
Menu	вок to acces	s the menu.


Radio Controls Steps 2 Image: Control of the state of the state

- 2 or ▼ to Drafts and press ® ok to select.

Deleting a Saved Text Message from Drafts

1 Access the **Text Message** feature.

Radio Controls	St	eps
Programmed Text Message button		ess the programmed Text essage button.
Menu	1	BOK to access the menu.

 

- 2 or to Drafts and press to select.
- ³ ▲ or ▼ to the required message and press ■ or ▼ to select.
- 4 ▲ or ▼ to Delete and press or to delete the text message.

Managing Fail-to-Send Text Messages

You can select one of the following options while at the Resend option screen:

- Resend.
- Forward.

 Edit (only available with a keypad microphone. See Editing a Text Message on page 158 for more information).

Note: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit and forward a Fail-to-Send message.

Resending a Text Message

Press **I** to resend the same message to the same subscriber/group alias or ID.

If the message is sent successfully, a tone sounds and the display shows the positive mini notice.

If the message cannot be sent, the display shows the negative mini notice.

Forwarding a Text Message

Select Forward to send the message to another subscriber/group alias or ID.



2

Select the message recipient by \frown or \bigtriangledown to



the required alias or ID and press **I** to select.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.

Note: You can also manually select a target radio address (see Forwarding a Text Message by Manual Dial on page 158).

Managing Sent Text Messages


Once a message is sent to another radio, it is saved in Sent Items. The most recent sent text message is always added to the top of the Sent Items list.

The Sent Items folder is capable of storing a maximum of thirty (30) last sent messages. When the folder is full, the next sent text message automatically replaces the oldest text message in the folder.

Note: Long press ()) at any time to return to the Home screen.

Viewing a Sent Text Message

1 Access the **Text Message** feature by performing one of the following actions:

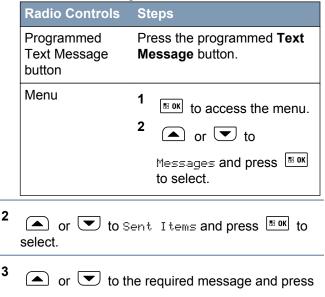

A subject line may be shown if the message is from an e-mail application.

The icon at the top right corner of the screen indicates the status of the message (see *Sent Item Icons* on page 32).

Sending a Sent Text Message

You can select one of the following options while viewing a sent text message:

- Resend
- Forward
- Edit
- Delete

Note: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit, forward, or delete a Sent message.

¹ Press [■] again while viewing the message.


or to one of the following options and press solve to select.

84

🗄 OK

to select.

Option	Steps
Forward	Select Forward to send the selected text message to another subscriber/ group alias or ID (see <i>Forwarding a</i> <i>Text Message</i> on page 83).
Delete	Select Delete to delete the text message.
Resend	Select Resend to resend the selected text message to the same subscriber/ group alias or ID.
	The display shows transitional mini notice, confirming that the same message is being sent to the same target radio.
	If the message is sent successfully, a tone sounds and the display shows positive mini notice.
	If the message cannot be sent, a low tone sounds and the display shows negative mini notice.
	If the message fails to send, the radio returns you to the Resend option

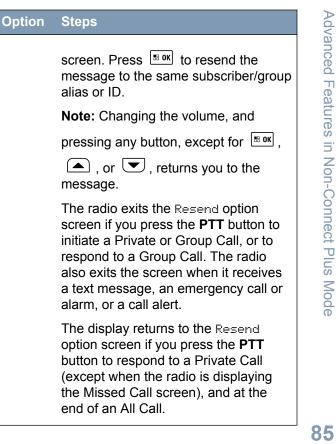

If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.

If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

Deleting All Sent Text Messages from Sent Items

1 Access the **Text Message** feature by performing one of the following actions:

Radio Controls	Steps
Programmed Text Message button	Press the programmed Text Message button.

Radio Controls	Step	S
Menu	•	[⊪] ow to access the menu. ▲ or ▼ to
		essages and press 📟 ok o select.

2 or to Sent Items and press . to select.

When you select Sent Items and it contains no text messages, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

- 3 or to Delete All and press work to select.
- 4 Choose one of the following.
 - or ves and press with to select. The display shows positive mini notice.

English

▲ or ▼ to No and press ■ or to return

to the previous screen.

Receiving a Text Message

When your radio receives a message, the display shows the alias or ID of the sender and the Message icon.

You can select one of the following options when receiving a text message:

- Read.
- Read Later.
- Delete.

Note: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

Long press ()) at any time to return to the Home screen.

Reading a Text Message

1	\frown or \frown to one of the options described next			
	and press BOK to select.			
	Option	Steps		
	Read?	Choosing this option, opens the selected message in the Inbox. A subject line may be shown if the message is from an e-mail application.		
		Press 📧 K to return to the Inbox.		
		Press solve a second time to reply, forward, or delete the text message.		
	Read Later	Choosing this option, returns you to the screen you were on prior to receiving the text message.		
	Delete	Choosing this option, deletes the selected text message.		

² ▲ or ▼ to Read? and press ^{■ ok} to select.

Selected message in the Inbox opens.

A subject line may be shown if the message is from an e-mail application.

- **3** Do one of the following:
 - Press 🖽 to return to the Inbox.
 - Press $\boxed{\text{III ork}}$ a second time to reply, forward, or delete the text message.

Managing Received Text Messages

Use the Inbox to manage your text messages. The Inbox is capable of storing a maximum of 30 messages.

Text messages in the Inbox are sorted according to the most recently received.

Your radio supports the following options for text messages:

- Reply (via Quick Text)
- Forward
- Delete

Delete All

Note: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

Note: Long press ()) at any time to return to the Home screen.

Viewing a Text Message from the Inbox


- 1 to access the menu.
- ² ▲ or ▼ to Messages and press ^{BOK} to select.

³ or \checkmark to Inbox and press $\blacksquare K$ to select.

 \bullet or \frown to view the messages.

A subject line may be shown if the message is from an e-mail application.

5 Do one of the following:

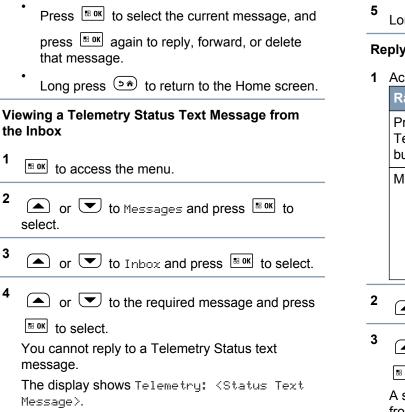

2


3

4

Long press (\mathfrak{S}) to return to the Home screen.

Replying to a Text Message from the Inbox

Access the **Text Message** feature.

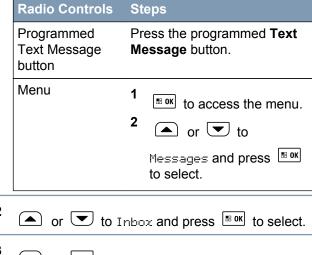

or to the required message and press

to select.

A subject line may be shown if the message is from an e-mail application.

- 5
 - ▲ or ▼ to Reply and press ®ok to select.
- 6 ▲ or 💌 to Quick Reply and press 🔤 ok to select.
- 7 \frown or \frown to the required message and press
 - 🗄 OK to select.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.

If the message cannot be sent, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 82).

Deleting a Text Message from the Inbox

1 Access the Text Message feature by performing one of the following actions:

		J
	Radio Controls	Steps
	Programmed Text Message button	
	Menu	1 to access the menu.
		2 • or • to
		Messages and press 🔳 OK to select.
2	▲ or ▼ to I	nbox and press 📧 oK to select.
3	▲ or ▼ to th	ne required message and press
	^{⊞ oK} to select.	
	A subject line may	be shown if the message is

from an e-mail application.

Mode Plus Non-Connect .⊆ Features Advanced

90

English

- 4 Press BOK once more to access the sub-menu.
- 5 ▲ or ▼ to Delete and press ™ ok to select.
- 6 or ▼ to Yes and press ™ to select. The display shows positive mini notice and the screen returns to the Inbox.

Deleting All Text Messages from the Inbox

1 Access the **Text Message** feature by performing one of the following actions:

Radio Controls	Steps	
Programmed Text Message button	Press the programmed Text Message button.	
Menu	 1 to access the menu. 2 or to 	
	Messages and press Rok to select.	

² or v to Inbox and press or to select.

When you select Inbox and it contains no text messages, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

- ³ or to Delete All and press work to select.

Job Tickets

Your radio is able to receive Job Tickets, which are messages from the dispatcher listing out tasks that need to be performed.

You can respond to Job Tickets in order to sort them into Job Ticket Folders. By default, the folders are "All", "New", "Started", and "Completed". Check with your dealer or system administrator for an additional 10 folders.

9'

Your radio supports a maximum of 100 Job Tickets, all of which can be seen in the "All" folder. New Job Tickets and Job Tickets with recent change in state are listed first. Upon reaching the maximum number of Job Tickets, the next Job Ticket automatically replaces the last Job Ticket in your radio.


Note: Job Tickets are retained even after radio is powered down and powered up again.

Your radio will automatically detect and discard the duplicated Job Tickets with the same subject line.

Accessing the Job Ticket Folder

Access the Job Ticket folder.

Radio Control	St	eps
Programmed Job Ticket button	1 2	Press the programmed Job Ticket button. or to the required folder and press to select.
		Note: You can also press
		and the corresponding

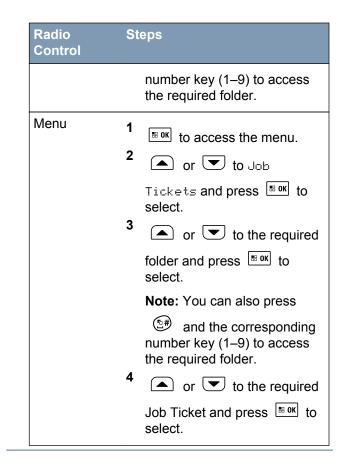

Logging In and Out of the Remote Server

This feature allows you to log in and log out of the remote server by using your user ID via the menu.

BOK to access the menu.

1

² ▲ or ▼ to Log In and press ■ok to select.

If you are already logged in, menu displays ${\rm Log}$ Out.

The display shows a transitional mini notice, confirming that you have been logged in successfully.

If you have failed to log in, the display shows a negative mini notice.

Creating and Sending a Job Ticket


Your radio is able to create Job Tickets, which is based on a Job Ticket template and send out tasks that need to be performed.

Note: A CPS programming software is required to configure the Job Ticket template. Check with your

dealer or system administrator to determine how your radio has been programmed.

[⊞] oK to access the menu.

- ² ▲ or ▼ to Job Tickets and press ^{■ oK} to select.
- ³ or to Create Ticket and press solutions to select.
- 4 Depending on how your radio is configured, do one of the following:

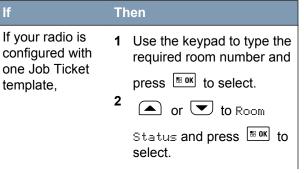

5 or 💌 to Send and press 🔤 🕷 to select.

The display shows transitional mini notice, confirming your message is sent.

If the message is not sent, the display shows negative mini notice.

Responding to the Job Ticket

и to access the menu.

- ² or to Job Tickets and press with to select.
- **a** or **v** to the required folder and press

вок to select.

You can also press the corresponding number key (1–9) to access the required folder.

- Press and once more to access the sub-menu.
 You can also press the corresponding number key (1–9) to Quick Reply.
- **6** or to the required Job Ticket and

press **IN to select**.

You can also press the corresponding number key (1–9) to respond to the job ticket.

94


English


The display shows transitional mini notice, confirming your message being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Deleting a Job Ticket

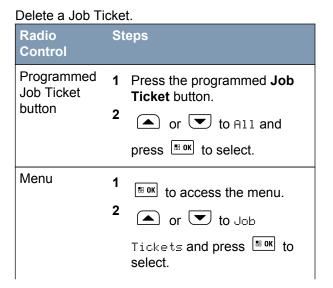

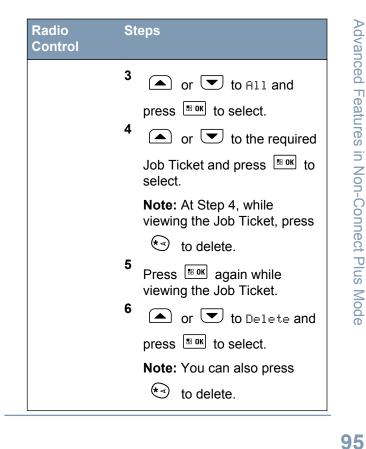

Privacy 🖲

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the channel to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacy-enabled channel, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports two types of privacy:

- · Basic Privacy.
- · Enhanced Privacy.

Only one of the privacy types above can be assigned to the radio.

To unscramble a privacy-enabled call or data transmission, your radio must be programmed to have the same Privacy Key (for Basic Privacy), or the same Key Value and Key ID (for Enhanced Privacy) as the transmitting radio. If your radio receives a scrambled call that is of a different Privacy Key, or a different Key Value and Key ID, you will either hear a garbled transmission (Basic Privacy) or nothing at all (Enhanced Privacy).

The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving an ongoing privacy-enabled transmission.

You can access this feature by performing one of the following actions:

- Press the programmed **Privacy** button to toggle privacy on or off.
- Using the Radio Menu as described by the steps described next.

Note: Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

^{⊞ oK} to access the menu.

1

2 or to Utilities and press work to select.

a or to Radio Settings and press to select.

- 4 ▲ or ▼ to Privacy and press [™]oK to select.
- **5** Press **I** or enable/disable Privacy.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Multi-Site Controls

These features are applicable when your current radio channel is part of an IP Site Connect or Linked Capacity Plus configuration.

See *IP Site Connect* on page 36 and *Linked Capacity Plus* on page 37 for more details about these configurations.

Starting an Automatic Site Search

Note: The radio **only** scans for a new site if the current signal is weak or when the radio is unable to

detect any signal from the current site. If the RSSI value is strong, the radio remains on the current site.

Radio Controls	Steps
Site Lock On/Off button	Press the programmed Site Lock On/Off button to toggle the start/ stop automatic site search.
Radio menu	 to access the menu. or to Utilities and press BOK to select. or to Radio Settings and press BOK to select. or to Site Roaming and press BOK to select. or to Site Lock and press BOK to select.

If the current channel is a multi-site channel with an attached roam list and is out of range, the radio also performs an automatic site search (site is unlocked) during:

- a PTT button press.
- data transmission.

A tone sounds and the display shows ${\tt Site}$ Unlocked.


The radio then returns to the Home screen. The display shows the Site Roaming icon and channel alias.

The LED blinks yellow rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.

Stopping an Automatic Site Search

When your radio is actively searching for a new site, you can stop the search by

Radio Controls	Steps
Site Lock On/Off button	the programmed Site Lock On/Off button to stop automatic site search.

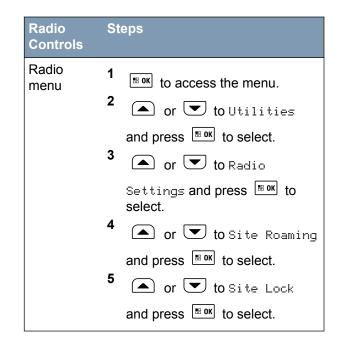

A tone sounds and the display shows Site Locked.

The radio then returns to the Home screen. LED turns off and the display shows the channel alias.

Starting a Manual Site Search

Start a Manual Site Search by

Radio Controls	Steps
Manual Site Roam button	Press the programmed Manual Site Roam button to start the manual site search.
Radio menu	 1 Solution to access the menu. and press Solution to Utilities and press Solution to select. and press Solution to Radio Settings and press Solution to select. and press Solution to Site Roaming and press Solution to select. and press Solution to Solution to

A tone sounds, the display shows ${\tt Finding\ Site},$ and the LED blinks green.

If a new site is found, a tone sounds and the LED turns off. The display shows Site <Alias> Found.

If there is no available site within range, a tone sounds and the LED turns off. The display shows ${\sf Out}\ {\sf of}\ {\sf Range}.$

If a new site is within range, but the radio is unable to connect to it, a tone sounds and the LED turns off. The display shows Channel Busy.

The radio returns to the Home screen.

Security


You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

Note: Performing Radio Disable and Enable is limited to radios with these functions enabled. Check with your dealer or system administrator for more information.

Radio Disable

1 Access this feature by

Radio Controls	Steps
Radio Disable button	 Press the programmed Radio Disable button. or to the required alias or ID and press I ok to select.
Radio menu	 to access the menu. or to Contacts and press more to Contacts and press more to select. The entries are alphabetically sorted. Use one of the steps described next to select the required subscriber alias or ID: Select the required alias or ID directly.

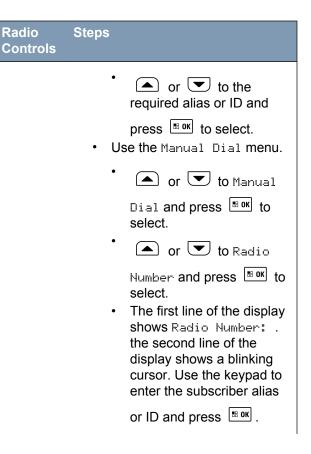

Advanced Features in Non-Connect Plus Mode

100

English



The display shows Radio Enable: <Subscriber Alias or ID> and the LED lights up solid green.

2 Wait for acknowledgement.

If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

If not successful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press (**b***) during the Radio Disable operation as you will not get an acknowledgement message.


Radio Enable

1 Access this feature by

Radio Controls	Steps
Radio Enable button	 Press the programmed Radio Enable button. or to the required alias or ID and press to select.
Radio menu	 to access the menu. or to Contacts and press more to contacts and press more to select. The entries are alphabetically sorted. Use one of the steps described next to select the required subscriber alias or ID select the required alias or ID directly

English

Radio Steps Controls

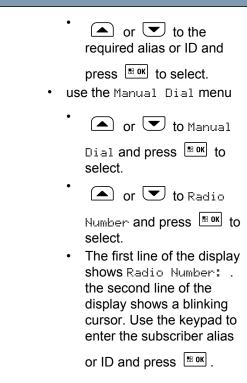



The display shows Radio Enable: <Subscriber Alias or ID> and the LED lights up solid green.

2 Wait for acknowledgement.

If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

If not successful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press (5) during the Radio Enable operation as you will not get an acknowledgement message.

Lone Worker

This feature raises an emergency if there is no user activity, such as any radio button press or activation of the channel selector, for a predefined time.

Before raising the emergency, when the inactivity timer expires, the radio warns the user via an audio indicator.

If there is still no acknowledgement by the user before the predefined reminder timer expires, the radio initiates an Emergency Alarm.

Only one of the following Emergency Alarms can be assigned to this feature:

- Emergency Alarm.
- Emergency Alarm with Call.
- Emergency Alarm with Voice to Follow.

The radio remains in the emergency state allowing voice messages to proceed until action is taken. See *Emergency Operation* on page 73 on ways to exit Emergency.

Note: This feature is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

Bluetooth Operation

Note: If disabled via the CPS, all Bluetooth-related features are disabled and the Bluetooth device database is erased.

This feature allows you to use your radio with a Bluetooth-enabled device (accessory) via a wireless Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters (32 feet) line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.

It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter/32 feet defined range) to re-establish clear audio reception. Your radio's Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10meter/32 feet range.

Your radio can support up to 3 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, a scanner, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device's user manual for more details on your Bluetoothenabled device's full capabilities.

Turning Bluetooth On and Off

- 1 to access the menu.
- 2 or to Bluetooth and press of to select.
- ³ ▲ or ▼ to My Status and press ^{■ ok} to select.

The display shows On and Off. The current status is indicated by a \checkmark .

4 Do one of the following:

- ▲ or ▼ to 0n and press ™ to select. The display shows 0n and a ✓ appears left of the selected status.

Finding and Connecting to a Bluetooth Device

Do **not** turn off your Bluetooth-enabled device during the finding and connecting operation as this cancels the operation.

- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetoothenabled device's user manual.
- **2** On your radio, press **C** to access the menu.
- ³ ▲ or ▼ to Blue tooth and press ^{■ oK} to select.
- 4 ▲ or ▼ to Devices and press ^{■ oK} to select.

- **5** Do one of the following:
 - ▲ or ▼ to the required device and press

to select.

▲ or ▼ to Find Devices to locate available devices. ▲ or ▼ to the required

device and press **BOK** to select.

6 or to Connect and press Box to select.

Display shows Connecting to <Device>. Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetooth-enabled device's user manual.

If successful, the radio display shows <Device> Connected. A tone sounds and ✓ appears besides the connected device. The Bluetooth Connected icon appears on the status bar.

If unsuccessful, the radio display shows ${\tt Connecting}$ ${\tt Failed}.$

Note: If pin code is required, use the same entry method as Step 2 in *Accessing the Radio from Password* on page 161.

Finding and Connecting from a Bluetooth Device (Discoverable Mode)

Do not turn off your Bluetooth or your radio during the finding and connecting operation as this may cancel the operation.

1 Turn Bluetooth On.

See Turning Bluetooth On and Off on page 104.

- 2 to access the menu.
- ³ ▲ or ▼ to Bluetooth and press ^{BOK} to select.
- 4 ▲ or ▼ to Find Me and press ^{■ oK} to select.

Your radio can now be found by other Bluetoothenabled devices for a programmed duration. This is called Discoverable Mode. **5** Turn on your Bluetooth-enabled device and pair it with your radio.

Refer to respective Bluetooth-enabled device's user manual.

Disconnecting from a Bluetooth Device

- ¹ On your radio, press ^{■ ok} to access the menu.
- ² or to Bluetooth and press work to select.
- ³ ▲ or ▼ to Devices and press ^{■ oK} to select.
- 4 ▲ or ▼ to the required device and press
 I ok to select.
- 5 ▲ or ▼ to Disconnect and press ^{■ OK} to select.

Display shows Disconnecting from <Device>. Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.

The radio display shows < Device > Disconnected. A positive indicator tone sounds and ✓ disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.

Switching Audio Route between Internal Radio Speaker and Bluetooth Device

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.


Press the programmed **Bluetooth Audio Switch** button.

- A tone sounds and display shows Route Audio to Radio.
- A tone sounds and display shows Route Audio to Bluetooth.

Viewing Device Details

1 58 OK to access the menu.

English

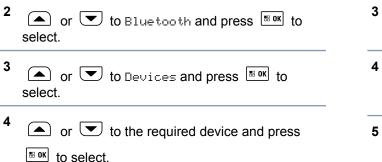

5 or to View Details and press with to select.

Deleting Device Name

 
You can remove a disconnected device from the list of Bluetooth-enabled devices.

- 1 to access the menu.
- ² or to Bluetooth and press with to select.

- ³ or to Devices and press more to select.
- 4 ▲ or ▼ to the required device and press
 I to select.
- 5 or to Delete and press to select.
 - The display shows Device Deleted.

Bluetooth Mic Gain

Allows control of the connected Bluetooth-enabled device's microphone gain value.



- ² ▲ or ▼ to Blue tooth and press ^{■ oK} to select.
- 3 ▲ or ▼ to BT Mic Gain and press ™ oK to select.

• or to the BT Mic Gain type and the current values.

To edit values, press 💷 or select.

Notification List

Your radio has a Notification List that collects all your "unread" events on the channel, such as unread text messages, telemetry messages and missed calls. Unread Job Tickets are also stored in the notification list.

The Notification icon appears on the status bar when the Notification List has one or more events.

For TMS and missed call/call alert notification events, the maximum number are 30 TMS and 10 missed calls/call alerts. This maximum number depends on individual feature (job tickets or TMS or missed calls/ call alerts) list capability. **Note:** After the events are read, they are removed from the Notification List.

Accessing the Notification List

1

- вок to access the menu.
- 2 or to Notification and press solution and press
- ³ ▲ or ▼ to the required event and press ■ ok to select.

Long press (>*) to return to the Home Screen.

Auto-Range Transponder System (ARTS) ด

ARTS is an analog-only feature designed to inform you when your radio is out-of-range of other ARTS-equipped radios.

ARTS-equipped radios transmit or receive signals periodically to confirm that they are within range of each other. Your dealer can program your radio to transmit or receive the ARTS signal.

Your radio provides indications of states as follows:

- First-Time Alert A tone sounds and the display shows In Range after the channel alias.
- **ARTS-in-Range Alert** A tone sounds, if programmed, and the display shows In Range after the channel alias.
- ARTS-Out-of-Range Alert A tone sounds, the LED rapidly blinks red, and the display alternates between Out of Range and the home screen.

Over-the-Air-Programming (OTAP)

Your radio can be updated by your dealer remotely, via OTAP, without needing to be physically connected. Additionally, some settings can also be configured via OTAP.

While undergoing OTAP, the LED blinks green.

Note: When the radio is receiving high volume data, the High Volume Data icon appears and channel is busy. A **PTT** button press at this time may cause a negative tone to sound.

Once the programming is complete, depending on your radio's configuration:

- A tone sounds, the display shows Updating Restarting, and your radio restarts (powers off and on again).
- Select between Restart Now or Postpone. Selecting Postpone allows your radio to return to the previous display, with an OTAP Timer icon visible, for a period of time before the automatic restart occurs.

Upon power up after the automatic restart occurs, the display shows Sw Update Completed if the OTAP update is successful or Sw Update Failed if the OTAP update is unsuccessful.

See Software Update on page 130 for your updated software version.

Third Party Peripherals Connection Modes

You can select one of the third party peripherals connection modes:

- Motorola
- PC and Audio
- Data Accessory
- Telemetry
- Generic

1 to access the menu.

- 2 or to Utilities and press To select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Cable Type and press ™ ok to select.
- ⁵ ▲ or ▼ to the required connection mode and press [■] ok to select.
 - The display shows the selected connection mode.
 - The screen automatically returns to the previous menu.

Note: You cannot change the connection mode while the cable of the third party peripheral is still attached to your radio.

Utilities

Setting the Squelch Level

You can adjust your radio's squelch level to filter out unwanted calls with low signal strength or channels that have a higher than normal background noise.

Normal is the default. Tight filters out (unwanted) calls and/or background noise; however, calls from remote locations may also be filtered out.

Press the programmed **Squelch** button to toggle squelch level between normal and tight. Follow the procedure described next to access this feature via the radio's menus.

- 1 to access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- **a** or **v** to Radio Settings and press

to select.

4 ▲ or ▼ to Squelch and press ^{■ oK} to select.

 \frown or \frown to the required setting and press

to select.

 appears besides selected setting. Screen returns to the previous menu.

Setting the Power Level

5

1

You can customize your radio's power setting to high or low for each channel.

High enables communication with radios located at a considerable distance from you. Low enables communication with radios in closer proximity.

Press the programmed **Power Level** button to toggle transmit power level between high and low. Follow the procedure described next to access this feature via the radio's menus.

- 2 ▲ or ▼ to Utilities and press ® oK to select.
- a or to Radio Settings and press
 to select.

4 ▲ or ▼ to Power and press ■ok to select.

- ⁵ ▲ or ▼ to the required setting and press ^{■ ok} to select.
 - ✓ appears beside selected setting. At any time,

long press ()) to return to the Home screen. Screen returns to the previous menu.

Turning the Option Board Feature(s) On or Off

A channel can support up to 6 option board features. Refer to your dealer or system administrator for more information.

Press the programmed **Option Board Feature** button to toggle the feature on or off.

вок to access the menu.

Identifying Cable Type

You can select the type of cable your radio uses.

- 1 to access the menu.
- 2 or to Utilities and press with to select.
- ³ or to Radio Settings and press

to select.

- 4 or ▼ to Cable Type and press ® ok to select.
- **5** The current cable type is indicated by a \checkmark .

Turning the Voice Operating Transmission (VOX) Feature On or Off

This feature allows you to initiate a hands-free voice activated call on a programmed channel. The radio automatically transmits, for a programmed period, whenever the microphone on the VOX-capable accessory detects voice. Pressing the **PTT** button during radio operation will disable VOX. To re-enable VOX, do one of the following:

- Turn the radio off and power it on again.
- Change the channel via the **Scroll Up/Down** buttons.
- Change the channel via Volume/Channel Knob.
- Press the programmed **VOX** button to toggle the feature on or off.
- Follow the steps described next to access this feature via the radio menu.

If the Talk Permit Tone feature is enabled (see *Turning the Talk Permit Tone On or Off* on page 114), use a trigger word to initiate the call. Wait for the Talk Permit Tone to finish before speaking clearly into the microphone.

Note: Turning this feature on or off is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

📧 🛯 to access the menu.

1

- ² ▲ or ▼ to Utilities and press ^{■ OK} to select.
- a or to Radio Settings and press
 to select.
- 4 or to ∪0X and press or to select.
- **5** Press **I** ok to disable/enable VOX.

Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

Press the programmed **All Tones/Alerts** button to toggle all tones on or off, or follow the procedure described next to access this feature via the radio menu.

п to access the menu.

1

- 2 ▲ or ▼ to Utilities and press ® oK to select.
- a or to Radio Settings and press
 to select.
- 4 or ▼ to Tones/Alerts and press ™ to select.
- 5 or ▼ to All Tones and press or to select.
- 6 Press to enable/disable all tones and alerts.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Setting the Tone Alert Volume Offset Level

You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/ alerts, allowing it to be higher or lower than the voice volume.

- 1 south to access the menu.
- 2 or to Utilities and press of to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Tones/Alerts and press ™ ok to select.
- 5 ▲ or ▼ to Vol. Offset and press ™ ok to select.
- 6 or to the required volume value. The radio sounds a feedback tone with each corresponding volume value.
- 7 Do one of the following:
 - Press **B** ok to keep the required displayed volume value.

Press (5) to exit without changing the current volume offset settings.

Turning the Talk Permit Tone On or Off

You can enable and disable the Talk Permit Tone if needed.

The second seco

1

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- 3 ▲ or ▼ to Radio Settings and press
- 4 or to Tones/Alerts and press with to select.
- 5 or to Talk Permit and press solution to select.

English

6 Press store to enable/disable the Talk Permit Tone.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Turning the Power Up Alert Tone On or Off

You can enable and disable the Power Up Alert Tone if needed.



- 2 or to Utilities and press with to select.
- a or to Radio Settings and press
 to select.
- 4 or ▼ to Tones/Alerts and press oK to select.

- 5 or to Power Up and press of to select.
- 6 Press To enable/disable the Power Up Alert Tone.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Setting the Text Message Alert Tone

You can customize your radio's text message alert tone to Momentary or Repetitive for each entry in the Contacts list.

THE OK to access the menu.

- 2 or to Contacts and press of to select.
- ³ ▲ or ▼ to the required subscriber alias or ID and press ^{■ OK} to select.

4 ▲ or ▼ to Message Alert and press ™ ok to select.

The display shows Momentary and Repetitive.

5 • or **•** to the required setting and press

to enable.


✓ appears besides selected setting.

Changing the Display Mode

You can change radio's display mode between Day or Night, as needed. This affects the color palette of the display.

Change the Display Mode:

Radio Control	Steps
Programmed Display Mode Button	
Menu	1 Ito access the menu.

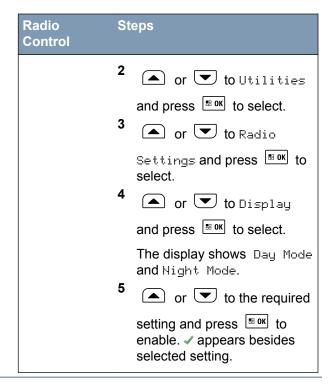

Adjusting the Display Brightness


You can adjust radio's display brightness as needed.

Advanced Features in Non-Connect Plus Mode

Note: Display brightness cannot be adjusted when "Auto Brightness" is enabled.

Adjust the Display Brightness

Radio Control	St	eps
Programmed Display Brightness Button	1 2	Press the programmed Brightness button. Decrease display brightness by pressing
Menu	1 2	 to access the menu. or to Utilities and press of to select.

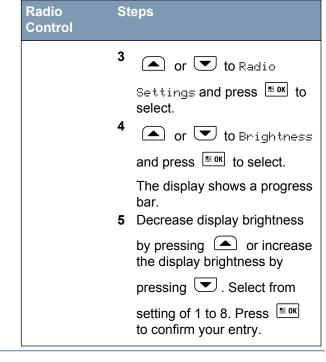

Language

You can set your radio display to be in your required language.

- 1 to access the menu.
- 2 or to Utilities and press wor to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Languages and press ok to select.
- **5** or **T** to the required language and press

^I or enable. ✓ appears beside selected language.

Turning Horns/Lights On or Off

This feature needs to be installed through your radio's rear accessory connector by your dealer.

Your radio is able to notify you of an incoming call via the horns and lights feature. When activated, an incoming call sounds your vehicle's horn and turns on its lights. Press the programmed **Horns/Lights** button to toggle horns and light feature on or off.

🖽 ok to access the menu.

1

- ² ▲ or ▼ to Utilities and press ^{■ OK} to select.
- a or to Radio Settings and press
 to select.
- 4 or ▼ to Horn/Lights and press [■]ok to select.
- Fress [■] or to enable/disable Horns/Lights.
 The display shows ✓ beside Enabled.
 - The ✓ disappears from beside Enabled.

Turning the LED Indicator On or Off

You can enable and disable the LED Indicator if needed.

- 1 to access the menu.
- 2 or to Utilities and press to select.
- a or to Radio Settings and press
 to select.
- 4 or to LED Indicator and press Box to select.
- **5** Press **BOK** to enable/disable the LED Indicator.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Turning the Public Address System On or Off

You can enable and disable the radio's internal public address (PA) system.

Press the programmed **PA On/Off** button to toggle the feature on or off.

Turning the External Public Address System On or Off

You can enable or disable the audio routing between the connected public address (PA) loudspeaker amplifier and the radio's internal public address (PA) system.

Press the programmed **Ext PA On/Off** button to toggle the feature on or off.

Setting Dual Knob Operation Preference

Your radio has a dual-purpose **Volume/Channel Knob**. Disabling the dual-purpose option sets the knob to work as a Volume Knob only.

to access the menu.

² ▲ or ▼ to Utilities and press ^{■ oK} to select.

³ or 💌 to Radio Settings and press

вок to select.

- 5 The display shows Volume Only and Volume &
 - ch. ▲ or ▼ to the required setting and press ^{■ ok} to select.
 - ✓ appears beside selected setting.

Screen returns to the previous menu.

Turning the Introduction Screen On or Off

You can enable and disable the Introduction Screen if needed.

- 2 or to Utilities and press with to select.
- a or to Radio Settings and press
 to select.

- 4 ▲ or ▼ to Display and press ® ok to select.
- 5 or to Intro Screen and press solutions to select.
- 6 Press ^{■ oK} to enable/disable the Introduction Screen.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Turning the Voice Announcement On or Off

This feature enables the radio to audibly indicate the current Zone or Channel the user has assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

Setting the Text-to-Speech Feature

Note: The Text-to-Speech feature can only be enabled in MOTOTRBO Customer Programming Software. If enabled, the Voice Announcement

Mode Plus Non-Connect .⊆ Features Advanced

120

¹ to access the menu.

 
feature is automatically disabled, and vice versa. Check with your dealer or system administrator for more information.

This feature enables the radio to audibly indicate the following features:

- Current Channel.
- · Current Zone.
- · Programmed button feature on or off.
- Content of received text messages.
- Content of received Job Tickets.

This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

```
1 to access the menu.
```



3 or 💌 to Radio Settings and press (📥 ا 🗄 OK to select.

- 4 ▲ or ▼ to Voice Announcement and press
 Image: Solution in the select.
- ⁵ ▲ or ▼ to any of the following features and press ^{■ OK} to select.

You can also use \P or \blacktriangleright to change the selected option.

- All
- Messages
- Job Tickets
- Channel
- Zone
- Program Button

If enabled, the display shows ✓ beside Enabled.

If disabled, the ✓ disappears from beside <code>Enabled</code>.

Call Forwarding 📵

You can enable your radio to automatically forward voice calls to another radio.

- 1 so access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- 3 or to Call Forward and press solutions to select.
- 4 Do one of the following:
 - Press [■] or to enable Call Forwarding. The display shows ✓ beside Enabled.
 - Press **Box** to disable Call Forwarding. The *I* disappears from beside Enabled.

Menu Timer

Set the period of time your radio stays in the menu before it automatically switches to the Home screen.

- to access the menu.
- 2 ▲ or ▼ to Utilities and press ™ ok to select.

- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Display and press ™ or to select.
- 5 or to Menu Timer and press work to select.

Analog Mic AGC (Mic AGC-A)

This feature controls the your radio's microphone gain automatically while transmitting on an analog system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

🖽 or access the menu.

122

- 2 or to Utilities and press to select.
- or to Radio Settings and press
 to select.
- 4 or ▼ to Mic AGC-A and press ™ ok to select.
- 5 Do one of the following:
 - Press to enable **Mic AGC-A**. The display shows \checkmark beside Enabled.
 - Press **model** to disable **Mic AGC-A**. The *d* disappears from beside Enabled.

Digital Mic AGC (Mic AGC-D)

This feature controls the your radio's microphone gain automatically while transmitting on a digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

BB OK to access the menu. 2 ▲ or ▼ to Utilities and press ≞∝ to select. 3 ▲ or ▼ to Radio Settings and press to select. 4 ▲ or ▼ to Mic AGC-D and press ■ or to select. 5 Do one of the following: Press to enable **Mic AGC-D**. The display shows ✓ beside Enabled. Press **I** to disable **Mic AGC-D**. The disappears from beside Enabled. Intelligent Audio


Your radio can automatically adjust its audio volume to overcome background noise in the environment, inclusive of all stationary and non-stationary noise

sources. This feature is a Receive-only feature and does not affect Transmit audio.

Note: This feature is not applicable during a Bluetooth session.

Toggle	Intelligent Audio On or Off.
--------	------------------------------

roggie intellige		
Radio Control	St	eps
Programmed Intelligent Audio Button		ess the programmed telligent Audio button.
Menu	1 2	■ or ▼ to Radio
	3	Settings and press To select.
		Settings and press 🔤 or select.

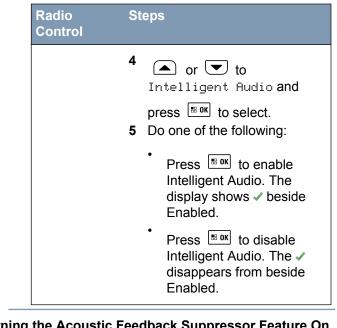

Turning the Acoustic Feedback Suppressor Feature On or Off

This feature allows you to minimize acoustic feedback in received calls.


Plus Mode Non-Connect Features in Advanced

124

Advanced Features in Non-Connect Plus Mode

Toggle the Acoustic Feedback Suppressor Feature On or Off by performing one of the following actions:

Radio Control	Steps
Programmed Acoustic Feedback Suppressor Button	Press the programmed Acoustic Feedback Suppressor button.
Menu	 1 BOK to access the menu. 2 or to Utilities and press BOK to select. 3 or to Radio Settings and press BOK to select. 4 or to AF Suppressor and press BOK to select.

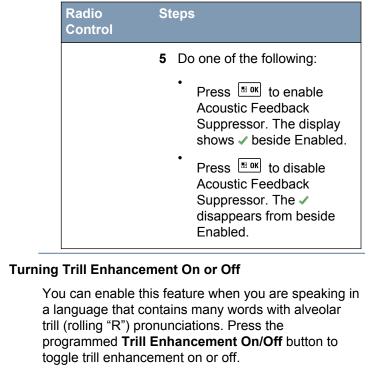

1

- 2 or to Utilities and press solution to select.
- or to Radio Settings and press
 to select.
- 4 or ▼ to Trill Enhance and press ™ ok to select.
- Press ^m ok to enable/disable Trill Enhancement.
 The display shows ✓ beside Enabled.
 - The ✓ disappears from beside Enabled.

Setting the Audio Ambience

You can customize your radio's audio ambience according to your environment.

 ${\tt Default}$ enables the default factory settings.

Loud enables Noise Suppressor and increases speaker loudness for use in noisy surroundings.

Work Group enables AF Suppressor and disables AGC for use when a group of radios are near to each other.

THE OK to access the menu.

1

- 2 or to Utilities and press solve to select.
- a or to Radio Settings and press
 to select.
- 4 or v to Rudio Ambience and press
- 5 \bigcirc or \bigcirc to the required setting and press

to select.

✓ appears beside selected setting.

Setting the Audio Profiles

You can customize your radio's audio profiles according to your preference.

English

Default disables the previously selected audio profile and the radio's audio profile returns to normal.

Level 1, Level 2, and Level 3 are audio profiles intended to compensate for noise-induced hearing loss that is typical for adults in their 40's, 50's, and 60's or over.

Treble Boost, Mid Boost, and Bass Boost are for a tinnier sound, a more nasal sound, and a deeper sound.

- 1 to access the menu.
- 2 or to Utilities and press with to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Audio Profiles and press

- ⁵ \frown or $\overline{}$ to the required setting and press
 - to select.
 - ✓ appears beside selected setting.

Turning the Global Positioning System (GPS) On or Off

GPS is a satellite navigation system that determines the radio's precise location. Press the programmed **GPS** button to toggle the feature on or off.

- 1 to access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to GPS and press ^{■ oK} to select.
- Fress oK to enable/disable GPS.
 The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

See *Checking the GPS Information* on page 130 for details on retrieving GPS information.

Flexible Receive List


Flexible Receive List is a digital-only (currently supported in Capacity Plus and Linked Capacity Plus) feature that allows you to add, delete or edit members on the receive talkgroup list. Your radio can support a maximum of 16 members in the list.

Turning the Flexible Receive List On or Off

You can enable and disable the Flexible Receive List if needed.

Enable the Flexible Receive List by performing one of the following actions:

Radio Control	Step	S
		s the programmed i ble Receive List button.
Menu	1	to access the menu.

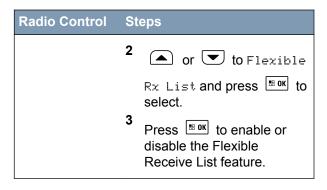

Previous display	Current display
Turn On	Flexible Rx List On
Turn Off	Flexible Rx List Off

Accessing General Radio Information

Your radio contains information on the following:

- · Radio Alias and ID
- Firmware and Codeplug Versions
- GPS Information
- Software Update
- Site Information

Press () at any time to return to the previous

screen or long press to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

Checking the Radio Alias and ID

This feature displays the ID of your radio.

Press the programmed **Radio Alias and ID** button to check your radio alias and ID. You hear a positive indicator tone.

Follow the procedure described next to access this feature via the radio screen.

E ok to access the menu.

1

- 2 or to Utilities and press select.
- 3 or ▼ to Radio Info and press ® ok to select.
- ⁴ ▲ or ▼ to My ID and press ^{■ ok} to select.

The first line of the display shows the radio alias. The second line of the display shows the radio ID.

You can also press the programmed **Radio Alias and ID** button to return to the previous screen.

Checking the Firmware Version and Codeplug Version

Displays the firmware version on your radio.

1 to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Info and press ^{■ oK} to select.
- 4 ▲ or ▼ to Versions and press ^{■ oK} to select.

The display shows the current firmware and codeplug versions.

Checking the GPS Information

Displays the GPS information on your radio, such as values of:

- Latitude
- Longitude
- Altitude
- Direction
- Velocity
- Horizontal Dilution of Precision (HDOP)
- Satellites
- Version
- 1 to access the menu.
- ² or to Utilities and press select.
- **3** or to Radio Info and press **BOK** to select.
- 4 ▲ or ▼ to GPS Info and press ™ to select.

or to the required item and press or to select.
 The display shows the requested GPS information.

See *Turning the Global Positioning System (GPS) On* or Off on page 127 for details on GPS.

Software Update

1

Displays the date and time of the latest software update carried out via Over-the-Air Programming.

Note: Software Update menu is only available after at least one successful OTAP session.

- [⊞] oK to access the menu.
- 2 ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Info and press ^{■ oK} to select.
- 4 or ▼ to SW Update and press or to select.

130

Φ

Mode

 
Plus

The display shows the date and time of the latest software update.

See Over-the-Air-Programming (OTAP) on page 109 for details on OTAP session.

Site Information

Displays the current Linked Capacity Plus site name your radio is on.



2 or to Utilities and press to select.

- ³ ▲ or ▼ to Radio Info and press ^{■ ok} to select.
- A or ▼ to Site Info and press ™ to select.
 The display shows the current Linked Capacity

Plus site name.

See Linked Capacity Plus on page 37 for details on Linked Capacity Plus.

Keypad Microphone Features

Using the Keypad

You can use the 3 x 4 alphanumeric keypad on the 4–Way Navigation Keypad Microphone (Motorola part number RMN5127_) to access your radio's features. You can use the keypad to enter subscriber aliases or IDs, and text messages. Many characters require that you press a key multiple times. The next table shows the number of times a key needs to be pressed to generate the required character.

Key	Number of Times Key is Pressed												
	1	2	3	4	5	6	7	8	9	10	11	12	13
1 ,.?	1	-	,	?	!	@	&	•	%		:	*	#
(2 ABC)	А	В	С	2									
DEF 3	D	E	F	3									
(4 GHI	G	Н	I	4									
(5 JKL	J	К	L	5									
MNO 6	М	Ν	0	6									


Key	Numbe	Number of Times Key is Pressed											
	1	2	3	4	5	6	7	8	9	10	11	12	13
Pars	Ρ	Q	R	S	7				·				
8 TUV	Т	U	V	8									
wxvz9	W	Х	Y	Z	9								
00	0	Note: Press to enter "0" and long press to activate the CAPS lock. Another long press to turn off the CAPS lock.											
*	* or del	Note: I reso during text entry to delete the ondraster. I reso during numerio entry to enter a											
₽	# or space	Note. These during text entry to insert a space. These during numeric entry to enter a # . Long											

Turning Keypad Tones On or Off

1

You can enable and disable keypad tones if needed.

THE OK to access the menu.

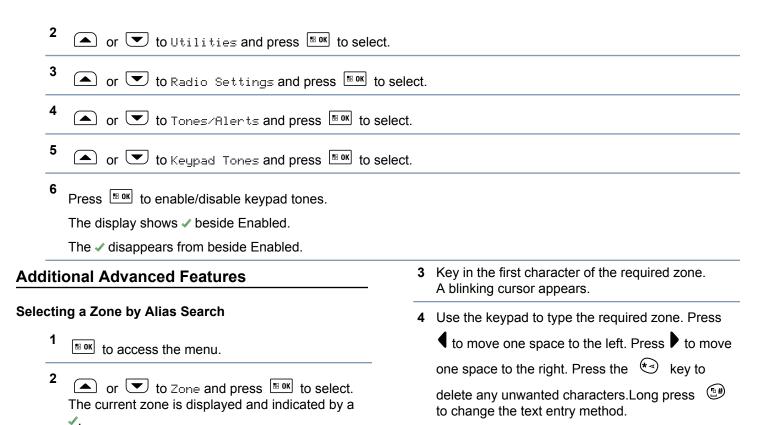

134

The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

Note: The alias search is case-insensitive. If there are two or more zones with the same name, the radio displays the zone that is listed first in the zone list.

5

to select.

The display shows <Zone> Selected momentarily and returns to the selected zone screen.

Initiating a Radio Check by Manual Dial 🖲

- 1 to access the menu.
- ² ▲ or ▼ to Contacts and press [■] to select.
- **3** or to Manual Dial and press **B** ok to select.

- 4 ▲ or ▼ to Radio Number and press ™ or to select.
- **5** Do one of the following:
 - If there was previously dialed ID, the ID appears along with a blinking cursor. Use the

keypad to edit the ID. Press 🖽 or select.

- Key in the subscriber alias or ID and press
 Image: Image of the subscriber alias or ID and press
- 6 or ▼ to Radio Check and press ® of to select.

The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.

7 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice.

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Note: If the **b** button is pressed when the radio is waiting for acknowledgement, a tone sounds and the radio terminates all retries and exits Radio Check mode.

Radio returns to the subscriber alias or ID screen.

Initiating a Remote Monitor by Manual Dial 🖲

- 1 to access the menu.
- ² ▲ or ▼ to Contacts and press ^{■ oK} to select.
- 3 or ▼ to Manual Dial and press ® ok to select.
- 4 ▲ or ▼ to Radio Number and press ^{■ oK} to select.
- **5** Do one of the following:
 - If there was previously dialed ID, the ID appears along with a blinking cursor. Use the
 - keypad to edit the ID. Press **BOK** to select.

- Key in the subscriber alias or ID and press
- 6 ▲ or ▼ to Remote Mon. and press ® oK to select.

The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.

7 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor. Once the timer expires, the radio sounds an alert tone and the LED turns off.

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Note: If the **b** button is pressed when the radio is waiting for acknowledgement, a tone sounds and the radio terminates all retries and exits Radio Check mode.

Radio returns to the subscriber alias or ID screen.

Making a Private Call by Manual Dial 💷

- 1 to access the menu.
- 2 or to Contacts and press to select.
- ³ ▲ or ▼ to Manual Dial and press ^{■ oK} to select.
- 4 or ▼ to Radio Number and press or to select.
- 5 Do one of the following:
 - If there was previously dialed ID, the ID appears along with a blinking cursor. Use the

keypad to edit the ID. Press **IN** to select.

- Key in the subscriber alias or ID and press
 - ₿ OK .

- 6 Press the **PTT** button to make the call. The green LED lights up. The display show the destination alias.
- 7 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 8 Release the **PTT** button to listen. When the target radio responds, the green LED blinks.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a programmed period of time, the call ends.

You hear a short tone. The display shows $\ensuremath{\texttt{Call}}$ Ended.

Making a Phone Call by Manual Dial 🖲

1

EOK to access the menu.

- ² ▲ or ▼ to Contacts and press ^{■ oK} to select.
- ³ ▲ or ▼ to Manual Dial and press ^{■ oK} to select.
- 4 or ▼ to Phone Number and press or to select.
- **5** Do one of the following:
 - The display shows Humber: The second line of the display shows a blinking cursor. Use the keypad to enter a telephone number and press

to proceed.

 If the access code was not preconfigured in the Contacts list, the first line of the display shows Access Code:. The second line of the display shows a blinking cursor. Enter the access code

and press **BOK** to proceed.

The green LED lights up. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status. If successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

6 Do one of the following:

Press 🖘 to end the call.

If deaccess code was not preconfigured in the Contacts list, the first line of the display shows De-Access Code:. The second line of the display shows a blinking cursor. Enter the

deaccess code and press 🔤 or to proceed. The radio returns to the previous screen.

 Press One Touch Access button. The DTMF tone sounds. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Call Ended. Your radio returns to the Phone Call screen.

If unsuccessful, your radio returns to the Phone Call screen. Repeat the step above or wait for the telephone user to end the call.

Note: When you press **PTT** button while in the Phone Contacts screen, a tone sounds and the display shows Press OK to Place Phone Call.

When the telephone user ends the call, a tone sounds and the display shows Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.

During the channel access, press () to dismiss the call attempt and a tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, you radio responds to **On/Off** button, **Volume Knob**, and **Channel Rocker** only. A tone sounds for every invalid input.

The access or deaccess code cannot be more than 10 characters.

Making a Phone Call with the One Touch Access Button

1 Press the programmed **One Touch Access** button to make a Phone Call to the predefined alias or ID.

If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

2 If the access code was not preconfigured in the Contacts list, the first line of the display shows Rccess Code:. The second line of the display shows a blinking cursor. Enter the access code

and **to** proceed.

The green LED lights up. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

If successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

- **3** Do one of the following:
 - Press (>*) to end the call.

If deaccess code was not preconfigured in the Contacts list, the first line of the display shows De-Access Code:. The second line of the display shows a blinking cursor. Enter the

deaccess code and press 🔲 or to proceed. The radio returns to the previous screen. Press One Touch Access button. The DTMF tone sounds. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Call Ended. Your radio returns to the Phone Call screen.

If unsuccessful, your radio returns to the Phone Call screen. Repeat the step above or wait for the telephone user to end the call.

Note: During the channel access, press (\mathfrak{S}) to dismiss the call attempt and a tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, you radio responds to **On/Off** button, **Volume Knob**, and **Channel Rocker** only. A tone sounds for every invalid input.

English

Features

Keypad Microphone

The access or deaccess code cannot be more than 10 characters.

Making a Group, Private or All Call with the Programmable Number Key

The Programmable Number Key feature allows you to make a Group, Private or All Call to a predefined alias or ID easily. This feature can be assigned to all the available number keys on a keypad microphone.

You can **ONLY** have one alias or ID assigned to a number key, but you can have more than one number key associated to an alias or ID.

When you are on the Home Screen:

1 Long press the programmed number key to make a Group, Private or All Call to the predefined alias or ID.

If the number key is not associated to an entry, a negative indicator tone sounds.

2 Press the PTT button to make the call.

The green LED lights up. The Group/Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text

line displays the call status for a Private Call or All Call for All Call.

- **3** Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
 - The Talk Permit Tone.
 - the **PTT** Sidetone (Group Call only).
- 4 Release the PTT button to listen.

When the target radio responds, the green LED blinks. The display shows the destination alias.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

For a Private Call, you hear a short tone when the call ends.

See Assigning an Entry to a Programmable Number Key on page 63 for details on assigning an entry to a number key on the keypad.

Making a Phone Call with the Programmable Phone Button

- 1 Press the programmed **Phone** button to enter into the Phone Entry list.
- a or to the required subscriber alias or
 ID, and press solve to select.

If the access code was not preconfigured in the Contacts list, the first line of the display shows Access Code:. The second line of the display shows a blinking cursor. Enter the access code

and press the solution to proceed.

The first line of the display shows Calling. The second line of the display shows the subscriber alias or ID, and the Phone Call icon.

If successful, The DTMF tone sounds. You hear the dialing tone of the telephone user. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line of the display shows Phone Call and the Phone Call icon,

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

- **3** Press the **PTT** to talk and release it to listen. The RSSI icon disappears during transmission.
- 4 To enter extra digits, if requested by the Phone Call, do one of the following.
 - Press any keypad key to begin the input of the extra digits. The first line of the display shows Extra Digits: The second line of the display shows a blinking cursor. Enter the extra digits

and press the **BOK** button to proceed. The DTMF tone sounds and the radio returns to the previous screen.

 Press One Touch Access button. The DTMF tone sounds. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.

5

Press () to end the call. If deaccess code was not preconfigured in the Contacts list, the first line of the display shows De-Rccess Code:. The second line of the display shows a blinking cursor.

Enter the deaccess code and press and to proceed. The radio returns to the previous screen.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Phone Call Ended. Your radio returns to the screen you were on prior to initiating the call.

If unsuccessful, your radio returns to the Phone Call screen. Repeat the Step 5 or wait for the telephone user to end the call.

When you press the **PTT** button while in the Phone Contacts screen, as tone sounds and the display shows Press OK to Place Phone Call.

When the telephone user ends the call, a tone sounds and the display shows Phone Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio

returns to the screen you were on prior to initiating the call.

Note: During the channel access, press (\mathfrak{b}) to dismiss the call attempt and a tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, you radio responds to **On/Off** button, **Volume Knob**, and **Channel Rocker** only. A tone sounds for every invalid input.

The access or deaccess code cannot be more than 10 characters.

Making a Phone Call from Contacts <a>!

[⊞] or access the menu.

1

2 or to Contacts and press of to select.

The entries are alphabetically sorted.

- **3** Do one of the following:
 - ▲ or ▼ to the required subscriber alias or ID.
 - ▲ or ▼ to Manual Dial and press ^{■ ok} to select.

▲ or ▼ to Phone Number and press

вок to select.

The first line of the display shows Phone Number: . The second line of the display shows a blinking cursor. Use the keypad to enter a telephone number.

4 Press Box to select.

> If the entry selected is empty, a negative indicator tone sounds and the display shows Phone Call Invalid #.

5 ▲ or ▼ to Call Phone and press ≞∝ to select.

If the access code was not preconfigured in the Contacts list, the first line of the display shows

Access Code:. The second line of the display shows a blinking cursor. Enter the access code

and press the **BOK** button to proceed.

The first line of the display shows Calling. The second line of the display shows the subscriber alias or ID, and the Phone Call icon.

If successful, The DTMF tone sounds. You hear the dialing tone of the telephone user. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line of the display shows Phone Call and the Phone Call icon.

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

Press the **PTT** button to talk and release it to 6 listen. The RSSI icon disappears during transmission.

7 To enter extra digits, if requested by the Phone Call, do one of the following.

• Press any keypad key to begin the input of the extra digits. The first line of the display shows Extra Digits: The second line of the display shows a blinking cursor. Enter the extra digits

and press the **BOK** button to proceed. The DTMF tone sounds and the radio returns to the previous screen.

- Press One Touch Access button. The DTMF tone sounds. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.
- 8

Enter the deaccess code and press **BOK** to proceed. The radio returns to the previous screen.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Phone Call Ended. Your radio returns to the Phone Call screen. If unsuccessful, your radio returns to the Phone Call screen. Repeat the Step 8 or wait for the telephone user to end the call.

When you press the **PTT** button while in the Phone Contacts screen, as tone sounds and the display shows Press OK to Place Phone Call.

When the telephone user ends the call, a tone sounds and the display shows Phone Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.

Note: During the channel access, press (\mathfrak{b}) to dismiss the call attempt and a tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, you radio responds to **On/Off** button, **Volume Knob**, and **Channel Rocker** only. A tone sounds for every invalid input.

The access or deaccess code cannot be more than 10 characters.

Making a Group, Private, Phone or All Call by Alias Search 🖲

п ок to access the menu.

1

2 or to Contacts and press of to select.

The entries are alphabetically sorted.

- **3** Do one of the following:
 - or To the required subscriber alias or ID.
 - or 💌 to Manual Dial and press 🖽 ok to select.



to select.

The first line of the display shows Phone Number: The second line of the display shows a blinking cursor. Use the keypad to enter a telephone number.

4 Press ^{■ oK} to select.

If the entry selected is empty, a negative indicator tone sounds and the display shows Phone Call Invalid #.

5 or to Call Phone and press with to select.

If the access code was not preconfigured in the Contacts list, the first line of the display shows Access Code:. The second line of the display shows a blinking cursor. Enter the access code

and press the **BOK** button to proceed.

The first line of the display shows Calling. The second line of the display shows the subscriber alias or ID, and the Phone Call icon.

14 Keypad Microphone

English

Features

If successful, The DTMF tone sounds. You hear the dialing tone of the telephone user. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line of the display shows Phone Call and the Phone Call icon,

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

6 Press the **PTT** button to talk and release it to listen.

The RSSI icon disappears during transmission.

- 7 To enter extra digits, if requested by the Phone Call, do one of the following.
 - Press any keypad key to begin the input of the extra digits. The first line of the display shows Extra Digits: The second line of the display shows a blinking cursor. Enter the extra digits

and press the **BOK** button to proceed. The DTMF tone sounds and the radio returns to the previous screen.

 Press One Touch Access button. The DTMF tone sounds. If the entry for the One Touch Access button is empty, a negative indicator tone sounds.

Enter the deaccess code and press $\boxed{18 \text{ ok}}$ to proceed. The radio returns to the previous screen.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Phone Call Ended. Your radio returns to the Phone Call screen.

If unsuccessful, your radio returns to the Phone Call screen. Repeat the Step 8 or wait for the telephone user to end the call.

When you press the **PTT** button while in the Phone Contacts screen, as tone sounds and the display shows Press OK to Place Phone Call. When the telephone user ends the call, a tone sounds and the display shows Phone Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.

Note: During the channel access, press (\mathfrak{b}) to dismiss the call attempt and a tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, you radio responds to **On/Off** button, **Volume Knob**, and **Channel Rocker** only. A tone sounds for every invalid input.

The access or deaccess code cannot be more than 10 characters.

Viewing an Entry in the Scan List by Alias Search

1 🗄 OK to access the menu 2 ▲ or ▼ to Scan and press ® to select. 3 ▲ or ▼ to Scan List and press ■ ok to select. **4** Key in the first character of the required alias. A blinking cursor appears. **5** Use the keypad to type the required alias. Press I to move one space to the left. Press to move one space to the right. Press (\star) to delete any unwanted characters. Long press (1) to change the text entry method. The first line of the display show the characters you keyed in. The next lines of the display show the shortlisted search results.

148

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Scan list.

Adding a New Entry to the Scan List

Editing the Scan List

1

 
2

3

4

[™] or access the menu.
▲ or ▼ to Scan and press ■ok to select.
▲ or ▼ to Scan List and press ^{■ ok} to select.
▲ or ▼ to Add Member and press ® ok to select.

- **5** Key in the first character of the required alias. A blinking cursor appears.
- 6 Use the keypad to type the required alias.



Press to move one space to the right.

Press to delete any unwanted characters.

Long press to change the text entry method.

The first line of the display show the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Scan list.

Press 🖽 to select.

⁸ \frown or $\overline{}$ to the required priority level and

press **B** ok to select.

The display shows positive mini notice, followed immediately by Rdd Rnother?.

9 Do one of the following:

▲ or ▼ to Yes and press ™ ok to select, to add another entry, and repeat Steps 5 to 8.

▲ or ▼ to No and press ■ or to select to save the current list.

Deleting an Entry from the Scan List

- 1 to access the menu.
- ² ▲ or ▼ to Scan and press ™ to select.
- ³ or to Scan List and press with to select.
- **4** Key in the first character of the required alias. A blinking cursor appears.
- **5** Use the keypad to type the required alias.
 - Press I to move one space to the left.
 - Press to move one space to the right.
 - Press (*) to delete any unwanted characters.
 - Long press to change the text entry method.

The first line of the display show the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Scan list.

6 Press ^{■ oK} to select.

7

- ▲ or ▼ to Delete and press [■] of to select.
- 8 At Delete Entry?, do one of the following:
 - or to Yes and press to select, to delete the entry. The display shows positive mini notice.

Repeat Steps 4 to 8 to delete other entries.

150

After deleting all required aliases or IDs, long

press the (>*) button to return to the Home Screen.

Setting and Editing Priority for an Entry in the Scan List

🖽 to access the menu.

1

- ² ▲ or ▼ to Scan and press ™ to select.
- ³ ▲ or ▼ to Scan List and press ^{■ oK} to select.
- **4** Key in the first character of the required alias. A blinking cursor appears.
- 5 Use the keypad to type the required alias.

Press I to move one space to the left.

- Press ▶ to move one space to the right.
- Press (*) to delete any unwanted characters.

Long press to change the text entry method.

The first line of the display show the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Scan list.

Press **IN to select**.

- 7 or to Edit Priority and press Bok to select.
- ⁸ \checkmark or \checkmark to the required priority level and

press **B** ok to select.

The display shows positive mini notice before returning to the previous screen.

The priority icon appears left of the member's name.

There is no priority icon if priority is set to None.

Storing an Alias or ID from a Call List

- 1 to access the menu.
- ² or to Call Log and press work to select.
- ³ or to the required list and press solutions to select.
- 4 or to the required alias or ID and press
 ^{E ok} to select.
- 6 If needed, key in the alias for the ID and press [■] OK to select.
 - The display shows positive mini notice.
 - You can also store an ID without an alias.

Making a Call Alert by Manual Dial 🖲

1

- **BOK** to access the menu.
- ² or to Contacts and press with to select.
- a or to Manual Dial and press to select.
 A blinking cursor appears.
- 4 Enter the subscriber ID you want to send the Call
 Alert to and press [■] ok
- 5 or to Call Alert and press work to select.

The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The green LED lights up when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

RSSI Values

Your radio shows the Received Signal Strength Indicator (RSSI) icon at the top of your display. This feature allows you to view the RSSI values.

When you are on the Home screen:

¹ Press ◀ three times (◀_◀_◀) and immediately press ▶ three times (▶_▶_▶), all within 5

seconds.

The display shows the current RSSI values.

2 Long press the ()) button to return to the Home screen.

See *Display Icons* on page 28 for details on the RSSI Icon.

Text Messaging 🖲

The **maximum** length of characters for a text message, including the subject line (seen when receiving message from an e-mail application), is **140**,

whereas to receive would be a maximum of **280** characters.

Note: The radio exits the current screen once the inactivity timer expires. Any text message in the writing/editing screen is automatically saved to the Drafts folder.

Writing and Sending a Text Message

2

select.

1 Access the Text Message feature.

Radio Controls	St	eps
Programmed Text Message button		ess the programmed Text essage button.
Menu	1 2	 ■ OK to access the menu. ▲ or ▼ to Messages and press ■ OK to select.
or 💌 to C	omp	ose and press ^{⊞ok} to

3 Use the keypad to type your message.

Press I to move one space to the left.

Press \blacktriangleright or the key to move one space to the right.

Press 🔄 to delete any unwanted characters.

- ⁴ Press ^Ⅲ once message is composed.
- 5 Do one of the following:
 - ▲ or ▼ to the required or ID and press

вок to select.

▲ or ▼ to Manual Dial and press ™ to select. Key in the subscriber ID and press

🗄 OK

to edit the message.

 (\mathfrak{S}) again to discard the message or save it to the Drafts folder.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Note: If the text message fails to send, the radio return you to the Resend option screen (see *Managing Fail-to-Send Text Messages* on page 82).

Replying to Text Messages from the Inbox

1 Access the Text Message feature.

Radio Controls	Steps
Programmed Text Message button	Press the programmed Text Message button.
Menu	1 to access the menu.

154

Features

Radio Controls Steps
2 or 💌 to
Messages and press 🖩 🗰 to select.
▲ or ▼ to Inbox and press ■ ok to select.
\frown or \bigcirc to the required message and press
For to select. A subject line may be shown if the message is from an e-mail application.
Press even once more to access the additional options.
• or • to Reply and press \bullet to select. A blinking cursor appears.
Use the keypad to type your message.
Press I to move one space to the left.

2

3

4

5

6

Press to move one space to the right.

Press 🔄 to delete any unwanted characters.

Long press 🖼 to change text entry method.

7 Press BOK once message is composed.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Note:

If the text message fails to send, the radio return you to the Resend option screen (see *Managing Fail-to-Send Text Messages* on page 158).

If a subject line is present (for messages received from an e-mail application), you cannot edit it.

Editing a Quick Reply Message

1 Access the **Text Message** feature.

Radio Controls Steps Programmed Text Message button Press the programmed Text Message button. Menu 1 Image: Steps Image: Steps</

- 2 ▲ or ▼ to Quick Reply and press ^{■ oK} to select.
- a or ▼ to the required Quick Text and press ™ ok to select. A blinking cursor appears.
- 4 Use the keypad to type your message.
 - Press I to move one space to the left.
 - Press to move one space to the right.

Press 🔄 to delete any unwanted characters.

Long press for the the the the text entry method.

5 Press **B** or composed.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Note:

If the text message fails to send, the radio return you to the Resend option screen (see *Managing Fail-to-Send Text Messages* on page 158).

Accessing the Drafts Folder

You can save a text message to send it at a later time.

If a **PTT** button press or a mode change causes the radio to exit the text message writing/editing screen while you are in the process of writing or editing a text

message, your current text message is automatically saved to the Drafts folder.

The most recent saved text message is always added to the top of the Drafts list. See *Accessing the Drafts Folder* on page 81.

Note: Long press ()) at any time to return to the Home screen.

Editing and Sending a Saved Text Message

- Press again while viewing the message.
- ² ▲ or ▼ to Edit and press ^{BOK} to select. A blinking cursor appears.
- **3** Use the keypad to type your message.

Press I to move one space to the left.

Press b to move one space to the right.

Press (*) to delete any unwanted characters.

Long press (to change text entry method.

- Press 🖽 once message is composed.
- **5** Do one of the following:

4

- ▲ or ▼ to the required alias or ID and press to select.
- or to Manual Dial and press work to select.

The first line of the display shows Radio Number:.

Key in the subscriber alias or ID and press

🗄 OK

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Note: If the text message fails to send, it is moved to the Sent Items folder and marked with a Send Failed icon.

Managing Fail-to-Send Text Messages

If the message fails to send, the radio returns you to the Resend option screen. You can select one of the following options while at the Resend option screen:

- Forward.
- Edit.

Forwarding a Text Message by Manual Dial

Select Forward to send the message to another subscriber/group alias or ID.

- 1 or to Forward and press to select.
- ² or to Manual Dial and press with to select.

The first line of the display shows Radio Number:

³ Key in the subscriber ID and press \blacksquare .

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Editing a Text Message

Select ${\tt Edit}$ to edit the message before sending it.

Note: If a subject line is present (for messages received from an e-mail application), you cannot edit it.

- 1 or to Edit and press to select. A blinking cursor appears.
- **2** Use the keypad to type the required alias.

Press 4 to move one space to the left.

- Press to move one space to the right.
- Press \bigstar to delete any unwanted characters.

158

Features

Keypad Microphone

Long press to change the text entry method.

- **3** Press **B** once message is composed.
- 4 Do one of the following:
 - or \checkmark to the required alias or ID and press $\blacksquare K$ to select.
 - or to Manual Dial and press solutions to select

The first line of the display shows Radio Number:.

- 5
- Key in the subscriber ID and press .

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Dual Tone Multi Frequency (DTMF)

The Dual Tone Multi Frequency (DTMF) feature allows the radio to operate in a radio system with an interface to telephone systems.


To initiate a DTMF call.

- 1 Press and hold the PTT button.
- 2 Enter the desired number, (*) or

You can turn off the DTMF tone by disabling all radio tones and alerts (see *Turning the Radio Tones/Alerts On or Off* on page 113).

Security 🖲

Radio Disable via Manual Dial

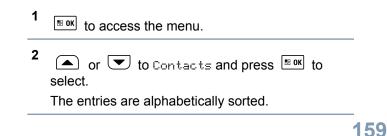

- ³ or to Manual Dial and press ^{BOK} to select.
- 4 or to Private Call and press Sok to select.

The first line of the display shows Radio Number:.

- 5 Key in the subscriber ID and press $\boxed{\text{E ok}}$.
- 6 or to Radio Disable and press sok to select.

The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.

7 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice.

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice. **Note:** Do not press (Interpretent interpretent interpret

Radio Enable via Manual Dial

- 1 to access the menu.
- 2 or to Contacts and press or to select.

The entries are alphabetically sorted.

- 3 or to Manual Dial and press work to select.
- 4 or to Private Call and press sort to select.

The first line of the display shows Radio Number:.

- 5 Key in the subscriber ID and press \blacksquare .
- 6 or to Radio Enable and press Solution to select.

Features

Keypad Microphone

The display shows Radio Enable and the subscriber alias or ID. The green LED blinks.

7 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice.

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Note: Do not press (5*) during the Radio Enable operation as you will not get an acknowledgement message.

Password Lock Features

If enabled, this feature only allows you access your radio if the correct password is entered upon powering up.

You can use a keypad microphone or Scroll Up/ Down buttons to enter password.

Accessing the Radio from Password

1 Power up your radio. You hear a continuous tone.

- **2** Do one of the following:
 - Enter your current four-digit password via keypad microphone. The display shows ••••.
 - Press **B** ok to proceed.
 - Enter your current four-digit password. Press

 \frown or \checkmark to edit each digit's numeric

value and **I** ok to enter the selected digit and move to the next digit. Each digit changes to ...

Press **I** to confirm your selection.

You hear a positive indicator tone for every digit

entered. Press • to remove each • on the display. You hear a negative indicator tone, if you

press when the line is empty, or if you press more than four digits.

If the password is correct, your radio proceeds to power up. See Powering Up the Radio on page 21.

If the password is incorrect, the display shows Wrong Password. Repeat Step 2.

After the third incorrect password, the display shows Wrong Password and then, shows Radio Locked. A tone sounds and the LED double blinks yellow.

Your radio enters into locked state for 15 minutes, and responds to inputs from **On/Off Button** and programmed **Backlight** button only.

Note:

The radio is unable to receive any call, including emergency calls, in locked state.

The use of **Emergency** footswitch cancels password input to access radio.

Unlocking the Radio from Locked State

Do one of the following.

Your radio restarts the 15 minutes timer for locked state when you power up.

- Wait for 15 minutes. Repeat Steps 1 to 2 in Accessing the Radio from Password on page 161.
- Power up the radio, if you have powered down the radio during locked state.

A tone sounds and the yellow LED double blinks. The display shows Radio Locked.

Wait for 15 minutes. Repeat *Accessing the Radio from Password* on page 161.

Turning the Password Lock On or Off

1

to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Settings and press
- 4 or to Passud Lock and press wor to select.
- 5 Enter a four-digit password.

See Step 2 in *Accessing the Radio from Password* on page 161.

6 If the password is correct, do one of the following.

Press to enable Password Lock. The display shows ✓ beside Enabled.

- Press [■] to disable Password Lock. The ✓ disappears from beside Enabled.
- 7 If the password is incorrect:

The display shows Wrong Password and automatically returns to the previous menu.

Changing the Password

- 1 to access the menu.
- ² or to Utilities and press work to select.
- ³ ▲ or ▼ to Radio Settings and press
- 4 or ▼ to Passwd Lock and press ^{■ oK} to select.

5 Enter your current four-digit password via keypad microphone.

See Step 2 in *Accessing the Radio from Password* on page 161.

6 Press to proceed.

If the password is incorrect, the display shows Wrong Password, and automatically returns to the previous menu.

7 If the password entered in the previous step is

correct, () or v to Change Pwd and press

to select.

8 Enter a new four-digit password via keypad microphone.

See Step 2 in *Accessing the Radio from Password* on page 161.

9 Re-enter the new four-digit password.

See Step 2 in *Accessing the Radio from Password* on page 161.

Press **BOK** to proceed.

If the reentered password matches the new password entered earlier, the display shows Password Changed.

If the reentered password does **NOT** match the new password entered earlier, the display shows Passwords Do Not Match.

The screen automatically returns to the previous menu.

Text Entry Configuration

You can configure the following settings for entering text on your radio:

- Word Correct
- Word Predict
- Sentence Cap
- My Words

Note:

Press ()) at any time to return to the previous screen.

Long press ()) at any time to return to the Home screen.

The radio exits the current screen once the inactivity timer expires.

Word Correct

1

Supplies alternative word choices when the word entered into the text editor is not recognized by the inbuilt dictionary.

THE OK to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Settings and press ■ ok to select.
- 4 ▲ or ▼ to Text Entry and press of to select.
- 5 or v to Word Correct and press sok to select.

You can also use \P or \blacktriangleright to change the selected option.

6 Do one of the following:

Press [■] to enable Word Correct. The display shows ✓ beside Enabled.

Press ^{■ ok} to disable Word Correct. The ✓ disappears from beside Enabled.

Word Predict

1

Your radio can learn common word sequences that you often enter. It then predicts the next word you may want to use after you enter the first word of a common word sequence into the text editor.

<sup>
∎</sup> o^K to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ or v to Radio Settings and press

to select.

- 4 ▲ or ▼ to Text Entry and press [■]of to select.
- 5 or to Word Predict and press with to select.

You can also use \P or \blacktriangleright to change the selected option.

- 6 Do one of the following:
 - Press [■] to enable Word Predict. The display shows ✓ beside Enabled.
 - Press **Box** to disable Word Predict. The *✓* disappears from beside Enabled.

Sentence Cap

1

Automatically enables capitalization for the first letter in the first word for every new sentence.

B ok to access the menu.

- 2 or to Utilities and press BOK to select.
- 3 or to Radio Settings and press
- 4 or to Text Entry and press Box to select.
- 5 or to Sentence Cap and press solutions to select.

You can also use \P or \blacktriangleright to change the selected option.

- 6 Do one of the following:
 - Press ^{■ ok} to enable Sentence Cap. The display shows ✓ beside Enabled.
 - Press ^{■ out} to disable Sentence Cap. The ✓ disappears from beside Enabled.

Viewing Custom Words

You can add your own custom words into your radio's in-built dictionary. Your radio maintains a list to contain these words.

- 1 to access the menu.
- 2 or to Utilities and press solve to select.
- ³ ▲ or ▼ to Radio Settings and press
- or to Text Entry and press with to select.
- 5 or ▼ to My Words and press ® ok to select.
- 6 or ▼ to List of Words and press ^{■ oK} to select. Display shows the list of custom words.

166

Editing Custom Word

You can edit the custom words saved in your radio.

- 1 to access the menu.
- 2 or to Utilities and press wor to select.
- **a** or **v** to Radio Settings and press

вок to select.

- 4 ▲ or ▼ to Text Entry and press ™ ok to select.
- 5 or to My Words and press select.
- 6 ▲ or ▼ to List of Words and press ™ ok to select.

Display shows the list of custom words.

7 or to the required word and press [≝] oK to select. 8 ▲ or ▼ to Edit and press ®ok to select. Use the keypad to edit your custom word. 9 ٠ Press I to move one space to the left. Press **b** or **b** to move one space to the right. Press 🕙 to delete any unwanted characters. (Ŀ#) to change text entry method. Long press 10 Press once your custom word is complete. The display shows transitional mini notice, confirming your custom word is being saved. If the custom word is saved, a tone sounds and the display shows positive mini notice.

If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

Adding Custom Words

You can add your own custom words into your radio's in-built dictionary.

- 1 to access the menu.
- 2 or to Utilities and press solve to select.
- or to Radio Settings and press
 to select.
- 4 or to Text Entry and press with to select.
- 5 or ▼ to My Words and press ™ or to select.
- 6 ▲ or ▼ to Add New Word and press ™ ok to select.

Display shows the list of custom words.

7 Use the keypad to edit your custom word.

Press \P to move one space to the left. Press \blacktriangleright or the fr key to move one space to the right. Press the fr key to delete any unwanted characters. Long press fr to change text entry method. Press fr once your custom word is completed.

The display shows transitional mini notice, confirming your custom word is being saved.


If the custom word is saved, a tone sounds and the display shows positive mini notice.

If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

Deleting a Custom Word

You can delete the custom words saved in your radio.

вок to access the menu.

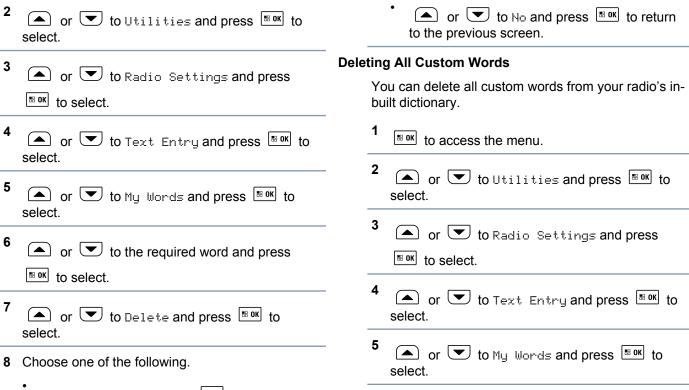

At Delete Entry?, press and to select Yes. The display shows Entry Deleted.

169

- 6 ▲ or ▼ to Delete All and press ■ to select.
- 7 Choose one of the following.
 - At Delete Entry?, press Box to select Yes. The display shows All Entries Deleted.
 - ▲ or ▼ to No and press or to return to the previous screen.

Front Panel Configuration (FPC)

Your radio is able to customize certain feature parameters to enhance the use of your radio.

Entering FPC Mode

Note: Long press (>*) at any time to return to the Home screen.

- 88 OK to access the menu.
 - ▲ or ▼ to Utilities and press ≞∝ to
 - select.

2

3 🔺 or 💌 to Program Radio and press 🔤 ĸ to select.

Editing FPC Mode Parameters

Use the following buttons as required while navigating through the feature parameters.

- $(\bullet, , , \bullet, \bullet, \bullet)$ Scroll through options, increase/decrease values, or navigate vertically.
- 🗷 or 📕 Select the option or enter a sub-menu.
- (5) Short-press to return to previous menu or to exit the selection screen. Long-press to return to Home screen.

Connect Plus Operations

Additional Radio Controls in Connect Plus Mode

Push-To-Talk (PTT) Button

The **PTT** button on the side of the radio (B) serves two basic purposes:



• While a call is in progress, the **PTT** button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.

The microphone is activated when the **PTT** button is pressed.

 While a call is not in progress, the PTT button is used to make a new call (see *Making a Radio Call* on page 185).

If the Talk Permit Tone is enabled, wait until the short alert tone ends before talking.

Programmable Buttons

Your dealer can program the programmable buttons as shortcuts to **radio functions** depending on the duration of a button press:

- Short press Pressing and releasing rapidly.
- Long press Pressing and holding for the programmed duration.
- Hold down Keeping the button pressed.

Note: The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See *Emergency Operation* on page 212 for more information on the programmed duration of the **Emergency** button.

Assignable Radio Functions

ignable Radio Functio	ons	Manual Dial	Depending on the
Bluetooth [®] Audio Switch	Toggles audio routing between internal radio speaker and external Bluetooth-enabled accessory.		programming, initiates a Private or Phone Call by keying in any subscriber ID or phone number.
Busy Queue Cancellation	Exits the busy mode when a non-Emergency call in the Busy Queue was initiated.	One Touch Access	Directly initiates a predefined Private Call, a Call Alert or a Quick Text message.
	Emergency calls, once	Privacy	Toggles privacy on or off.
	accepted into the Busy Queue, cannot be cancelled.	Radio Check	Determines if a radio is active in a system.
Call Log	Selects the call log list.	Radio Enable	Allows a target radio to be
Contacts	Provides direct access to the		remotely enabled.
	Contacts list.	Radio Disable	Allows a target radio to be
Emergency On/Off	Depending on the		remotely disabled.
	programming, initiates or cancels an emergency.	Remote Monitor	Turns on the microphone of a target radio without it giving
Horns/Lights	Toggles horns and lights		any indicators.
	feature on or off.	Roam Request	Requests to search for a
Intelligent Audio	Toggles intelligent audio on or		different site.
	off.	Scan	Toggles scan on or off.

	Site Lock On/Off	When toggled on, the radio searches the current site only.	All Tones/Alerts	Toggles all tones and alerts on or off.
		When toggled off, the radio searches other sites in addition to the current site.	Backlight Brightness	Adjusts the brightness level.
	Text Message	Selects the text message menu.	Channel Up/ Down	Depending on the programming, changes channel to previous or next channel.
	Voice Announcement for Channel	Plays zone and channel announcement voice messages for the current	Display Mode	Toggles the day/night display mode on or off.
		channel. This function is unavailable when Voice Announcement is disabled.	Global Positioning System (GPS)	Toggles the satellite navigation system on or off.
	Voice Announcement	Toggles voice announcement on or off.	Power Level	Toggles transmit power level between high and low.
	On/Off Zone	Allows selection from a list of zones.	Unassigned	Indicates that the button function has not yet been assigned.
Assi	gnable Settings or U	tility Functions	Identifying Status In	dicators in Connect Plus
	Toggles the Acoustic Feedback	Mode		
	Suppressor feature on or off.	Display Icons		

Display Icons

The following are icons that appear on the radio's display.

Ы

Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.

Bluetooth


The Bluetooth feature is enabled but there is no remote Bluetooth device connected.

Bluetooth Connected

The Bluetooth feature is enabled. The icon stays lit when a remote Bluetooth device is connected.



Notification List has items to review.

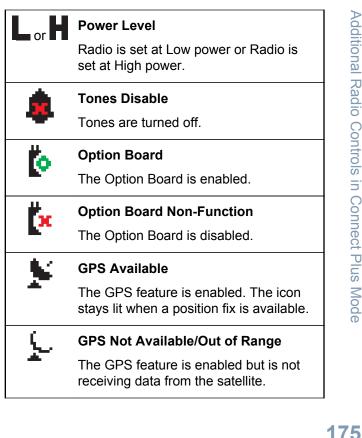



Scan

Scan feature is enabled.

Emergency

Radio is in Emergency mode.

Secure Secure

The Privacy feature is enabled.



Unsecure

The Privacy feature is disabled.

Site Roaming

The site roaming feature is enabled.

Call Icons

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate ID type.

Private Call

Indicates a Private Call in progress. In the Contacts list, it indicates a subscriber alias (name) or ID (number).



Group Call/Site All Call

Indicates a Group Call or Site All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).



Phone Call as Private Call

Indicates a Phone Call as Private Call in progress.



Dispatch Call

The Dispatch Call contact type is used to send a text message to a dispatcher PC through a third-party Text Message Server.

176

Advanced Menu Icons

The following icons appear beside menu items that offer a choice between two options or as an indication that there is a sub-menu offering two options.

Checkbox (Empty)

Indicates the option is not selected.

Checkbox (Checked)

Indicates the option is selected.

Solid Black Box

Indicates the option selected for the menu item with a sub-menu.

Sent Item Icons

The following icons appear at the top right corner of the radio's display in the Sent Items folder.



Sent Successfully

The text message is sent successfully.

Bluetooth Device Icons

The following icons also appear next to items in the list of Bluetooth-enabled devices available to indicate the device type.



Bluetooth Data Device

Bluetooth-enabled data device, such as a scanner.



Bluetooth Audio Device

Bluetooth-enabled audio device, such as a headset.




Bluetooth PTT Device

Bluetooth-enabled PTT device, such as a PTT-Only Device (POD).

LED Indicator

The LED indicator $(\textcircled{\ensuremath{\mathbb{B}}})$ shows the operational status of your radio.

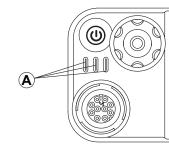


Blinking red	Radio is transmitting at low battery condition, receiving an emergency transmission or has failed the self- test upon powering up, or has moved out of range if radio is configured with Auto-Range Transponder System.
Rapidly	Radio is receiving over-the-air file

blinking red transfer (Option Board firmware file, Network Frequency file or Option

	Board Codeplug file) or upgrading to a new Option Board firmware file.
Blinking green and yellow	Radio is receiving a Call Alert, received a text message or Scan is enabled and is receiving activity.
Solid yellow	Radio is in Bluetooth Discoverable Mode.
Double blinking yellow	Radio is actively searching for a new site.
Blinking yellow	Radio is receiving a Call Alert or Scan is enabled and is idle (radio will remain muted to any activity).
Solid green	Radio is powering up or transmitting.
Blinking green	Radio is powering up, receiving a non-privacy- enabled call or data.
Double blinking green	Radio is receiving a privacy-enabled call.

 Indicator Tones



Audio Tones

Audio tones provide you with audible indications of the status, or response to data received on the radio.

Continuous Tone	A monotone sound. Sounds continuously until termination.
Periodic Tone	Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.
Repetitive Tone	A single tone that repeats itself until it is terminated by the user.

Momentary Tone Sour short

Sounds only once for a short period of time defined by the radio.

Switching Between Connect Plus and Non-Connect Plus Modes

To switch to a non-Connect Plus mode, you must change to another zone, if programmed by your dealer or system administrator. Check with your dealer or system administrator to see if your radio has been programmed with non-Connect Plus zones, and what features are available while operating in non-Connect Plus zones.

English

Making and Receiving Calls in Connect Plus Mode

Selecting a Site

A site provides coverage for a specific area. A Connect Plus site has a site controller and a maximum of 15 repeaters. In a multi-site network, the Connect Plus radio will automatically search for a new site when the signal level from the current site drops to an unacceptable level.

Roam Request

A Roam Request tells the radio to search for a different site, even if the signal from the current site is acceptable.

If there are no sites available,

- The radio display shows Searching and continues to search through the list of sites.
- The radio will return to the previous site, if the previous site is still available.

Note: This is programmed by your dealer.

Press the programmed **Roam Request** button. You hear a tone, indicating the radio has switched to a new site. The display shows Site ID <Site Number>.

Site Lock On/Off

When toggled on, the radio searches the current site only. When toggled off, the radio searches other sites in addition to the current site.

Press the programmed Site Lock button.

- You hear a positive indicator tone, indicating the radio has locked to the current site. The display shows Site Locked.
- You hear a negative indicator tone, indicating the radio is unlocked. The display shows Site Unlocked.

Site Restriction

Your Connect Plus radio system administrator has the ability to decide which network sites your radio is and is not allowed to use. Your radio does not need to be reprogrammed to change the list of allowed and disallowed sites. If your radio attempts to register at a disallowed site, you see a brief message stating:

English

Site <number given> Not Allowed. The radio then searches for a different network site.

Selecting a Zone

The radio can be programmed with a maximum of 16 Connect Plus Zones and each Connect Plus zone contains a maximum of 16 assignable positions on the Channel Selector Knob.

Each assignable knob position can be used to start one of the following voice call types:

- Group Call
- Multigroup Call
- Site All Call
- Private Call
- 1 Access the Zone feature by performing one of the following actions:


Radio Controls	Steps
Programmed Zone button	Press the programmed Zone button.
Radio menu	1 sourcess the menu.



The current zone is displayed and indicated by a \checkmark .

2 Select the required zone. Radio Control Steps

▲ or ▼	 or and scroll to the
	required zone.

 

Using Multiple Networks

If your radio has been programmed to use multiple Connect Plus networks, you can select a different network by switching to the Connect Plus zone that is **181**



Plus Mode Connect Calls in Receiving and Making

182

assigned to the desired network. These network-tozone assignments are configured by your dealer through radio programming.

Selecting a Call Type

Use the Channel Selector Knob to select a call type. This can be a Group Call, Multi-group Call, Site All Call or Private Call, depending on how your radio is programmed. If you change the Channel Selector Knob to a different position (that has a call type assigned to it), this causes the radio to re-register with the Connect Plus site. The radio registers with the Registration Group ID that has been programmed for the new Channel Selector Knob position call type.

If you select a position that has no call type assigned to it, your radio sounds a continuous tone and the display shows Unprogrammed. Your radio does not operate when selected to an unprogrammed channel, use the Channel Selector Knob to select a programmed channel instead.

Once the required zone is displayed (if you have multiple zones in your radio), turn the programmed Channel Selector Knob to select the call type.

Receiving and Responding to a Radio Call

Once the channel, subscriber ID or call type is displayed, you can proceed to receive and respond to calls.

The LED lights up solid green while the radio is transmitting and blinks green when the radio is receiving.

Note: The LED lights up solid green while the radio is transmitting and double blinks green when the radio is receiving a privacy-enabled call. To unscramble a privacy-enabled call, your radio must have the same Privacy Key, OR the same Key Value and Key ID (programmed by your dealer), as the transmitting radio (the radio you are receiving the call from).

Note: See *Privacy* on page 228 for more information.

Receiving and Responding to a Group Call

To receive a call from a group of users, your radio must be configured as part of that group.

When you receive a Group Call (while on the Home screen), the LED blinks green. The Group Call icon appears in the top right corner. The first text line

shows the caller alias. The second text line displays the group call alias. Your radio unmutes and the incoming call sounds through the radio's speaker.

- Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth. The LED lights up solid green.
- 2 Wait for one of the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 3 Release the PTT button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

Note: See *Making a Group Call* on page 186 for details on making a Group Call.

Receiving and Responding to a Private Call

A Private Call is a call from an individual radio to another individual radio.

When you receive a Private Call, the LED blinks green. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line displays Private Call and the Private Call icon. Your radio unmutes and the incoming call sounds through the radio's speaker.

- **1** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 2 Press the **PTT** button to respond to the call. The LED lights up solid green.
- **3** Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 4 Release the PTT button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows Call Ended.

See *Making a Private Call* on page 186 for details on making a Private Call.

Receiving a Site All Call

A Site All Call is a call from an individual radio to every radio on the site. It is used to make important announcements requiring the user's full attention.

When you receive an Site All Call, a tone sounds and the LED blinks green.

The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays Site All Call. Your radio unmutes and the incoming call sounds through the radio speaker.

Once the Site All Call ends, the radio returns to the previous screen before receiving the call. A Site All Call does not wait for a predetermined period of time before ending.

You cannot respond to an Site All Call.

Note: See *Making a Site All Call* on page 187 for details on making a Site All Call.

Note: The radio stops receiving the Site All Call if you switch to a different channel while receiving the call. During a Site All Call, you will **not** be able to use any programmed button functions until the call ends.

Receiving an Inbound Private Phone Call

When you receive an Inbound Private Phone Call, the Phone Call as Private Call icon appears in the top right corner. The first text line shows Phone Call.

1 Press and hold down **PTT** button to answer and talk. Release the **PTT** button to listen.

_

2

Long press (5*) to end the call. The first line of the display shows Ending. The second line of the display shows Phone Call.... The display returns to the Phone Call screen.

The display shows Phone Call Ended.

Making a Buffered Over-Dial in an Inbound Phone Private Call

During the call, the Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows Phone Call.

1 Use the keypad to enter the digits and press the

вок button.

Press \bigstar followed by b within 2 seconds to insert a pause. The P replaces \ast and \ddagger on the display.

The Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the entered digits.

2 Long press کی to end the call.

The first line of the display shows Ending. The second line of the display shows Phone Call..... The display returns to the Phone Call screen.

The display shows Phone Call Ended.

Making a Live Over-Dial in an Inbound Phone Private Call

During the call, the Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows Phone Call.

1 Press the **PTT** button and use the keypad to enter the digits.

The Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the Live Dial digits.

2

Long press (>*) to end the call.

The first line of the display shows Ending. The second line of the display shows Phone Call.... The display returns to the Phone Call screen.

The display shows Phone Call Ended.

Receiving an Inbound Phone Talkgroup Call

When you receive an Inbound Phone Talkgroup Call, the Group Call icon appears in the top right corner. The first text line shows Call1.

Press the **PTT** button to talk and release it to listen.

Inbound Phone Multi-Group Call

When you receive an Inbound Phone Multi-Group Call, the Group Call icon appears in the top right corner. The first text line shows Multigroup Call. The radio unmutes and the incoming multi-group call sounds through the radio's speaker.

Making a Radio Call

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- The Channel Selector Knob.
- A programmed One Touch Access button The One Touch Access feature allows you to make a Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can ONLY have one ID assigned to a One Touch Access button. Your

radio can have multiple **One Touch Access** buttons programmed.

• The Contacts list (see *Contacts Settings* on page 204).

Note: Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Key Value and Key ID as your radio will be able to unscramble the transmission.

Note: See *Privacy* on page 228 for more information.

Making a Call with the Channel Selector Knob

Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

- 1 Select the channel with the active group alias or ID. See Selecting a Call Type on page 182.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the PTT button to make the call.

The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows the group call alias.

- **4** Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 5 Release the PTT button to listen.

When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker. You see the Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

Making a Private Call

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

You will hear a negative indicator tone, when you make a Private Call via the **One Touch Access** button, or the Channel Selector Knob, if this feature is not enabled.

186

- 1 Do one of the following.
 - Select the channel with the active subscriber alias or ID. See Selecting a Call Type on page 182.
 - Press the programmed **One Touch Access** button.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Private Call icon appears on the top right corner. The first text line shows the target subscriber alias. The second text line displays the call status.
- **4** Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 5 Release the PTT button to listen.

When the target radio responds, the LED blinks green.

If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows Call Ended.

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

Making a Site All Call

This feature allows you to transmit to all users on the site that are currently not engaged in another call. Your radio must be programmed to allow you to use this feature.

Users on the channel/site cannot respond to an Site All Call.

- 1 Select the channel with the active Site All Call group alias. See *Selecting a Call Type* on page 182.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows Site All Call.
- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

Making a Multi-group Call

This feature allows you to transmit to all users on multiple groups. Your radio must be programmed to allow you to use this feature.

Note: Users on the groups cannot respond to a Multigroup Call.

- 1 Turn the Channel Selector Knob to select the Multi-group alias or ID.
- 2 Press the PTT button to make the call.

The LED lights up solid green. The display shows the Multi-group alias or ID.

Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

Making a Private Call with a One Touch Call Button

Note: Programmable buttons press must be initiated from the Home screen.

The One Touch Call feature allows you to easily make a Private Call to a pre-defined Private Call alias or ID. This feature can be assigned to a short or long programmable button press. You can ONLY have one alias or ID assigned to a One Touch Call button. Your radio can have multiple One Touch Call buttons programmed.

- 1 Press the programmed **One Touch Call** button to make a Private Call to the pre-defined Private Call alias or ID.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- **3** Press the **PTT** button to make the call.

The LED lights up solid green.

The display shows the Private Call alias or ID.

- **4** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 5 Release the PTT button to listen.

When the target radio responds, the LED blinks green.

If there is no voice activity for a predetermined period of time, the call ends.

Making a Call with the Programmable Manual Dial Button

Mode

Plus

Making a Private Call

- 1 Press the programmed **Manual Dial** button to enter into the Manual Dial screen. The display shows Number:.
- **2** Use the keypad to enter a subscriber alias or Private ID.
- **3** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 Press the **PTT** button to make the call. The LED lights up solid green. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- **5** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 6 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green.

If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows Call Ended.

Making an Outbound Private Phone Call with the Programmable Manual Dial Button

- 1 Press the programmed **Manual Dial** button to enter into the Manual Dial screen. The display shows Number:.
- 2 Use the keypad to enter a telephone number, and press To place a call to the entered number.

Press 4 to delete any unwanted characters. Press

followed by within 2 seconds to insert a pause. The P replaces * and # on the display.

If successful, the first line of the display shows Phone Call. The second line of the display shows the dialed telephone number.

If an invalid telephone number is selected, the display shows a negative mini notice, Phone Call Failed, Resource Not Available, or Invalid Permissions.

If **BOK** is pressed with no telephone number entered, the radio sounds a positive indicator tone

2

then a negative indicator tone. The display remains the same.

The first line of the display shows Ending. The second line of the display shows Phone Call....

The display shows Phone Call Ended.

Making an Outbound Private Phone Call via the Phone Menu

- to access the menu.
 - ▲ or ▼ to Phone and press ™ to select.
- Press To select Manual Dial. The first line of the display shows Number, the second line of the display shows a blinking cursor.
- Use the keypad to enter a telephone number, and press [■] or to place a call to the entered number.

Press I to delete any unwanted characters. Press

 \bigstar followed by within 2 seconds to insert a pause. The P replaces \ast and \ddagger on the display.

If successful, the first line of the display shows Phone Call. The second line of the display shows the dialed telephone number.

If an invalid telephone number is selected, the display shows a negative mini notice, Phone Call Failed, Resource Not Available, or Invalid Permissions.

If **s** ok is pressed with no telephone number entered, the radio sounds a positive indicator tone then a negative indicator tone. The display remains the same.

5 Long press کی to end the call.

 
The first line of the display shows Ending. The second line of the display shows Phone Call....

The display shows Phone Call Ended.

190

Making an Outbound Private Phone Call from Contacts

Note: If the Phone Manual Dial is disabled in MOTOTRBO Connect Plus Option Board CPS, the Phone Number item will **not** be displayed in the Menu.



- ² ▲ or ▼ to Contacts and press [■] or to select.
- ³ ▲ or ▼ to Manual Dial and press ^{■ oK} to select.
- 4 or to Phone Number and press Bok to select.

The first line of the display shows Number, the second line of the display shows a blinking cursor.

5 Use the keypad to enter a telephone number, and press ^{■ oK} to place a call to the entered number.

If the **PTT** button is pressed, the display shows a negative mini notice, Press OK to Send and returns to the previous screen.

Press 4 to delete any unwanted characters. Press

followed by within 2 seconds to insert a pause. The P replaces \ast and \ddagger on the display.

If successful, the first line of the display shows Phone Call. The second line of the display shows the dialed telephone number.

If **INT** is pressed with no telephone number entered, the radio sounds a positive indicator tone then a negative indicator tone. The display remains the same.

6 Long press (هَ الله to end the call.

The first line of the display shows Ending. The second line of the display shows Phone Call....

The display shows Phone Call Ended.

Waiting for the Channel Grant in an Outbound Private Phone Call

When you make a Private Phone Call, the first line of the display shows Phone Call. The second line of the display shows the dialed telephone number.

When the call is connected, the Phone Call as Private Call icon appears in the top right corner. The first line of the display shows the telephone number.

If unsuccessful, the display shows a negative mini notice, Phone Call Failed, Resource Not Available, **or** Invalid Permissions.

Long press (>*) to end the call.

The display returns to the previous screen.

Making a Buffered Over-Dial in a Connected Outbound Private Phone Call

During the call, the Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the telephone number.

1 Use the keypad to enter the digits.

Press • to delete any unwanted characters. Press

 \bigstar followed by within 2 seconds to insert a pause. The P replaces \ast and \ddagger on the display.

The first text line of the display shows Extra Digits, the second text line of the display shows the entered extra digits.

² Press the [⊞] oK button.

If the **PTT** button is pressed, the display shows a negative mini notice, Press OK to Send and returns to the previous screen.

The Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the telephone number with the over-dial digits appended.

- **3** Do one of the following.

 - Long press 💿 to end the call.

Making a Live Over-Dial in a Connected Outbound Private Phone Call

During the call, the Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the telephone number.

1 Press the **PTT** button and use the keypad to enter the digits.

The Phone Call as Private Call icon appears in the top right corner. The first text line of the display shows the telephone number with the over-dial digits appended.

2

Long press $(\mathfrak{S} \mathfrak{A})$ to end the call.

The first line of the display shows Ending. The second line of the display shows Phone Call....

The display shows Phone Call Ended.

Advanced Features in Connect Plus Mode

Auto Fallback

Auto Fallback is a system feature that allows you to continue to make and receive non-emergency calls on the selected Group Contact in the event of certain types of Connect Plus system failures.

If one of these failures occurs, your radio attempts to roam to a different Connect Plus site. This search process may result in your radio finding an operable Connect Plus site, or it may result in your radio finding a "Fallback Channel" (if your radio is enabled for Auto Fallback). A Fallback Channel is a repeater that is normally part of an operable Connect Plus site, but is currently unable to communicate with either its site controller or the Connect Plus network. In Fallback mode, the repeater operates as a single digital repeater. Auto Fallback Mode supports nonemergency Group Calls only. No other call types are supported in Fallback Mode.

Indications of Auto Fallback Mode

When your radio is using a Fallback channel, you hear the intermittent "Fallback Tone" approximately once every 15 seconds (except while transmitting). The display periodically shows a brief message, "Fallback Channel". Your radio only permits PTT on the selected Group Contact (Group Call, Multigroup Call, or Site All Call). It does not allow you to make other types of calls.

Making/Receiving Calls in Fallback Mode

Note: Calls are heard only by radios that are monitoring the same Fallback channel and selected to the same Group. Calls are not networked to other sites or other repeaters.

Emergency voice calls or Emergency Alerts are not available in Fallback mode. If you press the emergency button in Fallback mode, the radio provides an invalid key press tone. Display-equipped radios also show the message, "Feature not available".

Private (radio to radio) and Phone calls are not available in Fallback mode. If you attempt a call to a private contact, you will receive a denial tone. At this

point you should select a desired group contact. Other non-supported calls include Remote Monitor, Call Alert, Radio Check, Radio Enable, Radio Disable, Text messaging, Location Updates, and packet data calls.

Enhanced Traffic Channel Access (ETCA) is not supported in Auto Fallback mode. If two or more radio users press **PTT** at the same time (or at almost the same time), it is possible that both radios transmit until **PTT** is released. In this event, it is possible that none of the transmissions will be understood by receiving radios.

Making calls in Fallback mode is similar to normal functioning. Simply select the group contact you wish to use (using the radio's normal channel selection method), and then press the **PTT** to start your call. It is possible that the channel may be in use already by another group. If the channel is in use, you receive a busy tone and the display will say "Channel Busy". You may select Group, Multi-group or Site All Call contacts using your radio's normal channel selection method. While the radio is operating on the Fallback Channel, the Multigroup operates just like other Groups. It is only heard by radios that are currently selected to the same Multi-group.

Returning to Normal Operation

If the site returns to normal trunking operation while you are in range of your Fallback repeater, your radio automatically exits Auto Fallback mode. You hear a registration "beep" when the radio successfully registers. If you are in the range of an operable site (that is not in Fallback mode), you may press the Roam Request button (if programmed for your radio) to force your radio to search for and register on an available site. If no other site is available, your radio returns to Auto Fallback mode after searching is complete. If you drive out of coverage of your Fallback repeater, your radio enters Search mode (display indicates "Searching").

Radio Check

If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

This feature is only applicable for subscriber aliases or IDs.

Sending a Radio Check

1 Access the Radio Check feature.

Radio Control	St	eps
Programmed Radio Check button	1 2	Press the programmed Radio Check button. or to the required subscriber alias or ID and press or to select.
Menu	1 2 3 4	 to access the menu. or to Contacts and press or to to select. or to the required subscriber alias or ID and press or to select. or to Radio
		Check and press Box to select.

The display shows the Target Alias, indicating the request is in progress. The LED lights up solid green.

2 Wait for acknowledgement.

If the target radio is active in the system, a tone sounds and the display briefly shows Target Radio Available.

If the target radio is not active in the system, a tone sounds and the display briefly shows Target Radio Not Available.

Radio returns to the subscriber alias or ID screen when initiated via Menu.

Radio returns to the Home Screen if initiated via the programmable button.

Remote Monitor


Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber alias or IDs only). The green LED will blink once on the target subscriber. You can use this feature to monitor, remotely, any audible activity surrounding the target radio.


Your radio must be programmed to allow you to use this feature.

Initiating Remote Monitor

Note: Remote Monitor automatically stops after a programmed duration or when there is any attempt to initiate transmission, change channels or power down the radio.

1 Access the Remote Monitor feature.

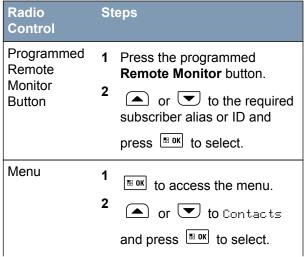

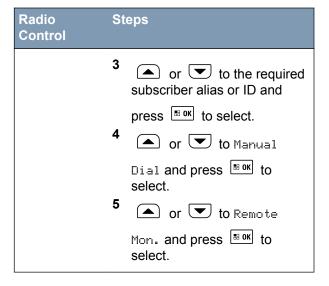

The first text line shows Rem. Monitor. The second text line displays the Target Alias, indicating the request is in progress. The LED lights up blinking green.

2 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display momentarily shows Rem. Monitor Successful. Your radio starts playing audio from

the monitored radio for a programmed duration and display shows Rem. Monitor, followed by target alias. Once the timer expires, the radio sounds an alert tone and the LED turns off.

If unsuccessful, the radio sounds a negative indicator tone the display shows Rem. Monitor Failed.

Scan

This feature allows your radio to monitor and join calls for groups defined in a pre-programmed scan list. When scan is enabled, the scan icon appears on the status bar and the LED blinks yellow when idle.

Starting and Stopping Scan

Note: This procedure turns the Scan feature On or Off for all Connect Plus zones with the same Network ID as your currently selected zone. It is important to note that even when the Scan feature is turned on via this procedure, scan may still be disabled for some (or all) groups on your scan list. See *Editing the Scan List* on page 200 for more information. You can start and stop scanning by pressing the programmed **Scan** button **OR** follow the procedure described next.

BOK to access the menu.

1

- 2 or 💌 to Scan and press 🔤 🕷 to select.
- ³ ▲ or ▼ to Turn On or Turn Off and press ^{■ ok} to select.
 - The display shows Scan On if scan is enabled.
 - The Scan menu shows Turn Off if scan is enabled.
 - The display shows Scan Off if scan is disabled.
 - The Scan menu shows Turn On if scan is disabled.

Responding to a Transmission During a Scan

During scanning, your radio stops on a group where activity is detected. The radio continuously listens for any member in the scan list when idle on the control channel.

198

- **1** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 2 Press the **PTT** button during hang time. The LED lights up solid green.
- 3 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 4 Release the PTT button to listen.

If you do not respond within the hang time, the radio returns to scanning other groups.

User Configurable Scan

If the Edit List menu is enabled, a user is able to Add and Remove the scan members from the Add Member menu. A Scan List member must be a regular Group Contact (i.e. not Multi-group or Site All Call/Network Wide All Call) that is currently assigned to a Channel Selector position in a Connect Plus Zone with the same Network ID as the currently selected Zone. The Talkgroup alias must not match any Talkgroup that has been included in the current Zone's Scan List. Scan can be turned on or off from the menu or by pressing a programmed **Scan On/Off** button.

This feature functions only when the radio is not currently involved in a call. If you are presently listening to a call, your radio cannot scan for other group calls, and is therefore unaware they are in progress. Once your call is finished, your radio returns to the control channel time slot and is able to scan for groups that are in the scan list.

Turning Scan On or Off

Note: This procedure turns the Scan feature On or Off for all zones with the same Network ID as your currently selected zone. It is important to note that even when the Scan feature is turned on via this procedure, scan may still be disabled for some (or all) groups on your scan list. See the next section for more information.

If Scan is turned on, the Scan icon appears on your display. When Scan is on and you are not participating in a call, the LED blinks green and yellow.

The procedure for turning Scan on or off depends on how your radio is programmed. If programmed with a

Scan On/Off button, use the button to toggle the feature on or off. If your radio has been programmed so that Scan can be turned on or off via the menu, follow the procedure described next.

- 1 to access the menu.
- ² ▲ or ▼ to Scan and press ™ to select.
- ³ ▲ or ▼ to Turn On or Turn Off and press
 - The display shows Scan On momentarily if scan is disabled.
 - The display shows Scan Off momentarily if scan is enabled.

Editing the Scan List

Note: If the scan list entry happens to be the radio's currently selected group, the radio listens for activity on this group regardless of whether the list entry currently shows a check mark or not. Whenever a radio is not in a call, the radio listens for activity on its Selected Group, Multigroup, the Site All Call, and its

Default Emergency Revert Group (if configured for one). This operation cannot be disabled. If Scan is enabled the radio will also listen for activity on enabled Zone Scan List members.

Your scan list determines which groups can be scanned. The list is created when your radio is programmed. If your radio has been programmed to allow you to edit the scan list, you can,

- Enable/disable scan for individual groups on the list.
- Add and Remove the scan members from the Add Member menu. Refer to Add or Delete a Group via the Add Members Menu on page 201.

Note: A Scan List member must be a regular Group Contact (i.e. not Multigroup or Site All Call/Network Wide All Call) that is currently assigned to a Channel Selector position in a Connect Plus Zone with the same Network ID as the currently selected Zone.

The Talkgroup alias must not match any Talkgroup that has been included in the current Zone's Scan List.

в ок access the menu.

1

Mode Connect Plus .⊆ Features Advanced 2 ▲ or ▼ to View/Edit List and press

 \frown or \bigcirc to the desired Group name.

3

4

If a check mark precedes the Group name, then scan is currently enabled for this Group.

If there is no check mark preceding the Group name, then scan is currently disabled for this Group.

B ok to select the desired Group.

The display shows Enable if scan is currently disabled for the Group.

The display shows Disable if scan is currently enabled for the Group.

5 Select the displayed option (Enable or Disable)

and press **BOK** to select.

Depending on which option was selected, the radio momentarily displays Scan Enabled or Scan Disabled as confirmation.

The radio displays the Zone scan list again. If scan was enabled for the Group, the check mark displays before the Group name. If scan was disabled for the Group, the check mark is removed before the Group name.

Add or Delete a Group via the Add Members Menu

The Connect Plus radio does not allow a duplicate group number or a duplicate group alias to be placed on a zone scan list (or to be shown as a "scan candidate"). Thus, the list of "scan candidates" described in steps 6 and 7 sometimes changes after adding or deleting a group from the zone scan list.

If your radio has been programmed to allow you to edit the scan list, you can use the Add Members menu to add a group to the scan list of the currently selected zone, or to delete a group from the san list of the currently selected zone.

[⊞] oK to access the menu.

1

² ▲ or ▼ to Scan option and press ^{■ oK} to select.

³ ▲ or ▼ to <Add Members> and press ^{BOK} to select.

The display shows "Add Members from Zone n" (n = the Connect Plus zone number of the first Connect Plus zone in your radio with the same Network ID as your currently selected zone).

- 4 Do one of the following.
 - If the group you want to add to the scan list is assigned to a channel selector position in that zone, go to step 6.
 - If the group you want to add to the scan list is assigned to a channel selector position in a different Connect Plus zone, go to step 5.
- 5 or to scroll a list of Connect Plus zones that have the same Network ID as the currently selected zone.
- 6 After locating the Connect Plus zone where the desired group is assigned to a channel selector

position, press **BOK** to select.

Your radio displays the first entry in a list of groups assigned to a channel position in that zone. The

groups on the list are called "scan candidates", because they can be added to the scan list of your currently selected zone (or they are already on the zone scan list).

If the zone does not have any groups that can be added to the scan list, the radio displays No Candidates.

7 or v to scroll through the list of candidate groups.

If a plus sign (+) is displayed immediately before the group alias, this indicates the group is currently on the scan list for the selected zone.

If the plus sign (+) is not displayed immediately before the alias, the group is not currently on the scan list, but can be added.

8 Press when the desired group alias is displayed.

If this group is not currently on the scan list for the currently selected zone, the Add (Group Alias) message is displayed.

202

If this group is already on the scan list for the currently selected zone, the Delete (Group Alias) message is displayed.

Press (How) to accept the displayed message (Add or Delete).

If deleting a group from the list, you will know the operation is successful because the plus sign (+) will no longer display immediately before the alias.

If adding a group to the list, you will know the operation is successful because the plus sign (+) will display before the alias.

If you are attempting to add a group, and the list is already full, the radio displays List Full. If this should occur, it will be necessary to delete a group from the scan list prior to adding a new one.

10 When finished, press () () as many times as necessary to return to the desired menu.

Understanding Scan Operation

9

Note: If the Radio joins a call for a Zone Scan List member from a different Zone and Call Hang Timer

expires before you are able to respond, in order to respond, you must navigate to the Zone and Channel of the Scan List Member and start a new call.

There are some circumstances in which you can miss calls for groups that are in your scan list. When you miss a call for one of the following reasons, this does not indicate a problem with your radio. This is a normal scan operation for Connect Plus.

- Scan feature is not turned on (check for the scan icon on the display).
- Scan list member has been disabled via the menu (see *Editing the Scan List* on page 200).
- You are participating in a call already.
- No member of the scanned group is registered at your site (Multisite systems only).

Scan Talkback

If your radio scans into a call from the selectable group scan list, and if the **PTT** button is pressed during the scanned call, the operation of the radio depends on whether Scan Talkback was enabled or disabled during radio programming. For more information on how your radio is programmed, contact your radio dealer (or your radio system administrator).

Scan Talkback Disabled	The radio leaves the scanned call and attempts to transmit on the contact for the currently selected channel position. After the Call Hang Time on the currently selected contact expires, the radio returns to the home channel and starts the Scan Hang Time Timer. The radio resumes group scan after its Scan Hang Time Timer expires
	Scan Hang Time Timer expires.

ScanIf the PTT button is pressed during theTalkbackGroup Hang Time of the scanned call,Enabledthe radio attempts to transmit to the
scanned group.

Note: If you scan into a call for a group that is not assigned to a channel position in the currently selected zone and you miss the Hang Time of the call, switch to the proper zone and then select the channel position of the group to talk back to that group.

Contacts Settings

Note: You can add, or edit subscriber IDs for Connect Plus Contacts. Deleting subscriber IDs can only be performed by your dealer.

If the Privacy feature is enabled on a channel, you can make a privacy-enabled voice call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio are able to unscramble the transmission.

Contacts provide "address-book" capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each zone provides a Contact List with up to 100 contacts. The following contact types are available:

- Private Call
- Group Call
- Multigroup Call
- Site All Call Voice
- Site All Call Text
- Dispatch Call

The Dispatch Call contact type is used to send a text message to a dispatcher PC through a third-party Text Message Server.

Making a Private Call from Contacts

- 1 **Ξ** oK to access the menu.
- 2 or to Contacts and press solv to select.

The entries are alphabetically sorted.

- **3** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 Press the **PTT** button to make the call. The LED lights up solid green.
- 5 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 6 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green and the display shows the transmitting user's ID.

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

Making a Call Alias Search

You can also use alias or alphanumeric search to retrieve the required subscriber alias.

This feature is only applicable while in Contacts.

- 1 to access the menu.
- 2 or to Contacts and press of to select.

The entries are alphabetically sorted.

3 Key in the first character of the required alias, and

then press (\frown) or (\frown) to locate the required alias.

- **4** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 5 Press the **PTT** button to make the call.

The LED lights up solid green. The display shows the destination alias.

- 6 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 7 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows Call Ended.

Adding a New Contact

1	88 OK	to access the menu.
		to access the menu.

- 2 ▲ or ▼ to Contacts and press ™ ok to select.
- 3 ▲ or ▼ to New Contact and press ® ok to select.

- 4 Use the keypad to enter the contact number and press ^{■ 0K} to confirm.
- 5 Use the keypad to enter the contact name and press ^{■ OK} to confirm.
- 6 If adding a Radio Contact,
 or
 to the

required ringer type and press I to select. The radio sounds a positive indicator tone and the display shows Contact Saved.

Call Indicator Settings


Activating and Deactivating Call Ringers for Call Alert

You can select, or turn on or off ringing tones for a received Call Alert.

1 to access the menu.

² ▲ or ▼ to Utilities and press ^{■ oK} to select.

206

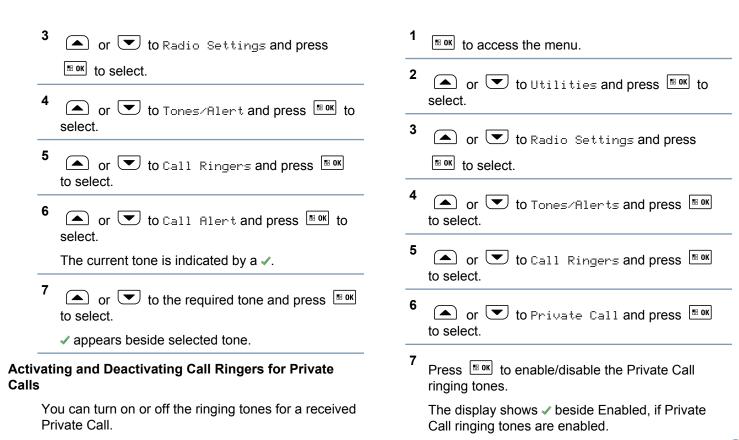

English

The \checkmark is not displayed when Private Call ringing tones are disabled.

Activating and Deactivating Call Ringers for Text Message

You can turn on or off the ringing tones for a received Text Message.

- 1 to access the menu.
- 2 or to Utilities and press and press to select.
- ³ or 💌 to Radio Settings and press

вок to select.

- or to Tones/Alerts and press with to select.
- 5 or to Call Ringers and press so to select.

6 or to Text Message and press Box to select.

The current tone is indicated by a .

- 7 or to the required tone and press of to select.
 - ✓ appears beside selected tone.

Escalating Alarm Tone Volume

You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

Call Log Features

Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:

- Delete
- · View Details

Viewing Recent Calls

The lists are Missed, Answered, and Outgoing.

- 1 to access the menu.
- 2 or to Call Log and press more to select.
- ³ or to preferred list and press with to select.

The display shows the most recent entry at the top of the list.

 \frown or \frown to view the list.

Press the **PTT** button to start a Private Call with the current selected alias or ID.

Deleting a Call from a Call List

4

- 1 to access the menu.
- 2 or to Call Log and press BOK to select.

³ ▲ or ▼ to the required list and press ^{■ oK} to select.

When you select a call list and it contains no entries, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

- 4 ▲ or ▼ to the required alias or ID and press ■ OK to select.
- 5 or to Delete and press to select.
- 6 Do one of the following:
 - Press to select Yes to delete the entry. The display shows Entry Deleted.
 - or \checkmark to No, and press the \blacksquare button to return to the previous screen.

Viewing Details from a Call List

- 1 to access the menu.
- 2 or to Call Log and press with to select.
- ³ ▲ or ▼ to the required list and press ^{■ oK} to select.
- 4 ▲ or ▼ to the required alias or ID and press
 I to select.
- 5 or to View Details and press work to select.

Display shows details.

Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so. This feature is accessible through the menu via Contacts, manual dial or a programmed **One Touch Access** button.

Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.

When you hear a repetitive tone and the LED blinks yellow, do one of the following:

- Press the **PTT** button while the display still shows the Call Alert in the Notification List to respond with a Private Call.
- Press ()) to exit the Notification List. The alert is moved to the Missed Call Log.

See *Notification List* on page 238 for details about the Notification List.

See *Call Log Features* on page 208 for details about the Missed Call List.

Making a Call Alert from the Contact List

E ok to access the menu.

1

2 or to Contacts and press of to select.

- **3** Use one of the steps described next to select the required subscriber alias or ID:
 - select the subscriber alias directly
 - \frown or \bigcirc to the required subscriber

alias and press **BOK** to select.

- use the Manual Dial menu
 - or 💌 to Manual Dial and press

to select.

 The Manual Dial text entry screen shall be displayed. Enter the Subscriber ID and

press 🖪 ok .

4 or to Call Alert and press work to select.

The display shows Call Alert: <Subscriber Alias or ID>Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows Call Alert Successful.

If the Call Alert acknowledgement is not received, the display shows Call Alert Failed.

Making a Call Alert with the One Touch Access Button

Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias. The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows Call Alert Successful.

If the Call Alert acknowledgement is not received, the display shows Call Alert Failed.

Emergency Operation

Note: If your radio is programmed for "Silent" or "Silent with voice" emergency initiation, in most cases it automatically exits silent operation after the Emergency Call or Emergency Alert is finished. The exception to this rule is when "Emergency Alert" is the configured Emergency Mode and "Silent" is the configured Emergency Type. If your radio is programmed in this manner, the silent operation continues until you cancel silent operation by pressing PTT or the button configured for "Emergency Off".

Emergency voice calls and Emergency Alerts are not supported when operating in Connect Plus Auto Fallback mode. For more information see the *Auto Fallback* on page 194.

An Emergency Alert is used to indicate a critical situation. You can initiate an Emergency at any time on any screen display, even when there is activity on the current channel. Pressing the **Emergency** button initiates the programmed Emergency mode. The programmed Emergency mode may also be initiated by triggering the optional Man Down feature. The Emergency feature may be disabled in your radio. Your dealer can set the duration of a button press for the programmed Emergency button, except for long press, which is similar with all other buttons:

- Short press Between 0.05 seconds and 0.75 seconds.
- Long press Between 1.00 second and 3.75 seconds.

The Emergency button is assigned with the Emergency On/Off feature. Check with your dealer for the assigned operation of the Emergency button.

- If the short press for the Emergency button is assigned to turn on the Emergency mode, then the long press for the Emergency button is assigned to exit the Emergency mode.
- If the long press for the **Emergency** button is assigned to turn on the Emergency mode, then the short press for the **Emergency** button is assigned to exit the Emergency mode.

When your radio is selected to a Connect Plus zone, it supports three Emergency modes:

• Emergency Call – You must press the PTT button to talk on the assigned emergency time slot.

- Emergency Call with Voice to Follow For the first transmission on the assigned emergency time slot, the microphone is automatically unmuted and you may talk without pressing the PTT button. The microphone stays "hot" in this fashion for a time period programmed into the radio. For subsequent transmissions in the same Emergency call, you must press the PTT button.
- Emergency Alert An Emergency Alert is not a voice call. It is an emergency notification that is sent to radios that are configured to receive these alerts. The radio sends an emergency alert via the control channel of the currently registered site. The Emergency Alert is received by radios in the Connect Plus network that are programmed to receive them (no matter which network site they are registered to).

Only ONE of the Emergency Modes can be assigned to the Emergency button per zone. In addition, each Emergency mode has the following types:

- Regular Radio initiates an Emergency and shows audio and/or visual indicators.
- Silent Radio initiates an Emergency without any audio or visual indicators. The radio will suppress all audio or visual indications of the Emergency

until you press the **PTT** button to start a voice transmission.

 Silent with Voice – The same as Silent operation, except that the radio will also unmute for some voice transmissions.

Receiving an Incoming Emergency

Your radio may be programmed to sound an alert tone and also display information about the incoming Emergency. If so programmed, upon receiving the incoming Emergency, the display shows the Emergency Details screen with the emergency icon, the Alias or ID of the radio that requested the Emergency, the Group Contact being used for the Emergency, and one additional line of information. The additional information is the name of the zone that contains the Group Contact.

At the present time, the radio displays only the most recently decoded Emergency. If a new Emergency is received before the prior Emergency is cleared, the details for the new Emergency replace the details of the previous Emergency.

Depending on how your radio has been programmed, the Emergency Details screen (or Alarm List screen) will stay on your radio's display even after the Emergency ends. You can save the emergency details to the Alarm List, or you can delete the emergency details as described in the following sections.

Saving the Emergency Details to the Alarm List

Saving the emergency details to the Alarm List allows you to view the details again at a later time by selecting Alarm List from the Main Menu.

1 While the Emergency Details (or Alarm List)

screen is displayed, press (5). The **Exit Alarm List** screen displays.

- 2 Perform one of the following actions:
 - Select **Yes** and press **Book** to save the emergency details to the Alarm List, and to exit the Emergency Details (or Alarm List) screen.

Select **No** and press **Bok** to return to the Emergency Details (or Alarm List) screen.

Deleting the Emergency Details

- While the Emergency Details screen is displayed, press

 The Delete screen displays.
- **2** Perform one of the following actions:
 - Select **Yes** and press **BOK** to delete the emergency details.
 - Select **No** and press **Box** to return to the Emergency Details screen.

Responding to an Emergency Call

Note: If you do not respond to the Emergency Call within the time allotted for the Emergency Call Hang Time, the Emergency call will end. If you want to speak to the group after the Emergency Call Hang Time expires, you must first select the channel position assigned to the group (if not already selected). Then, press **PTT** to start a non-Emergency Call to the group.

214

- 1 When receiving an Emergency Call, press any button to stop all Emergency Call received indications.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- Press the PTT button to initiate a voice transmission on the Emergency group.
 All radios that are monitoring this group hear your transmission.
- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone. The LED lights up green.
- 5 Release the PTT button to listen. When the emergency initiating radio responds, the LED blinks green. You see the Group Call icon, the group ID, and transmitting radio ID on your display.

Responding to an Emergency Alert

Note: The Group contact used for the Emergency Alert should not be used for voice communication. This could prevent other radios from sending and receiving Emergency Alerts on the same group. An Emergency Alert from a radio indicates that the user is in an urgent situation. You may respond to the alert by initiating a private call to the radio who declared the emergency, initiating a group call to a designated talk group, sending the radio a Call Alert, initiating a Remote Monitor of that radio, etc. The proper response is determined by your organization and the individual situation.

Initiating an Emergency Call

Note: If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode until you press the **PTT** button to initiate a voice transmission.

If your radio is set to Silent with Voice, it does not initially display any audio or visual indicators that the radio is in Emergency mode. However, your radio unmutes for the transmissions of radios responding to your emergency. The emergency indicators only appear once you press the **PTT** button to initiate a voice transmission from your radio.

For both "Silent" and "Silent with Voice" operation, the radio automatically exits silent operation after the Emergency Call is finished.

Enalish

- 1 Press the programmed **Emergency** button.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- **3** Press the **PTT** button to initiate a voice transmission on the Emergency group.

When you release the **PTT** button, the Emergency call continues for the time allotted for the Emergency Call Hang Time.

If you press the **PTT** button during this time, the Emergency call continues.

Initiating an Emergency Call with Voice to Follow

Your radio must be programmed for this type of operation.

When enabled for this operation, when you press the programmed **Emergency** button, and when your radio receives the time slot assignment, the microphone is automatically activated without pressing the **PTT** button. This activated microphone state is also known as "hot mic". The "hot mic" applies to the first voice transmission from your radio during the Emergency call. For subsequent transmissions in

the same Emergency call, you must press the **PTT** button.

- 1 Press the programmed **Emergency** button.
- **2** Hold the microphone 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 The microphone remains active for the "hot mic" time specified in your radio's codeplug programming. During this time, the LED lights up green.
- 4 Press and hold the **PTT** button to talk longer than the programmed duration.

Initiating an Emergency Alert

Note: If your radio is programmed for "Silent" or "Silent with Voice", it will not provide any audio or visual indications that it is sending an Emergency Alert. If programmed for "Silent", the silent operation continues indefinitely until you press PTT or the button configured for "Emergency Off". If programmed for "Silent with Voice", the radio automatically cancels silent operation when the site controller broadcasts the Emergency Alert. Press the orange **Emergency** button.

Upon transmitting the Emergency Alert to the site controller, the radio's display shows the Emergency icon, the Group contact used for the Emergency Alert, and TX Alarm.

Once the Emergency Alert is successfully sent and is being broadcast for other radios to hear, a positive indicator tone sounds and the radio's display shows Alarm Sent. If the Emergency Alert is unsuccessful, a negative indicator tone sounds and the radio displays Alarm Failed.

Exiting Emergency Mode

Note: If the Emergency call ends due to the expiration of the Emergency Hang Time, but the emergency condition is not over, press the **Emergency** button again to restart the process.

If you initiate an Emergency Alert by pressing the programmed **Emergency** button, your radio automatically exits Emergency mode after receiving a response from the Connect Plus system.

If you initiate an Emergency call by pressing the programmed **Emergency** button, your radio will be assigned a channel automatically when one becomes

available. Once your radio has transmitted a message indicating the emergency, you cannot cancel your Emergency call. However, if you pressed the button by accident or the emergency no longer exists, you may wish to say this over the assigned channel. When you release the **PTT** button, the Emergency call is discontinued after the Emergency Call Hang Time expires.

If your radio was configured for Emergency with Voice to Follow, use the "hot mic" period to explain your error, then press and release the **PTT** button to discontinue the transmission. The Emergency call is discontinued after the Emergency Call Hang Time expires.

Text Message Features

Your radio is able to receive data, for example a text message, from another radio or a text message application.

The **maximum** length of characters for a text message is **140**.

The radio exits the current screen once the inactivity timer expires.

Note: Long press (5^(h)) at any time to return to the Home screen.

Sending a Quick Text Message

Your radio supports a maximum of 10 Quick Text messages as programmed by your dealer.

While Quick Text messages are predefined, you can edit each message before sending it.

If you are sending the message, select the recipient by



 \frown or \frown to the required alias and press

to select.

or vito Manual Dial, and press

to select. The first line of the display shows Number: The second line of the display shows a blinking cursor. Key in the subscriber

alias or ID and press 😬 .

The display shows Sending Message, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows Message Sent.

If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 221).

Sending a Quick Text Message with the One Touch Access Button

Press the programmed **One Touch Access** button to send a predefined Quick Text message to a predefined alias.

The display shows Sending Message, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows Message Sent.

If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 221).

Accessing the Drafts Folder

The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder.


Note: You can edit saved text message before sending it. Only available with a keypad microphone (see *Editing and Sending a Saved Text Message* on

page 157. Long press ()) at any time to return to the Home screen.

Viewing a Saved Text Message

1 Access the Text Message feature.

Radio Controls	Steps
Programmed Text Message button	Press the programmed Text Message button.
Menu	1 to access the menu.

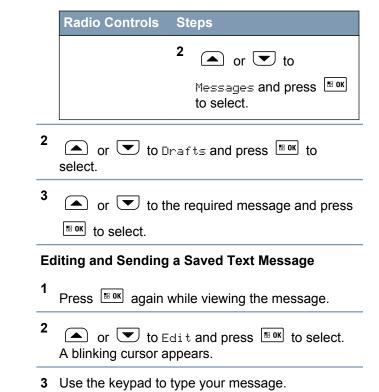

Press 4 to move one space to the left. Press **>** or the () key to move one space to the right. Press the (*) key to delete any unwanted characters. Long press $(\mathbb{B}^{\#})$ to change text entry method.

- 4 Press once message is composed.
- 5 Select the message recipient by
 - - or v to the required alias and press

to select.

- ▲ or ▼ to Manual Dial, and press

to select. The first line of the display shows Number: . The second line of the display shows a blinking cursor. Key in the subscriber

alias or ID and press

The display shows Sending Message, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows Message Sent.

If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

If the text message cannot be sent, it is moved to the Sent Items folder and marked with a Send Failed icon.

 
Deleting a Saved Text Message from Drafts

Access the Text Message feature.



Mode





4 ▲ or ▼ to Delete and press [■] to delete the text message.

Managing Fail-to-Send Text Messages

You can select one of the following options while at the Resend option screen:

- Resend. ٠
- Forward.
- Edit. ٠

Resending a Text Message

Press **I** to resend the same message to the same subscriber/group alias or ID.

If the message is sent successfully, a tone sounds and the display shows the positive mini notice.

If the message cannot be sent, the display shows the negative mini notice.

Forwarding a Text Message

Select Forward to send the message to another subscriber/group alias or ID.

 \frown or \frown to Forward and press \blacksquare to select.

2 Select the message recipient by (\frown) or (\frown) to



the required alias or ID and press **I** to select.

The display shows Sending Message, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows Message Sent.

If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

Managing Sent Text Messages

Once a message is sent to another radio, it is saved in Sent Items. The most recent sent text message is always added to the top of the Sent Items list.

The Sent Items folder is capable of storing a maximum of thirty (30) last sent messages. When the folder is full, the next sent text message automatically replaces the oldest text message in the folder.

Note: Long press ()) at any time to return to the Home screen.

Viewing a Sent Text Message

1 Access the Text Message feature.

Radio Controls	Steps
Programm ed Text Message button	Press the programmed Text Message button.
Menu	1 mok to access the menu. 2 ▲ or ▼ to Messages and press mok to select.

- 2 or to Sent Items and press with to select.
- ³ ▲ or ▼ to the required message and press

The icon at the top right corner of the screen indicates the status of the message (see *Sent Item Icons* on page 177).

Sending a Sent Text Message

You can select one of the following options while viewing a sent text message:

- Resend
- Forward
- Edit
- Delete
- Press again while viewing the message.
- ² ▲ or ▼ to one of the following options and press ^{■ ok} to select.

English

Option	Steps
Forward	Select Forward to send the selected text message to another subscriber/ group alias or ID (see <i>Forwarding a</i> <i>Text Message</i> on page 221).
Delete	Select Delete to delete the text message.
Resend	Select Resend to resend the selected text message to the same subscriber/group alias or ID.
	The display shows Sending Message, confirming that the same message is being sent to the same target radio.
	If the message is sent successfully, a tone sounds and the display shows Message Sent.
	If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

ption	Steps
	If the message fails to send, the radio returns you to the Resend
	option screen. Press BOK to resend the message to the same subscriber/group alias or ID.
	Note: If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.
	Note: If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In- Progress messages and automatically marks it with a Send Failed icon.

0

Note: The radio supports a maximum of five (5) In-Progress messages at one time. During this

English

Option Steps

period, the radio cannot send any new message and automatically marks it with a Send Failed icon.


If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.

If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

Deleting All Sent Text Messages from Sent Items

1 Access the **Text Message** feature by performing one of the following actions:

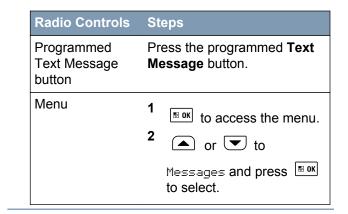

2 or to Sent Items and press to select.

When you select Sent Items and it contains no text messages, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

- 3 or to Delete All and press to select.
- 4 Choose one of the following.

224

▲ or ▼ to Yes and press ™ to select. The display shows positive mini notice.

• or \checkmark to No and press \blacksquare to return to the previous screen.

Receiving a Text Message

When your radio receives a message, the display shows the Notification List with the alias or ID of the sender and the Message icon.

You can select one of the following options when receiving a text message:

 
- Read.
- Read Later.
- Delete.

Reading a Text Message

1 or v to Read? and press of to select.

Selected message in the Inbox opens.

2 Do one of the following:



Press Bow a second time to reply, forward, or delete the text message.

Managing Received Text Messages

Use the Inbox to manage your text messages. The Inbox is capable of storing a maximum of 30 messages.

Text messages in the Inbox are sorted according to the most recently received.

Your radio supports the following options for text messages:

- Reply (via Quick Text)
- Forward
- Delete
- Delete All

Note: If the channel type is not a match, you can only forward, delete, or delete all Received messages.

Long press ()) at any time to return to the Home screen.

Viewing a Text Message from the Inbox

- 1 to access the menu.
- 2 or to Messages and press solve to select.
- ³ ▲ or ▼ to Inbox and press ^{■ ok} to select.
- 4 \frown or \bigcirc toview the messages.
- **5** Do one of the following:
 - Press **Box** to select the current message, and
 - press again to reply, forward, or delete that message.
 - Long press (\mathfrak{S}) to return to the Home screen.

Replying to a Text Message from the Inbox

1 Access the **Text Message** feature.

	Radio Controls	Steps
	Programm ed Text Message button	Press the programmed Text Message button.
	Menu	1 to access the menu.
		2 • or • to Messages and
		press 🖽 ok to select.
2	🔺 or 💌	to Inbox and press ^{■ ok} to select.
3	🔺 or 🔽	${\mathbb C}$ to the required message and press
	to sele	
4	Press 📧 or once more to access the sub-menu.	
5	Use your ke	ypad to write/edit your message.

6 Press **mot** once message is composed.

English

The display shows Sending Message, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows Message Sent.


If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

If the message cannot be sent, the radio returns you to the Resend option screen (see *Managing Fail-to-Send Text Messages* on page 221).

Deleting a Text Message from the Inbox


1 Access the **Text Message** feature by performing one of the following actions:

Radio Controls	Steps
Programmed Text Message button	Press the programmed Text Message button.
Menu	1 to access the menu.

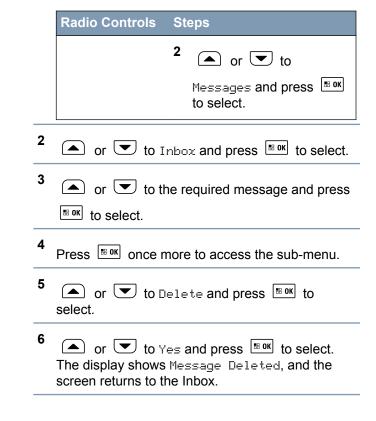

Deleting All Text Messages from the Inbox

1 Access the **Text Message** feature by performing one of the following actions:

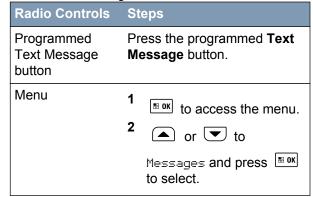

² or v to Inbox and press or to select.

When you select Inbox and it contains no text messages, the display shows List Empty, and sounds a low tone if Keypad Tones are turned on (see *Turning Keypad Tones On or Off* on page 133).

• or to Yes and press with to select. The display shows Inbox Cleared.

Privacy

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the current channel selector position to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacy-enabled channel selector position, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports Enhanced Privacy.

To unscramble a privacy-enabled call transmission, your radio must be programmed to have the same

Mode **Connect Plus** .⊆ Features Advanced

228

Key Value and Key ID (for Enhanced Privacy) as the transmitting radio.

If your radio receives a scrambled call that is of a different Key Value and Key ID, you hear nothing at all (Enhanced Privacy).

If the radio has a privacy type assigned, the Home screen shows the Secure or Unsecure icon, except when the radio is sending or receiving an Emergency call or alarm.

The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving an ongoing privacy-enabled transmission.

You can access this feature by performing one of the following actions:

- Press the programmed **Privacy** button to toggle privacy on or off.
- Using the Radio Menu as described by the steps described next.

Note: Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

1

² ▲ or ▼ to Utilities and press ^{BOK} to select.

a or ▼ to Radio Settings or ▲ or
 ▼ to Connect Plus and press ■ to select.

4 or 💌 to Enhanced Privacy.

If the display shows Turn On, press **BOK** to enable Privacy. The radio displays a message confirming your selection.

If the display shows Turn Off, press used to disable Privacy. The radio displays a message confirming your selection.

If the radio has a privacy type assigned, the secure or unsecure icon appears on the status bar, except when the radio is sending or receiving an Emergency Alert.

Making a Privacy-Enabled (Scrambled) Call

Toggle privacy on using the programmed privacy button or by using the menu. Your radio must have

вок to access the menu.

the Privacy feature enabled for the currently selected channel position to send a privacy-enabled transmission. When privacy is enabled for the currently selected channel position, all voice transmissions made by your radio will be scrambled. This includes Group Call, Multigroup Call, talk-back during scanned calls, Site All Call, Emergency Call, and Private Call. Only receiving radios with the same Key Value and Key ID as your radio will be able to unscramble the transmission.

Security

You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

Note: Performing Radio Disable and Enable is limited to radios with these functions enabled. Check with your dealer or system administrator for more information.


Radio Disable


1 Access this feature by

Radio Controls	Steps
Radio Disable button	 Press the programmed Radio Disable button. or to the required alias or ID and press select.
Radio menu	 to access the menu. or to Contacts and press more to contacts and press more to select. The entries are alphabetically sorted. Use one of the steps described next to select the required subscriber alias or ID:
	 Select the required alias or ID directly.

230

Radio Steps Controls

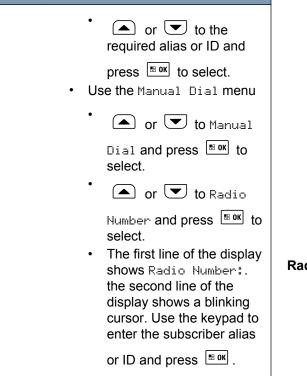

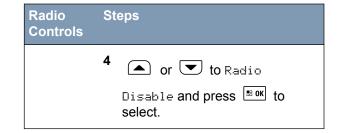

The display shows Radio Disable: <Target Alias or ID> and the LED blinks green.


2 Wait for acknowledgement.


If successful, a positive indicator tone sounds and the display shows Radio Disable Successful.

If not successful, a negative indicator tone sounds and the display shows Radio Disable Failed.

Radio Enable

1 Access this feature by

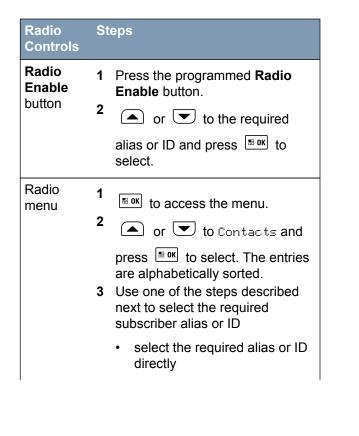

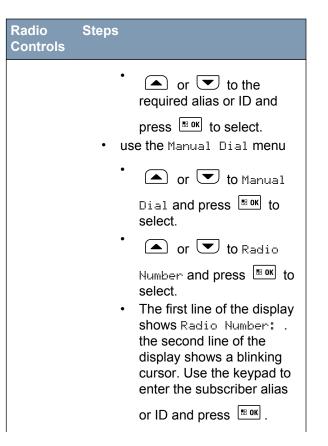

232



The display shows Radio Enable: <Subscriber Alias or ID> and the LED lights up solid green.

2 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows Radio Enable Successful.

If not successful, a negative indicator tone sounds and the display shows Radio Enable Failed.

Bluetooth Operation

Note: If disabled via the CPS, all Bluetooth-related features are disabled and the Bluetooth device database is erased.

This feature allows you to use your radio with a Bluetooth-enabled device (accessory) via a wireless Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters (32 feet) line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.

It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter/32 feet defined range) to re-establish clear audio reception. Your radio's Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10meter/32 feet range.

Your radio can support up to 4 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device's user manual for more details on your Bluetoothenabled device's full capabilities.

Turning Bluetooth On and Off

- 1 to access the menu.
- 2 or to Bluetooth and press of to select.
- 3 or to My Status and press wor to select.

The display shows On and Off. The current status is indicated by a \checkmark .

- **4** Do one of the following:
 - ▲ or ▼ to 0n and press ™ to select. The display shows 0n and a ✓ appears left of the selected status.

Finding and Connecting to a Bluetooth Device

Do not turn off your Bluetooth-enabled device or

press (b) during the finding and connecting operation as this cancels the operation.

- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetoothenabled device's user manual.
- **2** On your radio, press **B** of to access the menu.
- ³ ▲ or ▼ to Blue tooth and press ^{■ oK} to select.
- or to Devices and press wor to select.
- **5** Do one of the following:
 - or to the required device and press
 to select.

▲ or ▼ to Find Devices to locate available devices. ▲ or ▼ to the required device and press ■ ok to select.

6 ● or ▼ to Connect and press ■ or to select.

Display shows Connecting to (Device). Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetooth-enabled device's user manual.

If successful, the radio display shows <Device>Connected. A tone sounds and ✓ appears besides the connected device. The Bluetooth Connected icon appears on the status bar.

If unsuccessful, the radio display shows ${\tt Connecting}$ ${\tt Failed}.$

Note: If pin code is required, use the same entry method as Step 2 in *Accessing the Radio from Password* on page 161.

Finding and Connecting from a Bluetooth Device (Discoverable Mode)

Do not turn off your Bluetooth or your radio during the finding and connecting operation as this may cancel the operation.

1 Turn Bluetooth On.

See Turning Bluetooth On and Off on page 104.

- 2 to access the menu.
- ³ ▲ or ▼ to Blue tooth and press [■] or to select.
- 4 ▲ or ▼ to Find Me and press ^{■ oK} to select.

Your radio can now be found by other Bluetoothenabled devices for a programmed duration. This is called Discoverable Mode.

5 Turn on your Bluetooth-enabled device and pair it with your radio.

Refer to respective Bluetooth-enabled device's user manual.

Disconnecting from a Bluetooth Device



- 2 or to Bluetooth and press of to select.
- ³ ▲ or ▼ to Devices and press ^{■ oK} to select.
- 4 ▲ or ▼ to the required device and press
 I ok to select.
- 5 ▲ or ▼ to Disconnect and press ^{■ oK} to select.

Display shows Disconnecting from <Device>. Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.

The radio display shows <Device > Disconnected. A positive indicator tone sounds and ✓ disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.

Switching Audio Route between Internal Radio Speaker and Bluetooth Device

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.

Press the programmed **Bluetooth Audio Switch** button.

- A tone sounds and display shows Route Audio to Radio.
- A tone sounds and display shows Route Audio to Bluetooth.

Viewing Device Details

- 1 to access the menu.
- ² or to Blue tooth and press with to select.
- ³ ▲ or ▼ to Devices and press ^{™ oK} to select.

- 4 ▲ or ▼ to the required device and press
 ^{E OK} to select.
- 5 or to View Details and press solutions to select.

Deleting Device Name

You can remove a disconnected device from the list of Bluetooth-enabled devices.

- 1 to access the menu.
- ² or to Bluetooth and press of to select.
- a or to Devices and press and to select.
- 4 ▲ or ▼ to the required device and press
 ^{IIII} to select.

or to Delete and press to select.
 The display shows Device Deleted.

Bluetooth Mic Gain

Allows control of the connected Bluetooth-enabled device's microphone gain value.

- 1 to access the menu.
- ² ▲ or ▼ to Blue tooth and press ^{BOK} to select.
- ³ ▲ or ▼ to BT Mic Gain and press ^{■ oK} to select.
- or **t** to the BT Mic Gain type and the current values.

To edit values, press **IN OK** to select.

5

▲ or ▼ to increase or to decrease values

and press **IN OK** to select.

Notification List

Your radio has a Notification List that collects all your "unread" events on the channel, such as unread text messages, missed calls, and call alerts.

The Notification icon appears on the status bar when the Notification List has one or more events.

The list supports a maximum of forty (40) unread events. When it is full, the next event automatically replaces the oldest event.

Note: After the events are read, they are removed from the Notification List.

Accessing the Notification List

- 1 to access the menu.
- 2 or to Notification and press I to select.

or to the required event and press
 to select.

Long press (>*) to return to the Home Screen.

Utilities

1

Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

Press the programmed **All Tones/Alerts** button to toggle all tones on or off, or follow the procedure described next to access this feature via the radio menu.

EOK to access the menu.

2 ● or ▼ to Utilities and press ■ oK to select.

238

- or to Radio Settings and press
 to select.
- or to Tones/Alerts and press with to select.
- 5 or to All Tones and press work to select.
- 6 Press [■] to enable/disable all tones and alerts.
 The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Setting the Tone Alert Volume Offset Level

You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/ alerts, allowing it to be higher or lower than the voice volume.

вок to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Settings and press
- 4 or ▼ to Tones/Alerts and press ™ to select.
- 5 ▲ or ▼ to Vol. Offset and press ^{■ oK} to select.
- 6 or to the required volume value. The radio sounds a feedback tone with each corresponding volume value.
- 7 Do one of the following:
 - Press **B** ok to keep the required displayed volume value.
 - Press (5) to exit without changing the current volume offset settings.

Turning the Talk Permit Tone On or Off

You can enable and disable the Talk Permit Tone if needed.

[⊞] oK access the menu.

1

- ² or to Utilities and press with to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Tones/Alerts and press ™™ to select.
- 5 or to Talk Permit and press Box to select.
- 6 Press ^{■ oK} to enable/disable the Talk Permit Tone.
 - The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Turning the Power Up Alert Tone On or Off

You can enable and disable the Power Up Alert Tone if needed.

1 ^{■ ok} to access the menu. 2 ▲ or ▼ to Utilities and press ≞∝ to select. 3 ▲ or ▼ to Radio Settings and press to select. 4 ▲ or 💌 to Tones/Alerts and press 🔤 🕷 to select. 5 ▲ or ▼ to Power Up and press [■] to select. 6 to enable/disable the Power Up Alert Press Tone.

240

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Setting the Power Level

You can customize your radio's power setting to high or low for each Connect Plus zone.

High enables communication with tower sites in Connect Plus mode located at a considerable distance from you. Low enables communication with tower sites in Connect Plus mode in closer proximity.

Press the programmed **Power Level** button to toggle transmit power level between high and low. Follow the procedure described next to access this feature via the radio's menus.

- 1 to access the menu.
- 2 ▲ or ▼ to Utilities and press ^{■ OK} to select.
- a or to Radio Settings and press
 to select.

 
- 4 ▲ or ▼ to Power and press ■ok to select.
- ⁵ \frown or \bigcirc to the required setting and press
 - to select.

✓ appears beside selected setting. At any time,

long press ()) to return to the Home screen. Screen returns to the previous menu.

Changing the Display Mode

You can change radio's display mode between Day or Night, as needed. This affects the color palette of the display.



- 2 ▲ or ▼ to Utilities and press oK to select.
- ³ or to Radio Settings and press

вок to select.

4 ▲ or ▼ to Display and press ■ oK to select.

The display shows Day Mode and Night Mode.

or ▼ to the required setting and press
 If ok to enable. ✓ appears besides selected setting.

Adjusting the Display Brightness

You can adjust radio's display brightness as needed.

Note: Display brightness cannot be adjusted when "Auto Brightness" is enabled.

- 1 to access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- a or to Radio Settings and press
 to select.

- 4 or ▼ to Display and press ™ to select.
- 5 or ▼ to Brightness and press ™ oK to select. The display shows a progress bar.
- 6 Decrease display brightness by pressing () or

increase the display brightness by pressing rightarrow T.

Select from setting of 1 to 8. Press to confirm your entry.

Turning the Introduction Screen On or Off

You can enable and disable the Introduction Screen if needed.

- 1 to access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ OK} to select.

Mode **Connect Plus** .⊆ Features Advanced

242

- 4 or ▼ to Display and press ™ ok to select.
- 5 or to Intro Screen and press solutions to select.
- 6 Press ^{■ oK} to enable/disable the Introduction Screen.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Language

You can set your radio display to be in your required language.

- 2 or v to Utilities and press or to Utilities and press or to Radio Settings and press or to Radio Settings and press or to select.
- 4 or ▼ to Languages and press ^{■ oK} to select.
- 5 or ▼ to the required language and press
 Solve to enable. ✓ appears beside selected language.

Turning the LED Indicator On or Off

You can enable and disable the LED Indicator if needed.



2 ▲ or ▼ to Utilities and press ® OK to select.

¹ to access the menu.

- 4 or to LED Indicator and press Box to select.
- **5** Press **I** to enable/disable the LED Indicator.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Identifying Cable Type

You can select the type of cable your radio uses.

- 1 to access the menu.
- 2 or to Utilities and press to select.
- a or to Radio Settings and press
 to select.

- 4 ▲ or ▼ to Cable Type and press ok to select.
- 5 The current cable type is indicated by a \checkmark .

Voice Announcement

1

This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

TO access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ or to Radio Settings and press

вок to select.

4 ▲ or ▼ to Voice Announcement and press

244

You can also use or to change the selected option.

- 5 Do one of the following:
 - Press ^{■ ok} to enable Voice Announcement. The display shows ✓ beside Enabled.
 - Press ^{■ ok} to disable Voice Announcement. The ✓ disappears from beside Enabled.

Menu Timer

1

Set the period of time your radio stays in the menu before it automatically switches to the Home screen.

B OK to access the menu.

- 2 or to Utilities and press of to select.
- 3 \bigcirc or \bigcirc to Radio Settings and press

вок to select.

4 or ▼ to Display and press ™ ok to select.

- 5 or to Menu Timer and press to select.

Turning Horns/Lights On or Off

This feature needs to be installed through your radio's rear accessory connector by your dealer.

Your radio is able to notify you of an incoming call via the horns and lights feature. When activated, an incoming call sounds your vehicle's horn and turns on its lights.

Press the programmed **Horns/Lights** button to toggle horns and light feature on or off.

1 to access the menu.

2 ● or ▼ to Utilities and press ■ oK to select.

- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Horn/Lights and press ^{■ oK} to select.
- ⁵ Press [■] or to enable/disable Horns/Lights.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

Setting Dual Knob Operation Preference

Your radio has a dual-purpose **Volume/Channel Knob**. Disabling the dual-purpose option sets the knob to work as a Volume Knob only.

- 1 Ito access the menu.
- ² ▲ or ▼ to Utilities and press ^{BOK} to select.

- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to Dual Knob and press ♥ of to select.
- 5 The display shows Volume Only and Volume &

Ch. (A) or (I) to the required setting and

press **BOK** to select.

✓ appears beside selected setting.

Screen returns to the previous menu.

Digital Mic AGC (Mic AGC-D)

This feature controls the your radio's microphone gain automatically while transmitting on a digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

THOM to access the menu.

246


- 2 ▲ or ▼ to Utilities and press ™ ok to select.
- a or to Radio Settings and press
 to select.
- 4 or ▼ to Mic AGC-D and press ok to select.
- 5 Do one of the following:
 - Press **Box** to enable **Mic AGC-D**. The display shows \checkmark beside Enabled.
 - Press **model** to disable **Mic AGC-D**. The *d* disappears from beside Enabled.

Intelligent Audio

Your radio can automatically adjust its audio volume to overcome background noise in the environment, inclusive of all stationary and non-stationary noise sources. This feature is a Receive-only feature and does not affect Transmit audio.

🗄 ok to access the menu.		
Radio Control	St	eps
Menu	1 2 3 4 5	 to access the menu. or to Radio Settings and press of to select. or to Radio Settings and press of to select. or to Intelligent Audio and press of to select. Note: You can also use or to change the selected option. Do one of the following:
		Press ^I [™] to enable Intelligent Audio. The display shows ✓ beside Enabled.

1

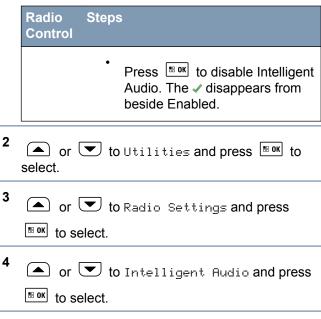

- **5** Do one of the following:
 - Press **Book** to enable Intelligent Audio. The display shows \checkmark beside Enabled.
 - Press **to disable Intelligent Audio.** The *disappears from beside Enabled.*

See Authorized Accessories List on page 261 for recommended Bluetooth-enabled audio accessories with in-built Automatic Volume Control for similar performance.

Turning the Acoustic Feedback Suppressor Feature On or Off

This feature allows you to minimize acoustic feedback in received calls.

BOK to access the menu.

1

- ² or to Utilities and press to select.
- a or to Radio Settings and press
 to select.
- or to AF Suppressor and press I to select.

You can also use or to change the selected option.

5 Do one of the following.

English

Press ^{■ ok} to enable Acoustic Feedback Suppressor. The display shows ✓ beside Enabled.

Press ^I to disable Acoustic Feedback Suppressor. The ✓ disappears from beside Enabled.

Turning the Global Positioning System (GPS) On or Off

GPS is a satellite navigation system that determines the radio's precise location. Press the programmed **GPS** button to toggle the feature on or off.

🖩 🛯 to access the menu.

1

- 2 or to Utilities and press work to select.
- a or to Radio Settings and press
 to select.
- 4 ▲ or ▼ to GPS and press [■] to select.

Press **BOK** to enable/disable GPS.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

See *Checking the GPS Information* on page 130 for details on retrieving GPS information.

Accessing General Radio Information

Your radio contains information on the following:

Battery

5

- Degree of Tilt (Accelerometer)
- Radio Model Number Index
- Option Board Over-the-Air (OTA) Codeplug CRC
- Site Number
- Site Info
- Radio Alias and ID
- Firmware and Codeplug Versions
- GPS Information

Press (>) at any time to return to the previous

screen or long press (\mathfrak{S}) to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

Checking the Radio Model Number Index

This index number identifies your radio's modelspecific hardware. Your radio system administrator may ask for this number when preparing a new Option Board codeplug for your radio.

- 1 to access the menu.
- 2 or to Utilities and press and to select.
- **3** or to Radio Info and press **Box** to select.
- 4 ▲ or ▼ to Model Index and press ♥ ok to select.

The display shows the Model Number Index.

Checking the CRC of the Option Board OTA Codeplug File

Follow the instructions below if your radio system administrator asks you to view the Option Board OTA Codeplug File CRC (Cyclic Redundancy Check). This menu option only appears if the Option Board received its last codeplug update OTA.

BOK to access the menu.

1

- ² ▲ or ▼ to Utilities and press ^{■ OK} to select.
- ³ ▲ or ▼ to Radio Info and press ^{■oK} to select.
- 4 or to OB OTA CPara and press Solutions to select.

The display shows some letters and numbers. Communicate this information to your radio system administrator exactly as shown.

Displaying the Site ID (Site Number)

Note: If you are not currently registered at a site, the display shows Not Registered.

The radio briefly shows the Site ID as it registers with a Connect Plus site. Following registration, the radio does not generally indicate the Site number. To display the registered Site number, do the following:

1 to access the menu.

- 2 or to Utilities and press to select.
- ³ or to Radio Info and press work to select.
- 4 ▲ or ▼ to Site Number and press ^{■ oK} to select.

The display shows the Network ID and the Site Number.

Checking the Site Info

Note: If you are not currently registered at a site, the display shows Not Registered.

The Site Info feature provides information that can be useful to a service technician. It consists of the following information:

- Repeater number of current Control Channel repeater.
- RSSI: Last signal strength value measured from Control Channel repeater.

 Neighbor List sent by Control Channel repeater (five numbers separated by commas).

If you are requested to use this feature, please report the displayed information exactly as it appears on the screen.

<sup>
Π</sup>
OK
I
to access the menu.

1

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ or to Radio Info and press to select.
- 4 ▲ or ▼ to Site Info and press ™ok to select. The diaplay shows the Site Info

The display shows the Site Info.

Checking the Radio ID

This feature displays the ID of your radio.

Follow the procedure described next to access this feature via the radio screen.

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- ³ or to Radio Info and press with to select.

Checking the Firmware Version and Codeplug Version

Displays the firmware version on your radio.

- 1 to access the menu.
- 2 or to Utilities and press of to select.
- ³ ▲ or ▼ to Radio Info and press ^{■ oK} to select.

4 ▲ or ▼ to Versions and press ■ or to select.

The display a list with the following information:

- (Radio) Firmware Version
- (Radio) Codeplug Version
- Option Board Firmware Version
- Option Board Frequency Version
- Option Board Hardware Version
- Option Board Codeplug Version

Checking for Updates

Connect Plus provides the ability to update certain files (Option Board Codeplug, Network Frequency File and Option Board Firmware File) over-the-air.

Note: Check with the dealer or network administrator to determine whether this feature has been enabled for your radio.

Any display Connect Plus radio has the ability to show its current Option Board OTA Codeplug CRC, Frequency File version or Option Board firmware file version via a menu option. In addition, display radios that have been enabled for over-the-air file transfer can display the version of a "pending file". A "pending



file" is a Frequency File or Option Board firmware file that the Connect Plus radio knows about via system messaging, but the radio has not yet collected all of the file's packets. If a display Connect Plus radio has a pending file, the menu provides options to:

- See the version number of the pending file.
- See what percentage of packets has been collected so far.
- Request the Connect Plus radio to resume collecting file packets.

If the radio is enabled for Connect Plus over-the-air file transfer, there may be times when the radio automatically joins a file transfer without first notifying the radio user. While the radio is collecting file packets, the LED rapidly blinks red and the radio displays the High Volume Data icon on the Home Screen status bar.

Note: The Connect Plus radio cannot collect file packets and receive calls at the same time. If you wish to cancel the file transfer, press and release the **PTT** button. This causes the radio to request a call on the selected Contact Name, and it will also cancel the file transfer for that radio until the process resumes at a later time.

There are several things that can make the file transfer process start again. The first example applies to all over-the-air file types. The other examples apply only to the Network Frequency File and Option Board Firmware File:

- The radio system administrator re-initiates the over-the-air file transfer.
- The Option Board's pre-defined timer expires, which causes the Option Board to automatically resume the process of collecting packets.
- The timer has not yet expired, but the radio user requests the file transfer to resume via the menu option.

After the Connect Plus radio finishes downloading all file packets, it must upgrade to the newly acquired file. For the Network Frequency File, this is an automatic process and does not require a radio reset. For the Option Board Codeplug File, this is an automatic process that will cause a brief interruption to service as the Option Board loads the new codeplug information and re-acquires a network site. How quickly the radio upgrades to a new Option Board firmware file depends on how the radio has been configured by the dealer or system administrator. The radio will either upgrade

immediately after collecting all file packets, or it will wait until the next time that the user turns the radio on.

Note: Check with your dealer or system administrator to determine how your radio has been programmed.

The process of upgrading to a new Option Board firmware file takes several seconds, and it requires the Connect Plus Option Board to reset the radio. Once the upgrade starts, the radio use will not be able to make or receive calls until the process is completed.

Firmware File

Firmware Up to Date

Note: If the Option Board firmware file is not Up to Date (and if the radio has partially collected a more recent Option Board firmware file version) the radio displays a list with additional options; Version, %Received, and Download.

- 1 to access the menu.
- 2 or to Utilities and press of to select.

5 or to Firmware and press solv to select.

▲ or ▼ to Version and press ■ ok to select.

If there is a pending Option Board firmware file, the display shows the pending firmware version number.

If there is a pending Option Board firmware file, the display shows Firmware is Up to Date.

Pending Firmware – % Received

1 to access the menu.

6

- 2 ▲ or ▼ to Utilities and press oK to select.
- 3 or to Radio Info and press more to select.

- 4 ▲ or ▼ to Updates and press ™ to select.
- 5 or to Firmware and press To select.
- 6 or ▼ to %Received and press or to select.

The screen displays the percentage of firmware file packets collected so far.

Note: When at 100%, the radio needs to be power cycled Off and then On to initiate the firmware upgrade.

Pending Firmware – Download

If the Connect Plus radio has previously left an OTA Option Board Firmware File Transfer with a partial file, the unit automatically rejoins the file transfer (if still ongoing) when an internal timer expires. If you want the unit to rejoin an ongoing Option Board Firmware File transfer prior to expiration of this internal timer, use the Download option as described below.

- 1 to access the menu.
- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ ▲ or ▼ to Radio Info and press ok to select.
- 4 ▲ or ▼ to Updates and press ™ to select.
- 5 ▲ or ▼ to Firmware and press ^{■ OK} to select.
- 6 or to Download and press Box to select.

The display shows the following:

Download Available	Start Download
No Download	Download not
Available	available

7 Do one of the following:

- Select Yes and press . to start the download.
- Select No and press **Box** to return to the previous menu.

Frequency File

1

Frequency File Up to Date

Note: If the Frequency File is not Up to Date (and if the radio has partially collected a more recent frequency file version) the radio displays a list with additional options; Version, %Received, and Download.

- **THE IN TO ACCESS the menu.**
- 2 or to Utilities and press solution to select.
- ³ or to Radio Info and press work to select.
- 4 or ▼ to Frequency and press or to select.

256

The display shows Freq. File is Up to Date.

Frequency File Pending – Version

1 to access the menu.

- ² ▲ or ▼ to Utilities and press ^{■ oK} to select.
- ³ or to Radio Info and press ^{BOK} to select.
- 4 or ▼ to Updates and press ™ to select.
- 5 or ▼ to Frequency and press of to select.
- 6 ▲ or ▼ to Version and press ® ok to select.

If there is a pending Frequency File, the display shows the pending Frequency File version number. Frequency File Pending – % Received 1 BOK to access the menu. 2 ▲ or ▼ to Utilities and press ≞∝ to select. 3 ▲ or ▼ to Radio Info and press ■ to select. 4 ▲ or ▼ to Updates and press ■ or to select. 5 ▲ or ▼ to % Received and press ™ to select. The screen displays the percentage of frequency file packets collected so far. Frequency File Pending – Download If the Connect Plus radio has previously left an OTA Network Frequency File Transfer with a partial file, the unit automatically rejoins the file transfer (if still ongoing) when an internal timer expires. If you want the unit to rejoin an ongoing Network Frequency File

transfer prior to expiration of this internal timer, use the Download option as described below.

- 1 to access the menu.
- 2 or to Utilities and press Box to select.
- **a** or **v** to Radio Info and press **BOK** to select.
- or to Updates and press more to select.
- 5 or to Frequency and press solv to select.
- 6 or to Download and press to select.

Download not

available

Download Currently Unavailable Download Currently Start Download Available

- 7 Do one of the following:
 - Select Yes and press to start the download.
 - Select No and press to return to the previous menu.

Checking the GPS Information

Displays the GPS information on your radio, such as values of:

- Latitude
- Longitude
- Altitude
- Direction
- Velocity
- Horizontal Dilution of Precision (HDOP)
- Satellites
- Version

1

^{⊞ oK} to access the menu.

258

- ³ or to Radio Info and press work to select.
- 4 ▲ or ▼ to GPS Info and press ^{■ ok} to select.

or to the required item and press or to select.
 The display shows the requested GPS information.

See *Turning the Global Positioning System (GPS) On* or Off on page 127 for details on GPS.

259

Accessories



Authorized Accessories List

Antennas

- VHF, 136 144 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4006_)
- VHF, 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4007_)
- VHF, 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4008_)
- VHF, 162 174 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4009_)
- VHF, 132 174 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (HAD4022_)
- UHF, 403 430 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE4002_)
- UHF, 450 470 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE4003_)
- UHF, 470 527 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE4004_)
- UHF, 406 420 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (HAE4010_)
- UHF, 450 470 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (HAE4011_)

- UHF, 470 494 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (HAE4012_)
- UHF, 494 512 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (HAE4013_)
- UHF, 403 527 MHz, 2.0 dB Gain, Through-Hole Mount, Mini-U (HAE6022_)
- Combination GPS+RF, 806 941 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAF4029_)
- Combination GPS+RF, 806 941 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (HAF4030_)
- Combination GPS+RF, 806 941 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (HAF4032_)
- Combination GPS+RF, 806 941 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (HAF4033_)
- UHF, 445 470 MHz, 5.0 dB Gain, Through-Hole Moun, Mini-U (with base) (RAE4004_RB)
- UHF, 445 470 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (without base) (RAE4004_)
- Combination GPS/VHF, 136 144 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4214_)
- Combination GPS/VHF, 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4215_)
- Combination GPS/VHF, 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4216_)

262

Authorized Accessories List

- Combination GPS/VHF, 162 174 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4217_)
- Combination GPS/VHF, 146 172 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (RAD4218_)
- Combination GPS/UHF, 403 527 MHz, 2.0 dB Gain, Through-Hole Mount, Mini-U (HAE6019_)
- Combination GPS/UHF, 470 527 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE6020_)
- Combination GPS/UHF, 470 494 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (HAE6024_)
- Combination GPS/UHF, 494 512 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (HAE6026_)
- Combination GPS/UHF, 403 430 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (PMAE4030_)
- Combination GPS/UHF, 450 470 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (PMAE4031_)
- Combination GPS/UHF, 406 420 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (PMAE4032_)
- Combination GPS/UHF, 450 470 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (PMAE4033_)
- Combination GPS/UHF, 450 470 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (PMAE4034_)
- GPS, Through-Hole Mount (PMAN4000_)
- GPS, On Glass (PMAN4001_)
- GPS, Magnetic Mount (PMAN4002_)

- 800/900, 806 941 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAF4025_)
- 800/900, 806 941 MHz, 3.0dB Gain, Through-Hole Mount, Mini-U (HAF4026_)
- 800/900, 806 941 MHz, Stubby Antenna, Through-Hole Mount, Mini-U (HAF4013_)
- Combination GPS/GNSS/UHF, 350 400 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAD4102_)
- UHF, 350 400 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAD4107_)
- Combination GNSS (GPS/Galileo/QZSS/ GLONASS), UHF, 403 – 430 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAE4035_)
- Combination GNSS (GPS/Galileo/QZSS/ GLONASS), UHF, 406 – 420 MHz, 3.5 dB Gain, Through-Hole Mount, BNC (PMAE4036_)
- Combination GNSS (GPS/Galileo/QZSS/ GLONASS), UHF, 450 – 470 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAE4037_)
- Combination GNSS (GPS/Galileo/QZSS/ GLONASS), UHF, 450 – 470 MHz, 5 dB Gain, Through-Hole Mount, BNC (PMAE4038_)
- 800/900, 806 941 MHz, 1/4 Wave (HAF4019_)
- 800/900, 806 941 MHz, 3.0dB Gain (HAF4020_)

- 800/900, 806 941 MHz, 5.0dB Gain (HAF4023_)
- 800/900, 806 941 MHz, 5.0dB Gain, Through-Hole Mount, Mini-U (HAF4027_)

For use with base PMAN4003_, PMAN4004_ only:

- UHF, 403 430 MHz, 1/4 Wave (PMAE4039_)
- UHF, 450 470 MHz, 1/4 Wave (PMAE4041_)
- UHF, 406 420 MHz, 3.5 dB Gain (PMAE4040_)
- UHF, 450 470 MHz, 3.5 dB Gain (PMAE4042_)
- UHF, 450 470 MHz, 5.0 dB Gain (PMAE4043_)
- VHF, 162 174 MHz, 1/4 Wave (RAD4223_)
- VHF, 150.8 162 MHz, 1/4 Wave (RAD4224_)
- VHF, 146 150.8 MHz, 1/4 Wave (RAD4225_)
- VHF, 136 144 MHz, 1/4 Wave (RAD4226_)
- VHF, 146 172 MHz, 3.0 dB Gain (RAD4227_)
- UHF, 470 527 MHz, 1/4 Wave, Through-Hole Mount (HAE6030_)
- UHF, 403 527 MHz, 2.0 dB Gain, Through-Hole Mount (HAE6029_) (also for use with standard antenna bases)
- UHF, 470 494 MHz, 3.0 dB Gain, Through-Hole Mount (HAE6028_)
- UHF, 494 512 MHz, 3.0 dB Gain, Through-Hole Mount (HAE6027_)

Audio

- Telephone Style Handset (HMN4098_)
- Desktop Microphone (RMN5050_)
- Compact Microphone (RMN5052_)
- IMPRES 4-Way Navigation Keypad Microphone (RMN5127_)
- Heavy Duty Microphone with Enhanced Audio (RMN5053_)
- Visor Microphone with Enhanced Audio (RMN5054_)
- Operations Critical Wireless Earpiece, 12" Cable (NNTN8125_)
- Operations Critical Wireless Earpiece, 9.5" Cable (NNTN8126_)
- Operations Critical Wireless Push-to-Talk POD (NNTN8127_)
- HK200 Bluetooth Headset (89409N)
- Compact Microphone Replacement Cable (3075336B07)
- Heavy Duty/Keypad Microphone Replacement Cable (3075336B10)
- MOTOTRBO Bluetooth Accessory Kit with NA Power Supply (RLN6500_)

 Bluetooth Accessory Kit, SP, 9.5" Cable (NNTN8190_)

Cables

- Power Cable to Battery, 10-foot (3-metre) Cable, 15 amp (1 – 25 Watt) (HKN4137_)
- Power Cable to Battery, 10-foot (3-metre) Cable, 20 amp (1 – 45 Watt) (HKN4191_)
- Power Cable to Battery, 20-foot (6-metre) Cable, 20 amp (1 – 45 Watt) (HKN4192_)
- Mobile and Repeater Rear Accessory Connector Universal Cable (PMKN4018_)
- Ignition Sense Cable (RKN4136_)
- Mobile Mic Extension Cable, 10 feet (PMKN4033_)
- Mobile Mic Extension Cable, 20 feet (PMKN4034_)
- Mobile Front (MMP) Programming Cable (HKN6184_)
- MAP Programming Cable (PMKN4010_)
- MAP Programming and Test Cable (PMKN4016_)
- Remote Mount (3-metre) Cable (PMKN4143_)
- Remote Mount (5-metre) Cable (PMKN4144_)

Desktop Accessories

- Radio Power Cable for GPN6145 (GKN6266_)
- Desktop Tray without Speaker (GLN7318_)
- Desktop Tray with Speaker (RSN4005_)
- Switchmode Power Supply (1 25 Watt Models) (CE marked) (GPN6145_)
- Power Supply and Cable (HPN4007_)
- Hardware Kit for Rear Accessory Connector (PMLN5072_)
- US Line Cord (3060665A04)
- Euro Line Cord (3060665A05)
- Power Cable, UK Plug (Straight) (3002695B05)

Mounting Kits

- In Dash (DIN) Mounting Kit (RLN6465_)
- Low Profile Trunnion Kit (RLN6466_)
- High Profile Trunnion Kit (RLN6467_)
- Key Lock Trunnion Kit (RLN6468_)
- Low Profile Trunnion Bag (RLN6469_)
- Remote Mount Transceiver Interface (PMLN6402_)
- Remote Mount Control Head Interface (PMLN6403_)

List

Accessories

Authorized

Speakers

- 13-Watt External Speaker (RSN4002_)
- 7.5-Watt External Speaker (RSN4003_)
- 5-Watt External Speaker (RSN4004_)

Miscellaneous Accessories

- PL259/Mini-U Antenna Adapter, 8-foot (2.4-metre) Cable (HKN9557_)
- Microphone Hang Up Clip (All Microphones) (HLN9073_)
- Universal Microphone Hang Up Clip (All Microphones) (HLN9414_)
- Push Button PTT (RLN5926_)
- Emergency Footswitch (RLN5929_)
- IMPRES Mobile MMP Non-PC Adapter (PMKN4072_)
- IMPRES Mobile MAP Non-PC Adapter (PMKN4070_)
- Surge Protector, Tower Mount Kit (DQT1)
- Surge Protector, Coax Protector Bulkhead (DSISB50LNC2MA)
- Generic Option Board (PMLN5718_S)

Maritime Radio Use in the VHF Frequency Range

Special Channel Assignments

Emergency Channel

If you are in imminent and grave danger at sea and require emergency assistance, use VHF Channel 16 to send a distress call to nearby vessels and the United States Coast Guard. Transmit the following information, in this order:

- 1 "MAYDAY, MAYDAY, MAYDAY."
- 2 "THIS IS _____, CALL SIGN _____." State the name of the vessel in distress 3 times, followed by the call sign or other identification of the vessel, stated 3 times.
- **3** Repeat "MAYDAY" and the name of the vessel.
- 4 "WE ARE LOCATED AT

." State the position of the vessel in distress, using any information that will help responders to locate you, e.g.:

- · latitude and longitude
- bearing (state whether you are using true or magnetic north)

- distance to a well-known landmark
- vessel course, speed or destination
- **5** State the nature of the distress.
- 6 Specify what kind of assistance you need.
- 7 State the number of persons on board and the number needing medical attention, if any.
- 8 Mention any other information that would be helpful to responders, such as type of vessel, vessel length and/or tonnage, hull color, etc.
- 9 "OVER."
- 10 Wait for a response.
- 11 If you do not receive an immediate response, remain by the radio and repeat the transmission at intervals until you receive a response. Be prepared to follow any instructions given to you.

Non-Commercial Call Channel

For non-commercial transmissions, such as fishing reports, rendezvous arrangements, repair scheduling, or berthing information, use **VHF Channel 9**.

Operating Frequency Requirements

A radio designated for shipboard use must comply with Federal Communications Commission Rule Part 80 as follows:

English

- on ships subject to Part II of Title III of the Communications Act, the radio must be capable of operating on the 156.800 MHz frequency.
- on ships subject to the Safety Convention, the radio must be capable of operating:
 - in the simplex mode on the ship station transmitting frequencies specified in the 156.025 – 157.425 MHz frequency band, and
 - in the semiduplex mode on the two frequency channels specified in the table below.

Note:

Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 cannot be lawfully used by the general public in US waters.

Additional information about operating requirements in the Maritime Services can be obtained from the full text of FCC Rule Part 80 and from the US Coast Guard.

Table 1: VHF Marine Channel List

Channel	Frequency (MHz)		
Number	Transmit	Receive	

1	156.050	160.550
2	156.100	160.700
*	156.150	160.750
4	156.200	160.800
5	156.250	160.850
6	156.300	-
7	156.350	160.950
8	156.400	-
9	156.450	156.450
10	156.500	156.500
11	156.550	156.550
12	156.600	156.600
13**	156.650	156.650
14	156.700	156.700
15**	156.750	156.750
16	156.800	156.800
17**	156.850	156.850

18	156.900	161.500
19	156.950	161.550
20	157.000	161.600
*	157.050	161.650
22	157.100	161.700
*	157.150	161.750
24	157.200	161.800
25	157.250	161.850
26	157.300	161.950
27	157.350	161.950
28	157.400	162.000
60	156.025	160.625
*	156.075	160.675
62	156.125	160.725
63	156.175	160.775
*	156.225	160.825
65	156.275	160.875

66	156.325	160.925
67**	156.375	156.375
68	156.425	156.425
69	156.475	156.475
71	156.575	156.575
72	156.625	_
73	156.675	156.675
74	156.725	156.725
75	***	***
76	***	***
77**	156.875	_
78	156.925	161.525
79	156.975	161.575
80	157.025	161.025
*	157.025	161.675
*	157.125	161.725
*	157.175	161.775

Maritime Radio Use in the VHF Frequency Range

268

157.225	161.825
157.275	161.875
157.325	161.925
157.375	161.975
157.425	162.025
	157.275 157.325 157.375

Note:

* Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 cannot be **lawfully used** by the general public in US waters.

** Low power (1 W) only.

*** Guard band.

Note: A – in the Receive column indicates that the channel is transmit only.

Declaration of Compliance for the Use of Distress and Safety Frequencies

The radio equipment does not employ a modulation other than the internationally adopted modulation for maritime use when it operates on the distress and safety frequencies specified in RSS-182 Section 7.3. Technical Parameters for Interfacing External Data Sources

	RS232	USB	SB9600
Input Voltage (Volts Peak-to- peak)	18V	3.6V	5V
Max Data Rate	28 kb/s	12 Mb/s	9.6 kb/s
Impedance	5k ohm	90 ohm	120 ohm

Limited Warranty

MOTOROLA COMMUNICATION PRODUCTS

I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS, INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

Digital Mobile Radios	24 Months
Product Accessories	12 Months

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA.

Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

270

II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES, IMPLIED WARRANTIES. INCLUDING WITHOUT LIMITATION. IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME. INCONVENIENCE. COMMERCIAL LOSS. LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA at 1-800-927-2744 US/Canada.

V. WHAT THIS WARRANTY DOES NOT COVER:

- 1 Defects or damage resulting from use of the Product in other than its normal and customary manner.
- 2 Defects or damage from misuse, accident, water, or neglect.
- **3** Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- 4 Breakage or damage to antennas unless caused directly by defects in material workmanship.
- 5 A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA's normal warranty inspection and testing of the Product to verify any warranty claim.
- 6 Product which has had the serial number removed or made illegible.
- 7 Rechargeable batteries if:

- any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
- the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- 8 Freight costs to the repair depot.
- **9** A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- **10** Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- 11 Normal and customary wear and tear.

VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against

the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim,
- 2 that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise, and
- 3 should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software, MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

Enalish

VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, U.S.A.

274



Motorola Solutions, Inc. 1303 East Algonquin Road Schaumburg, Illinois 60196 U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2011 – 2014 Motorola Solutions, Inc. All rights reserved. October 2014 www.motorolasolutions.com/mototrbo

